



Order	Job/Part	Q'ty	Remarks
	Disassembling the throttle body		Disassemble the parts in the order listed.
①	Throttle position sensor	1	
②	Fast idle plunger	1	
③	Pressur regulator	1	
④	Intake air pressure sensor	1	
⑤	Fuel injection pipe	1	
⑥	Fuel distributor	1	
⑦	Injector	2	
⑧	Throttle body	1	
⑨	Sub-wire harness		
			CAUTION
			The throttle bodies should not be disassembled unnecessarily.
			For assembly, reverse the removal procedure.