



EAS00185

ADJUSTING THE HEADLIGHT BEAMS

1. Adjust:
 - headlight beam (vertically)

- a. To adjust the height of headlight, use the No.2 Phillips screwdriver ① and then adjust the headlight height by inserting it from the downside.

- b. Turn the adjusting screw in direction ① or ②.

Direction (a)	Headlight beam is raised.
Direction (b)	Headlight beam is lowered.

2. Adjust:
- headlight beam (horizontally)

- a. Turn the headlight adjusting knob ② in direction ① or ②.

Direction (a)	Headlight beam moves to the right.
Direction (b)	Headlight beam moves to the left.