



Ref No	Part No	Description
01	5PS-11101-00-00	Cylinder Head Assy
02	3LD-11133-10-00	• . Guide, Valve 1
03	3LD-11134-10-00	• . Guide, Valve 2
04	93440-10109-00	• . Circlip
05	91808-16023-00	• . Pin, Dowel
06	90340-18101-00	• . Plug, Straight Screw
07	90105-06153-00	• . Bolt, Washer Based
08	95617-08625-00	• . Bolt, Stud
09	90338-10150-00	• . Plug
10	94701-00241-00	Plug, Spark
10	94701-00242-00	Plug, Spark
11	90201-103M4-00	Washer, Plate
12	90179-10414-00	Nut
13	91317-06150-00	Bolt
14	95024-08012-00	Bolt, Flange
15	90430-08119-00	Gasket
16	5PS-11181-00-00	Gasket, Cylinder Head 1
17	5PS-11190-00-00	Cover, Cylinder Head 1
18	5PS-11165-00-00	• . Plate, Breather
19	5PS-11169-00-00	• . Gasket, Breather Cover
20	90149-05009-00	• . Screw
21	5PS-14899-00-00	Cap, Case
22	5PS-1482K-00-00	Plate
23	5PS-14890-00-00	Reed Valve Assy
24	95027-06020-00	Bolt, Flange
25	5PS-11193-00-00	Gasket, Head Cover 1
26	90109-066F0-00	Bolt
27	90109-06044-00	Bolt
28	90109-06045-00	Bolt
29	4KG-1111G-00-00	Rubber, Mount 1

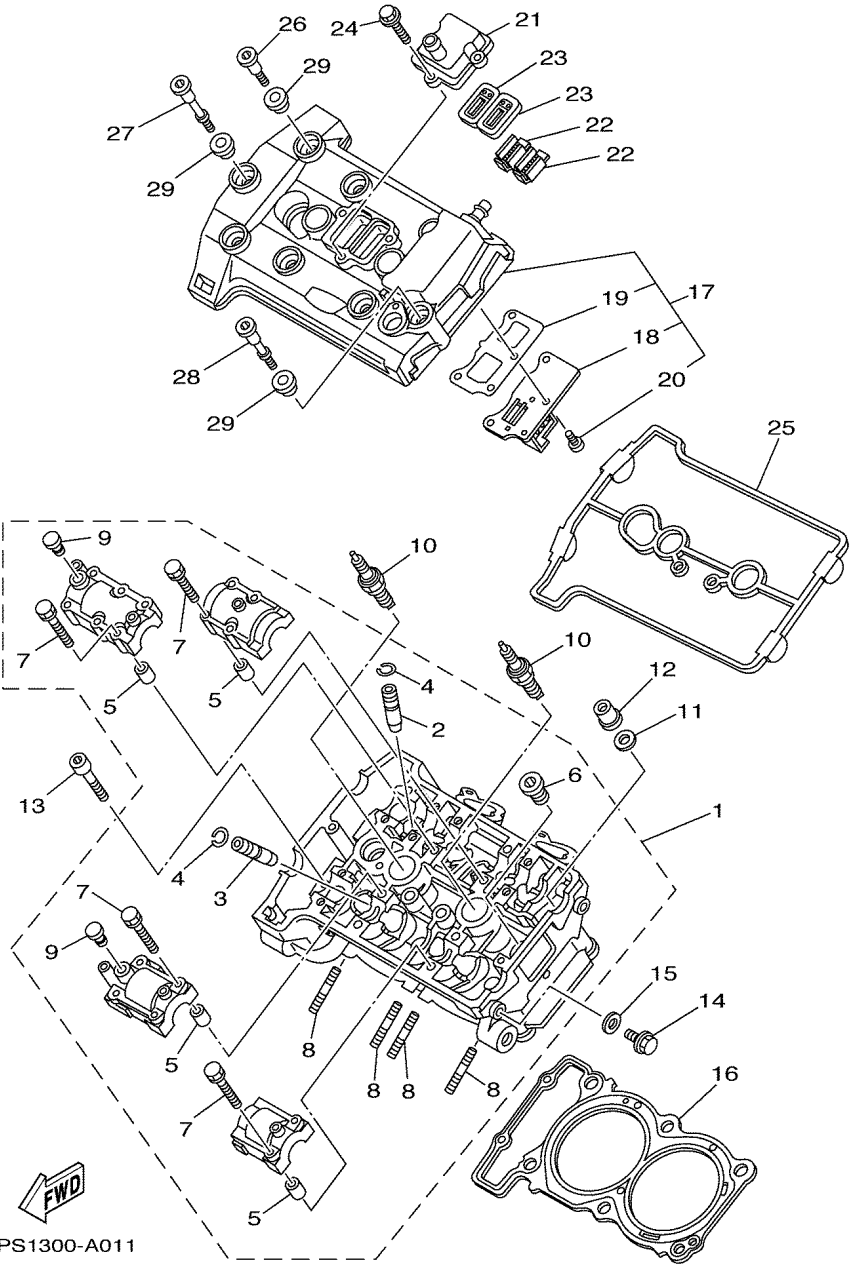


Ref No	Part No	Description
01	5PS-11311-00-00	Cylinder 1
02	5PS-11351-00-00	Gasket, Cylinder
03	99530-14016-00	Pin, Dowel
04	90153-06029-00	Screw, Hexagon
05	90430-06014-00	Gasket

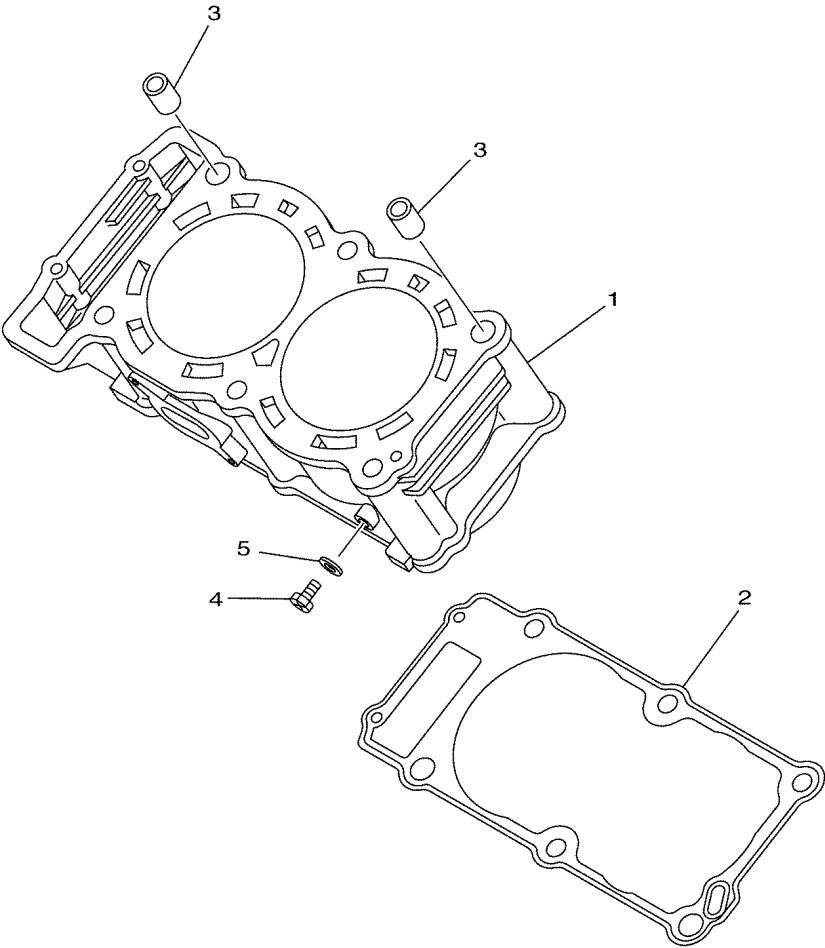


5PS1300-A021

Ref No	Part No	Description
01	5PS-11400-00-00	Crankshaft Assy
02	3LD-11416-00-00	Plane Bearing, Crankshaft 1
02	3LD-11416-10-00	Plane Bearing, Crankshaft 1
02	3LD-11416-20-00	Plane Bearing, Crankshaft 1
02	3LD-11416-30-00	Plane Bearing, Crankshaft 1
02	3LD-11416-40-00	Plane Bearing, Crankshaft 1
02	3LD-11416-50-00	Plane Bearing, Crankshaft 1
02	3LD-11416-60-00	Plane Bearing, Crankshaft 1
03	5PS-11631-00-00	Piston (std)
04	5BE-11603-00-00	Piston Ring Set (std)
05	5PS-11633-00-00	Pin, Piston
06	93450-22146-00	Circlip
07	5PS-11650-00-00	Connecting Rod Assy
08	3LD-11654-00-00	• . Bolt, Connecting Rod
09	90179-09379-00	• . Nut
10	3LD-11656-00-00	Plane Bearing, Connecting Rod
10	3LD-11656-10-00	Plane Bearing, Connecting Rod
10	3LD-11656-20-00	Plane Bearing, Connecting Rod
10	3LD-11656-30-00	Plane Bearing, Connecting Rod
11	4NX-11500-01-00	Balancer Assy
12	4NX-11510-01-00	Balancer Assy, 2
13	3LD-11583-00-00	Shaft, Balancer 1
14	3LD-11584-00-00	Shaft, Balancer 2
15	93210-30660-00	O-ring
16	90280-05029-00	Key, Woodruff
17	90105-12584-00	Bolt, Washer Based
18	90201-121H0-00	Washer, Plate

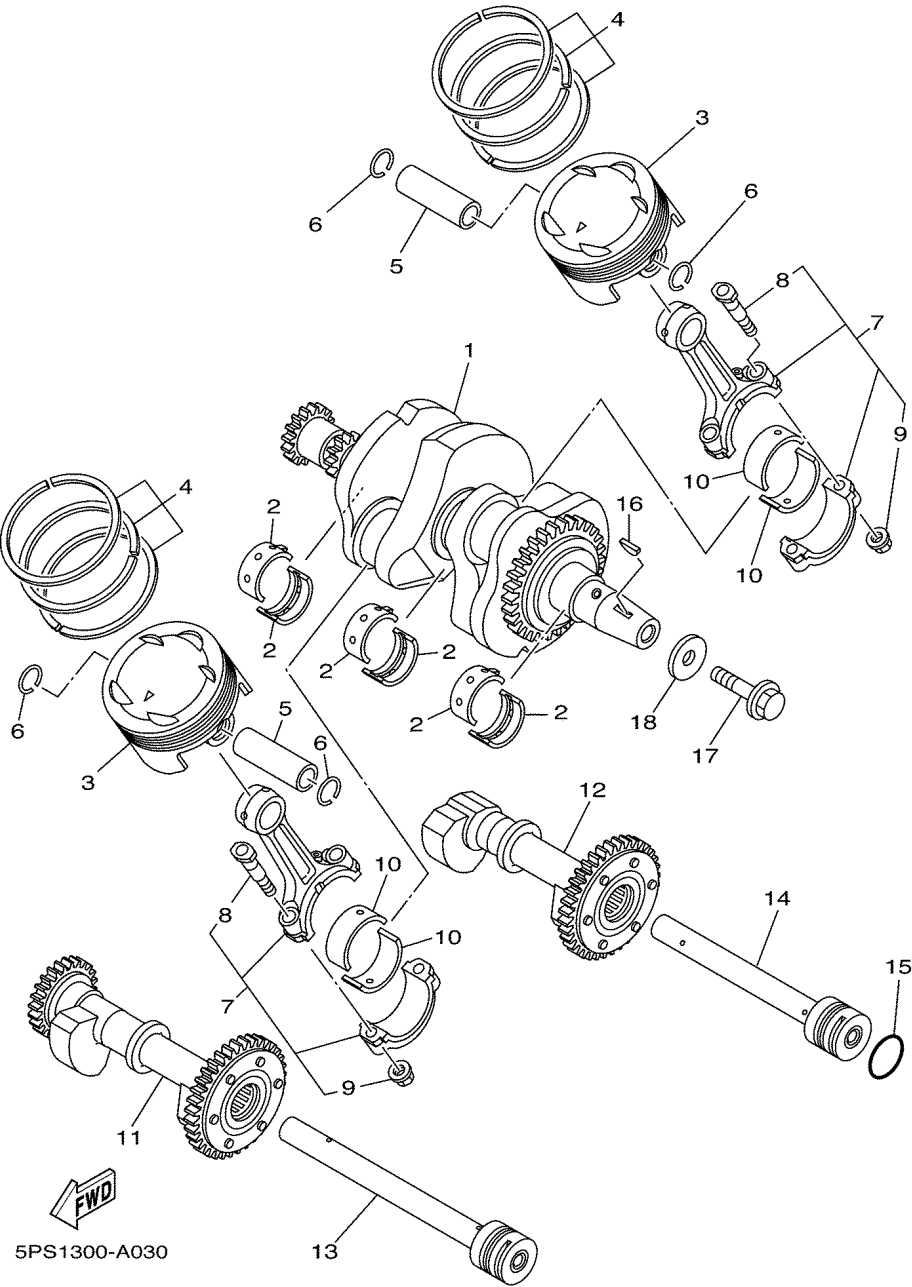


Ref No	Part No	Description
01	3LD-12111-02-00	Valve, Intake
02	3LD-12112-02-00	Valve, Intake 2
03	5PS-12121-00-00	Valve, Exhaust
04	1WG-12116-00-00	Seat, Valve Spring
05	3LD-12113-00-00	Spring, Valve Inner
06	3LD-12117-00-00	Retainer, Valve Spring
07	3LD-12118-00-00	Cotter, Valve
08	51Y-12119-00-00	Seal, Valve Stem
09	1WG-12153-21-00	Lifter, Valve
09	1WG-12153-31-00	Lifter, Valve
10	3LD-12168-00-00	Pad, Adjusting
10	3LD-12168-20-00	Pad, Adjusting
10	3LD-12168-40-00	Pad, Adjusting
10	3LD-12168-60-00	Pad, Adjusting
10	3LD-12168-80-00	Pad, Adjusting
10	3LD-12168-A0-00	Pad, Adjusting
10	3LD-12168-F0-00	Pad, Adjusting
10	3LD-12168-H1-00	Pad, Adjusting
10	3LD-12168-K1-00	Pad, Adjusting
10	3LD-12168-M1-00	Pad, Adjusting
10	3LD-12168-R1-00	Pad, Adjusting
10	3LD-12168-U1-00	Pad, Adjusting
10	3LD-12168-W1-00	Pad, Adjusting
10	3LD-12168-Y1-00	Pad, Adjusting
10	3LD-12169-11-00	Pad, Adjusting
10	3LD-12169-31-00	Pad, Adjusting
10	3LD-12169-50-00	Pad, Adjusting
10	3LD-12169-70-00	Pad, Adjusting
10	3LD-12169-90-00	Pad, Adjusting
10	3LD-12169-E0-00	Pad, Adjusting
10	3LD-12169-G0-00	Pad, Adjusting
10	3LD-12169-J0-00	Pad, Adjusting
10	3LD-12169-L0-00	Pad, Adjusting
10	3LD-12169-N0-00	Pad, Adjusting
10	3LD-12169-T0-00	Pad, Adjusting

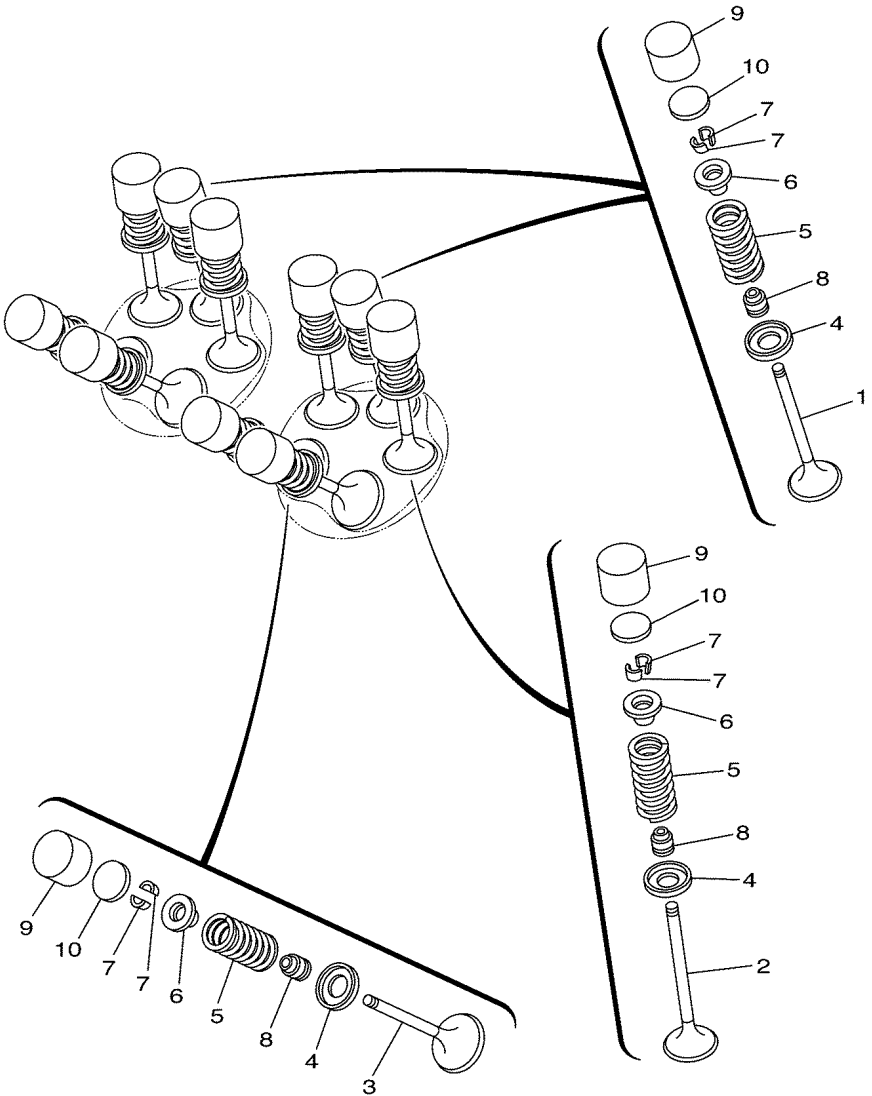


5PS1300-A040


Ref No	Part No	Description
01	5PS-12171-00-00	Camshaft 1
02	5PS-12180-00-00	Camshaft Assy 2
03	3LD-12176-00-00	Sprocket, Cam Chain
04	90105-07004-00	Bolt, Washer Based
05	94591-40138-00	Chain
06	5PS-12210-10-00	Tensioner Assy, Cam Chain
07	5JW-12213-00-00	Gasket, Tensioner Case
08	91314-06020-00	Bolt
09	3LD-12251-00-00	Damper, Chain 1
10	5PS-12252-00-00	Damper, Chain 2
11	3LD-12247-00-00	Shaft, Tensioner
12	5BE-12241-00-00	Guide, Stopper 2

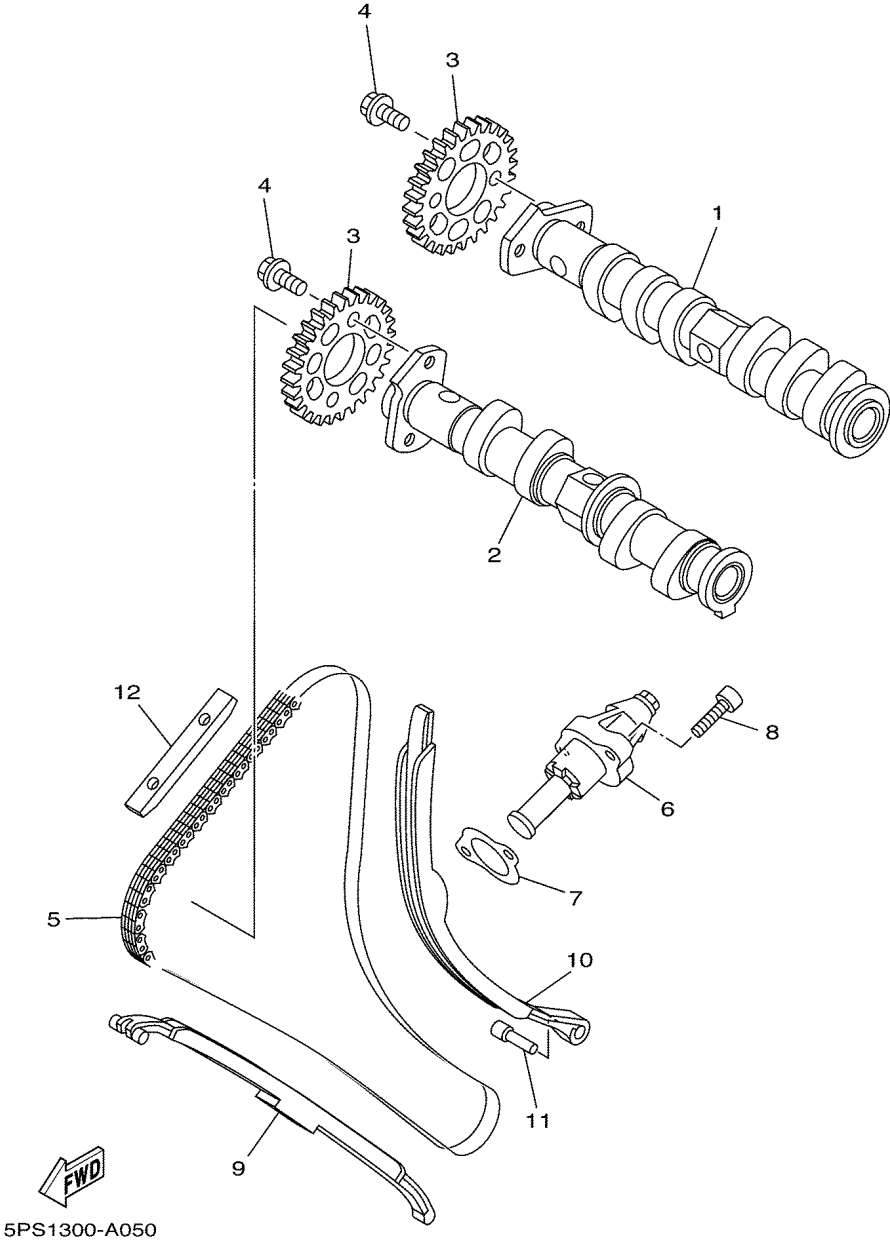


Ref No	Part No	Description
01	5PS-12420-00-00	Water Pump Assy
02	3LD-12439-00-00	• . O-ring
03	91314-06020-00	• . Bolt
04	99009-12400-00	• . Circlip
05	95024-06012-00	• . Bolt, Flange
06	90430-06014-00	• . Gasket
07	93210-33133-00	O-ring
08	3VD-12459-00-00	Gear, Impeller Shaft
09	90201-127E1-00	Washer, Plate
10	91314-06030-00	Bolt
11	91314-06045-00	Bolt
12	91314-06060-00	Bolt
13	3LD-12481-00-00	Pipe 1
14	93210-21190-00	O-ring
15	93210-357A2-00	O-ring
16	5PS-12469-00-00	Joint 1
17	91314-06016-00	Bolt

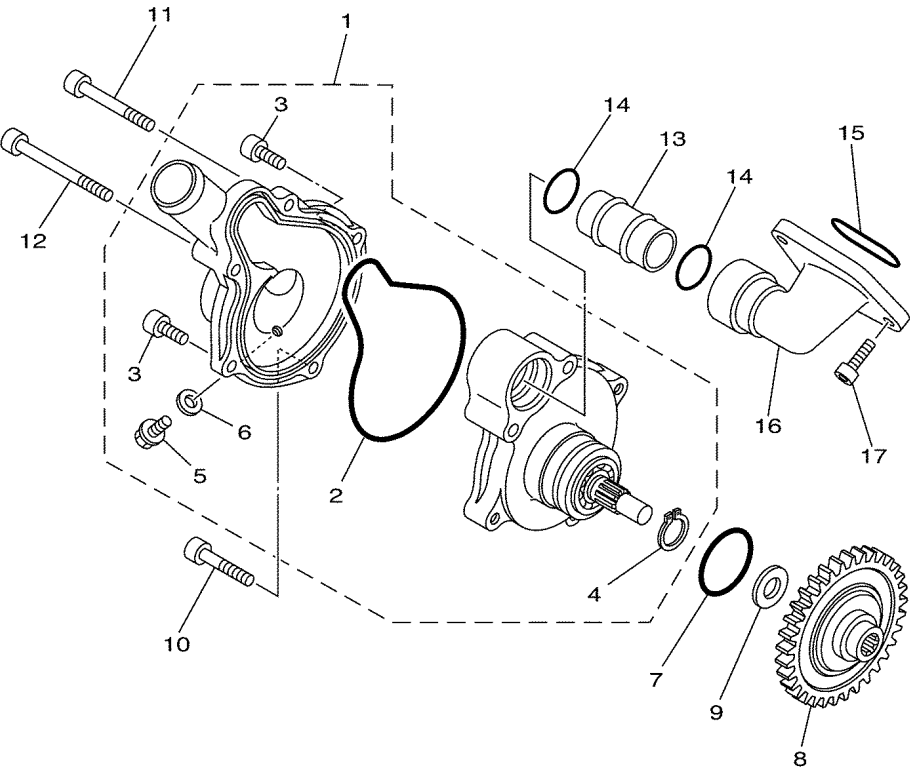

Ref No	Part No	Description
01	5PS-12461-00-00	Radiator Assy
02	5PS-12405-00-00	Blower Assy
03	90119-06044-00	Bolt, With Washer
04	1AA-12535-00-00	Plate
05	4FL-12462-00-00	Cap, Radiator
06	1KT-12437-00-00	Stopper
07	97007-05012-00	Bolt
08	92907-05600-00	Washer, Plate
09	90467-10038-00	Clip
10	5PS-12578-00-00	Hose 3
11	90450-38040-00	Hose Clamp Assy
12	5PS-12467-00-00	Cover, Radiator
13	1UF-12435-00-00	Gasket
14	90111-06037-00	Bolt, hex. Socket Button
15	90480-15363-00	Grommet
16	90387-0614M-00	Collar
17	90387-0714B-00	Collar
18	95807-06025-00	Bolt, Flange
19	95807-06030-00	Bolt, Flange
20	91317-06025-00	Bolt
21	90201-06071-00	Washer, Plate
22	5PS-12465-00-00	Damper, Radiator
23	4NX-12482-00-00	Pipe 2
24	93210-18417-00	O-ring
25	91317-06016-00	Bolt
26	5PS-12576-00-00	Hose 1
27	90450-32015-00	Hose Clamp Assy
28	1AE-12410-00-00	Thermostat Assy
29	5PS-12417-00-00	Housing, Thermostat
30	4NX-12413-00-00	Cover, Thermostat
31	93210-49046-00	O-ring
32	95027-06020-00	Bolt, Flange
33	95027-06025-00	Bolt, Flange
34	5PS-1244E-00-00	Bracket 1
35	95027-06010-00	Bolt, Flange
36	5PS-1244F-00-00	Bracket 2
37	5PS-12579-00-00	Hose 4

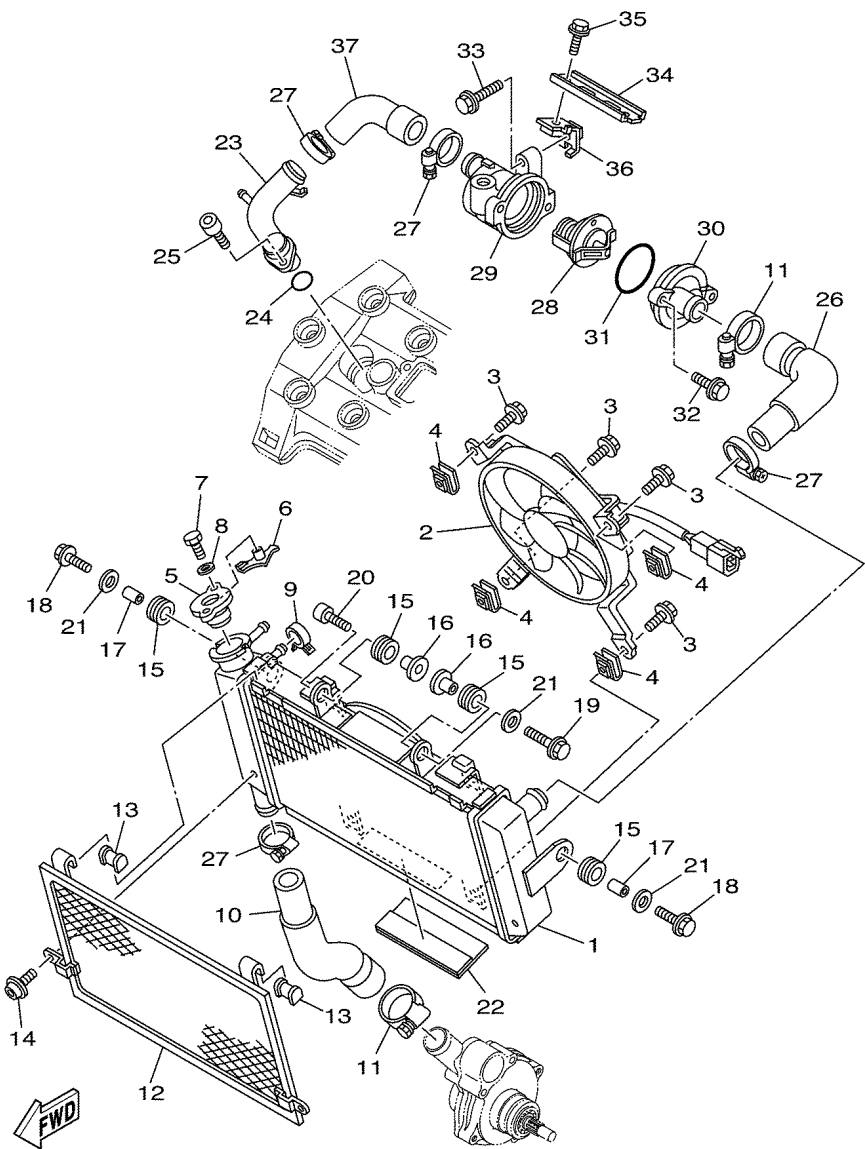


5PS1300-A070

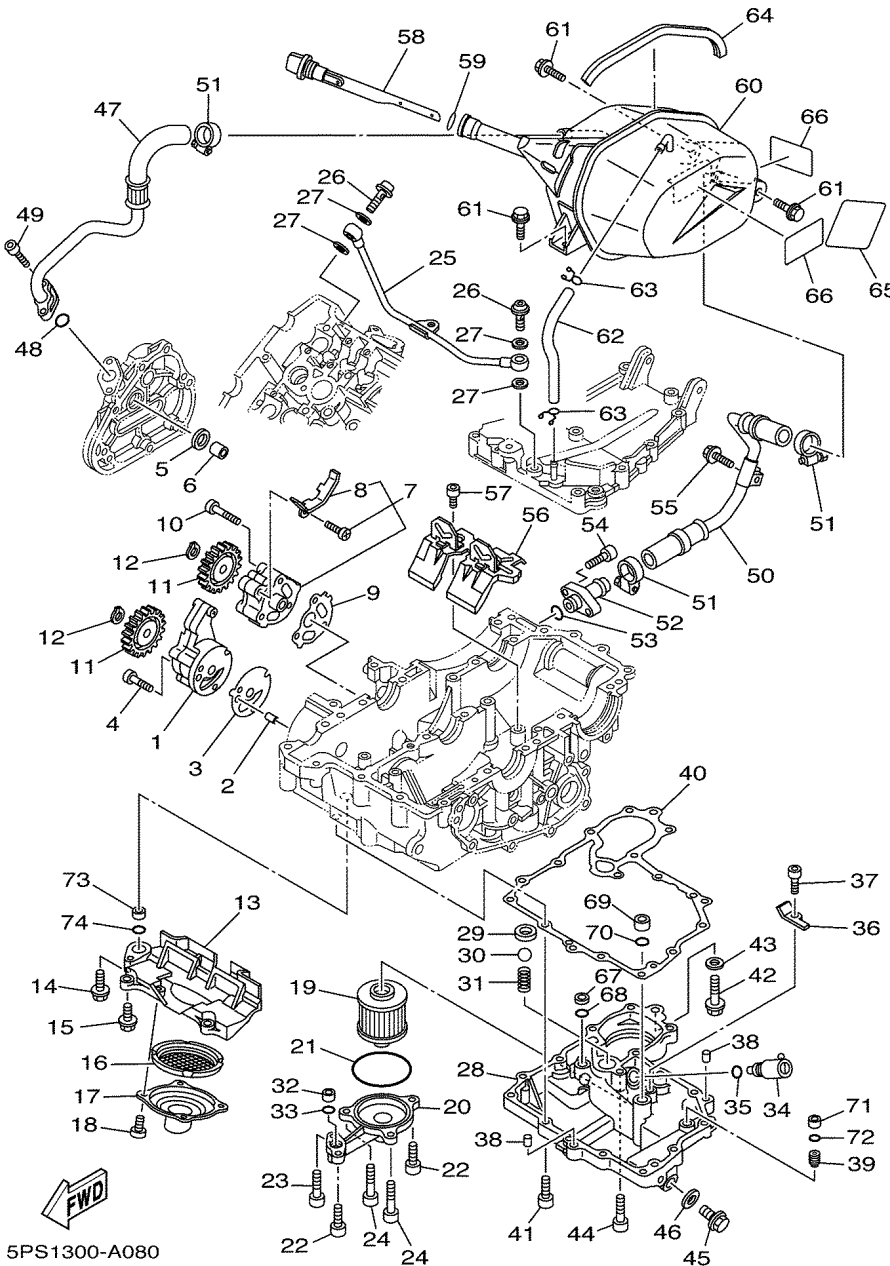

OIL PUMP


Ref No	Part No	Description
01	3LD-13300-00-00	Oil Pump Assy
02	99530-08012-00	Pin, Dowel
03	5PS-13329-00-00	Gasket, Pump Cover
04	98507-06045-00	Screw, Pan Head
05	90430-14131-00	Gasket
06	90387-120W5-00	Collar
07	4NX-13303-00-00	Oil Pump Assy, 2
08	3LD-13371-00-00	• . Plate
09	3LD-13339-00-00	Gasket, Pump Cover
10	98507-06035-00	Screw, Pan Head
11	3VD-13325-00-00	Gear, Pump Driven
12	99009-11400-00	Circlip
13	3VD-13412-00-00	Housing, Strainer
14	95027-06025-00	Bolt, Flange
15	95027-06020-00	Bolt, Flange
16	3VD-13415-00-00	Seal, Oil Strainer
17	5PS-13411-00-00	Strainer, Oil
18	90110-06018-00	Bolt, Hexagon Socket Head
19	5JX-13440-00-00	Element Assy, Oil Cleaner
20	5PS-13447-00-00	Cover, Oil Element
21	93210-64297-00	O-ring
22	91314-06020-00	Bolt
23	91314-06030-00	Bolt
24	91314-06040-00	Bolt
25	5PS-13161-00-00	Pipe, Delivery 1
26	90401-10002-00	Bolt, Union
27	90430-10188-00	Gasket
28	5PS-13417-00-00	Cover, Strainer
29	3LD-13113-00-00	Seat, Check Ball
30	93505-08030-00	Ball
31	90501-104F9-00	Spring, Compression
32	90387-106W6-00	Collar
33	93210-12790-00	O-ring
34	11H-13490-00-00	Relief Valve Assy
35	93210-10096-00	O-ring
36	3LD-13151-00-00	Stay
37	90110-06018-00	Bolt, Hexagon Socket Head
38	99530-08016-00	Pin, Dowel
39	4H7-15138-00-00	Nozzle 1
40	5PS-13414-01-00	Gasket, Strainer Cover
41	91314-06025-00	Bolt
42	95024-10040-00	Bolt, Flange
43	90430-10188-00	Gasket
44	91314-06035-00	Bolt
45	90340-14132-00	Plug, Straight Screw
46	214-11198-01-00	Gasket
47	5PS-13464-00-00	Hose, Oil 1
48	93210-13657-00	O-ring
49	91314-06020-00	Bolt
50	5PS-13465-00-00	Hose, Oil 2
51	90450-25037-00	Hose Clamp Assy
52	3VD-13416-00-00	Pipe, Oil 1
53	93210-13657-00	O-ring
54	90110-06093-00	Bolt, Hexagon Socket Head
55	90109-06056-00	Bolt

Ref No	Part No	Description
56	5PS-13317-00-00	Plate, Baffle
57	90110-06018-00	Bolt, Hexagon Socket Head
58	5PS-21761-00-00	Gauge, Level
59	93210-21190-00	O-ring
60	5PS-21750-00-00	Oil Tank Assy
61	95827-06014-00	Bolt, Flange
62	90445-11026-00	Hose
63	90467-10008-00	Clip
64	5JX-24188-00-00	Mold, Fuel Tank
65	5BM-21652-00-00	Protector
66	5BM-21268-00-00	Seal
67	90387-085N0-00	Collar
68	93210-10096-00	O-ring
69	90387-106W6-00	Collar
70	93210-12790-00	O-ring
71	90387-06761-00	Collar
72	93210-07135-00	O-ring
73	90387-130W6-00	Collar
74	93210-15566-00	O-ring

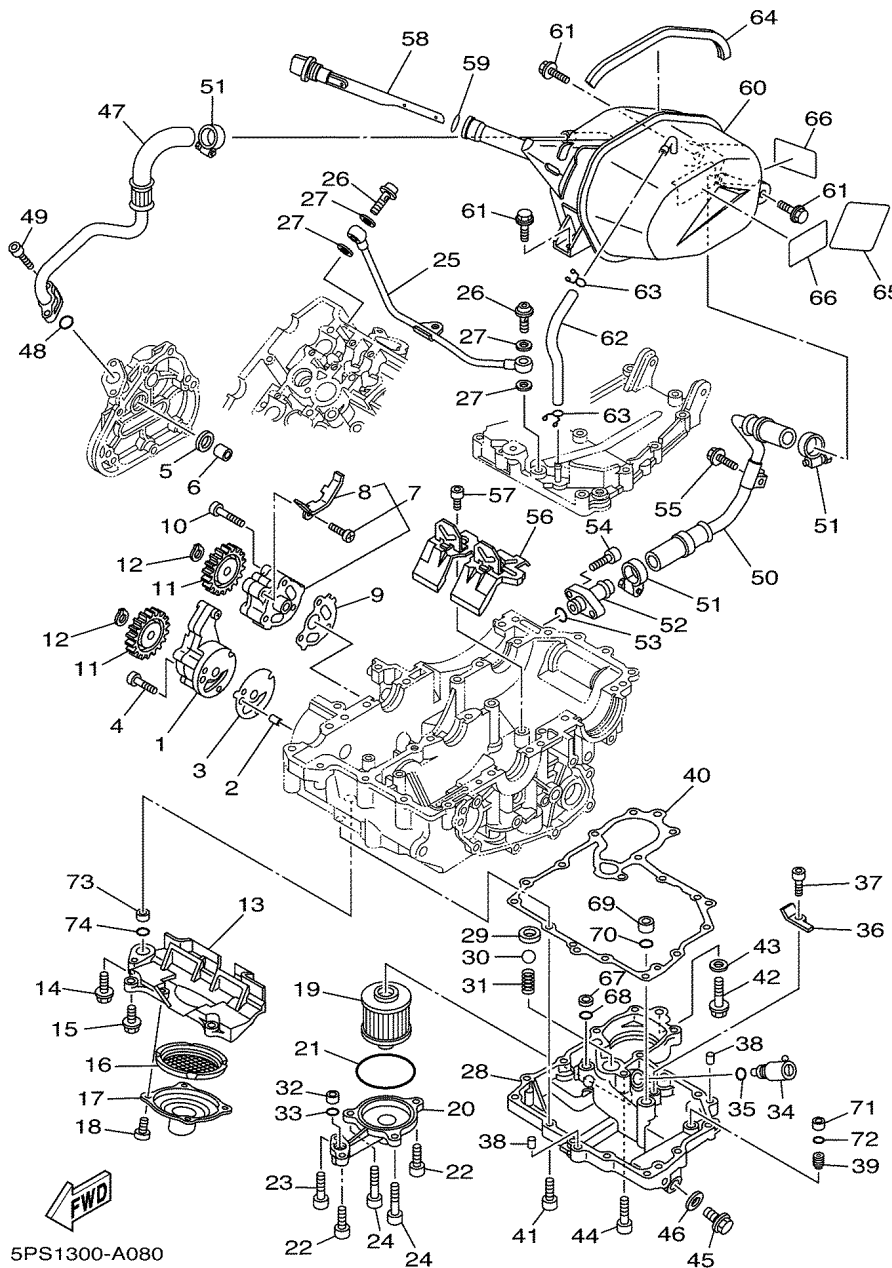


INTAKE

Ref No	Part No	Description
01	5PS-13586-00-00	Joint, Carburetor 1
02	91317-06020-00	Bolt
03	90450-63001-00	Hose Clamp Assy
04	5PS-14414-00-00	Stay 2
05	95027-06010-00	Bolt, Flange
06	5PS-14411-00-00	Case, Air Cleaner 1
07	5PS-14421-00-00	Case, Air Cleaner 2
08	5PS-14451-00-00	Element, Air Cleaner
09	5PS-14452-00-00	Seal
10	5PS-14453-00-00	Joint, Air Cleaner 1
11	5PS-14463-00-00	Joint, Air Cleaner 2
12	5PS-14545-00-00	Diaphragm
13	97707-50020-00	Screw, Tapping
14	5PS-14435-00-00	Grommet
15	5PS-14264-00-00	Collar
16	5PS-14419-00-00	Pipe
17	5PS-1410H-00-00	Fuel Cut Solenoid Valve
18	98907-05012-00	Screw, Bind
19	5PS-14148-00-00	Pipe
20	5PS-14552-00-00	Valve, Check
21	90445-08010-00	Hose
22	5PS-1446E-00-00	Tank, Surge
23	98907-05016-00	Screw, Bind
24	90462-05005-00	Clamp
25	4BH-83591-00-00	Thermo Unit
26	90430-12202-00	Gasket
27	5PS-82386-00-00	Extension, Wire Harness
28	5Y9-12491-00-00	Clamp 1
29	90450-52002-00	Hose Clamp Assy
30	90445-08024-00	Hose
31	5PS-14568-00-00	Joint
32	90119-06214-00	Bolt, With Washer
33	5PS-1443E-00-00	Pipe, Drain
34	4X7-2149Y-00-00	Filter Assy
35	90445-116H6-00	Hose
36	90467-11106-00	Clip
37	5PS-11166-00-00	Pipe, Breather 1
38	90467-14015-00	Clip
39	90468-08104-00	Clip
40	5PS-14881-00-00	Hose, Bend 1
41	90467-17003-00	Clip
42	5PS-14840-00-00	Air Cut Valve Assy
43	5PS-14834-00-00	Stay
44	95027-06010-00	Bolt, Flange
45	5PS-14882-00-00	Hose, Bend 2
46	90467-20086-00	Clip
47	90465-10098-00	Clamp

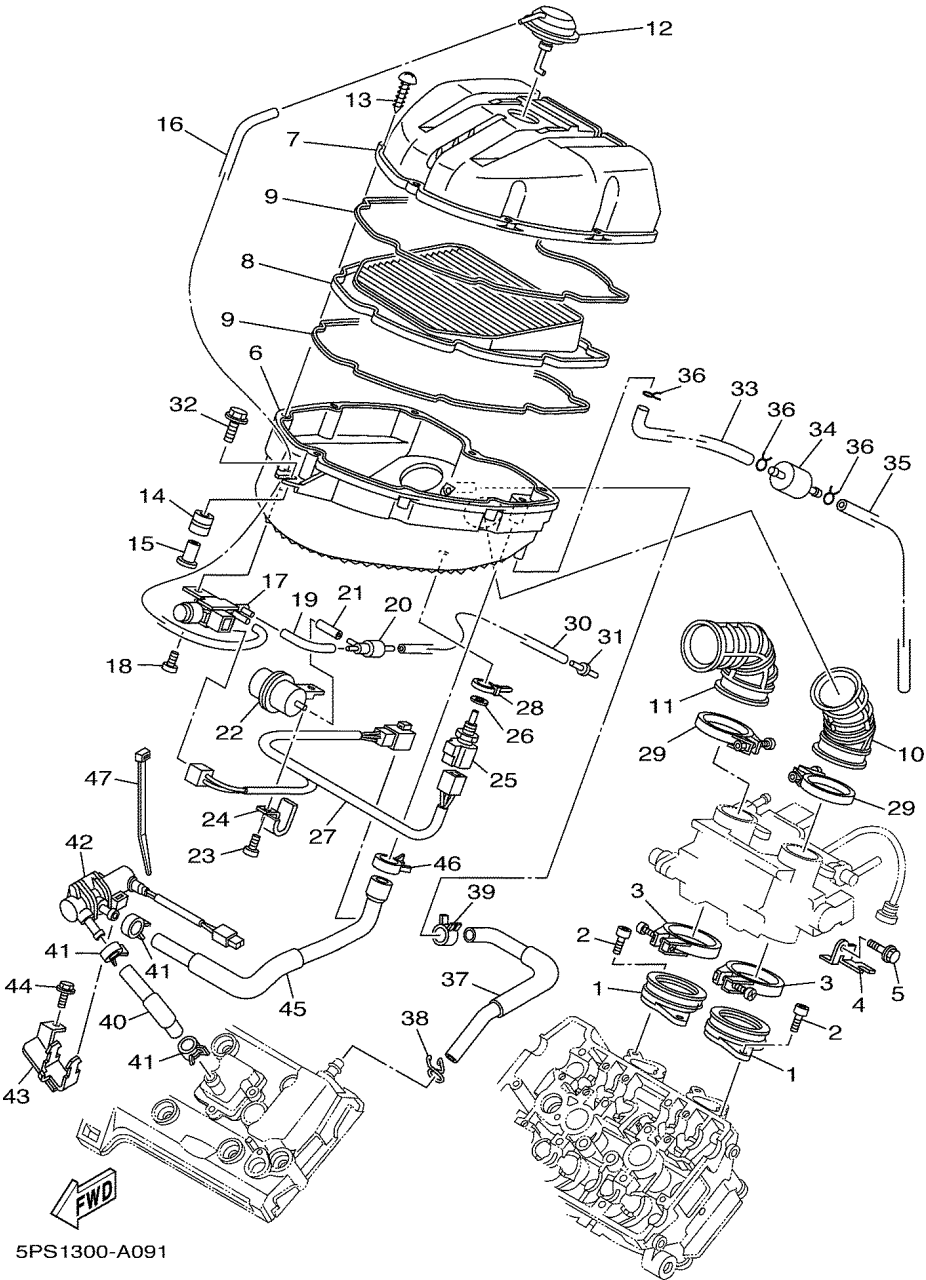


Ref No	Part No	Description
01	5PS-13750-11-00	Throttle Body Assy
02	5Y9-12491-00-00	• . Clamp 1
03	5JW-14589-00-00	• . Spring
04	5DM-14936-00-00	• . Seat, Spring
05	98507-05030-00	• . Screw, Pan Head
06	98507-05014-00	• . Screw, Pan Head
07	8CC-14216-10-00	• . Screw
08	5PS-85885-00-00	• . Throttle Sensor Assy
09	98507-05010-00	• . Screw, Pan Head
10	5PS-13938-00-00	• . Pipe
11	90467-11090-00	• . Clip
12	5PS-1243E-00-00	• . Hose 2
13	98507-05010-00	• . Screw, Pan Head
14	5PS-13906-00-00	• . Regulator, Pressure
15	5PS-1243A-00-00	• . Hose 1
16	90467-09037-00	• . Clip
17	5PS-12881-00-00	• . Pipe,fuel Injection 1
18	90430-09002-00	• . Gasket
19	5PS-13761-00-00	• . Injector Assy
20	5PS-14996-00-00	• . Pipe
21	98507-06045-00	• . Screw, Pan Head
22	5PS-82509-01-00	• . Wire, Sub Lead
23	5PS-82380-00-00	• . Sensor, Pressure
24	92507-06014-00	• . Screw, Pan Head
25	5PS-14349-01-00	• . Pipe
26	5PS-14987-00-00	• . Hose
27	68V-24376-00-00	• . Pipe, Joint 1
28	5JW-24311-00-00	• . Pipe, Fuel 1
29	5FL-14348-10-00	• . Pipe 1
30	5FL-14348-00-00	• . Pipe 1
31	5PS-14103-00-00	• . Throttle Screw Set
32	5JW-14104-00-00	• . Air Screw Set

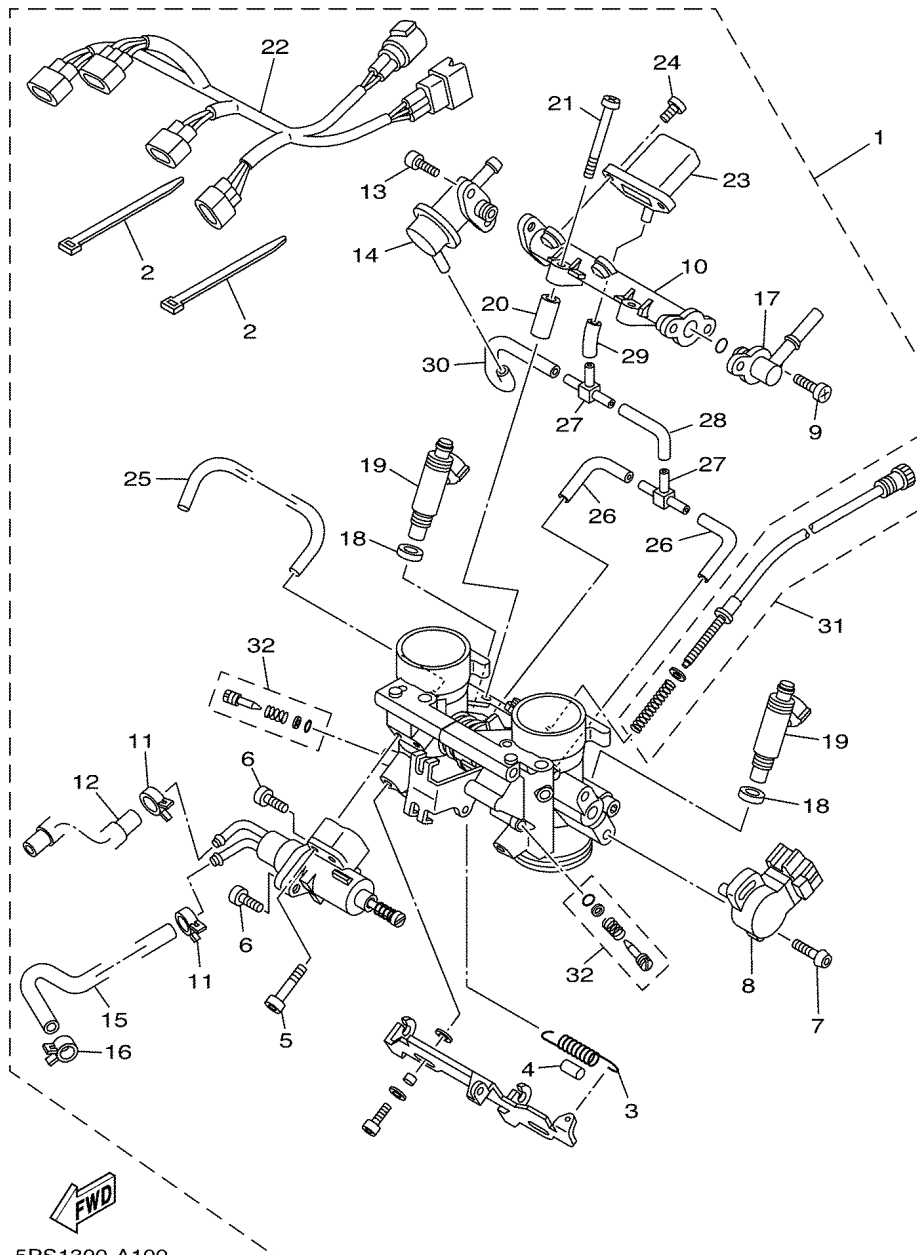

5PS1300-A100


Ref No	Part No	Description
01	5PS-14610-10-00	Exhaust Pipe Assy 1
02	36Y-27414-00-00	• . Damper, Footrest
03	5PS-14628-00-00	Protector, Exhaust Pipe
04	91380-06010-00	Bolt
05	3VD-14613-01-00	Gasket, Exhaust Pipe
06	90179-08410-00	Nut
07	90109-08044-00	Bolt
08	90201-08753-00	Washer, Plate
09	5PS-14710-11-00	Muffler Assy 1
10	5PX-14755-00-00	• . Gasket, Silencer
11	95024-08025-00	• . Bolt, Flange
12	5PS-14715-00-00	• . Band, Muffler
13	5PS-14738-00-00	• . Protector, Muffler 3
14	95024-06012-00	• . Bolt, Flange
15	5PS-14720-11-00	Muffler Assy 2
16	5PX-14755-00-00	• . Gasket, Silencer
17	95024-08025-00	• . Bolt, Flange
18	5PS-14725-00-00	• . Band, Muffler
19	5PS-14748-00-00	• . Protector, Muffler 4
20	95024-06012-00	• . Bolt, Flange
21	90109-087F1-00	Bolt

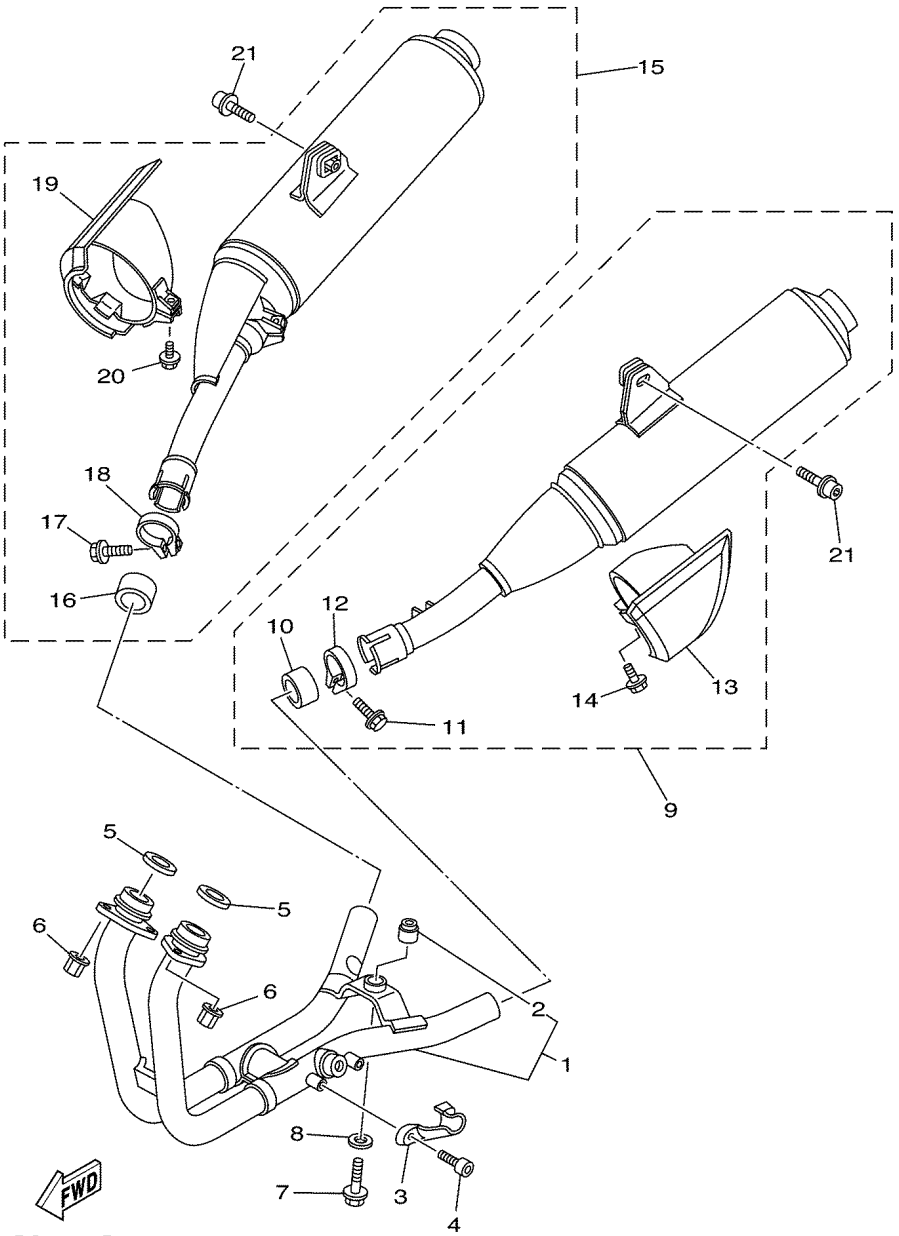

5PS4300-B111

CRANKCASE


Ref No	Part No	Description
01	5PS-15100-00-00	Crankcase Assy
02	4XV-15138-00-00	•. Nozzle 1
03	4G0-15138-00-00	•. Nozzle 1
04	99530-10114-00	•. Pin, Dowel
05	99530-14016-00	Pin, Dowel
06	3LD-11361-00-00	Bolt, Cylinder Holding 1
07	90105-10560-00	Bolt, Washer Based
08	90201-11597-00	Washer, Plate
09	95814-06040-00	Bolt, Flange
10	90201-066F0-00	Washer, Plate
11	95817-06055-00	Bolt, Flange
12	95817-06020-00	Bolt, Flange
13	95817-06030-00	Bolt, Flange
14	95814-08050-00	Bolt, Flange
15	90201-08087-00	Washer, Plate
16	95814-08060-00	Bolt, Flange
17	90201-08087-00	Washer, Plate
18	95817-06070-00	Bolt, Flange
19	95817-08065-00	Bolt, Flange
20	95814-08070-00	Bolt, Flange
21	95817-08075-00	Bolt, Flange
22	95817-06025-00	Bolt, Flange
23	95814-06040-00	Bolt, Flange
24	90201-066F0-00	Washer, Plate
25	90465-10028-00	Clamp
26	3LD-15191-00-00	Plate
27	90151-06008-00	Screw, Countersunk
28	3LD-15118-00-00	Holder
29	99530-08016-00	Pin, Dowel
30	95817-06045-00	Bolt, Flange
31	95817-06070-00	Bolt, Flange
32	5PS-15416-00-00	Cover, Oil Pump
33	5PS-15456-01-00	Gasket, Oil Pump Cover 1
34	91314-06020-00	Bolt
35	99530-08012-00	Pin, Dowel

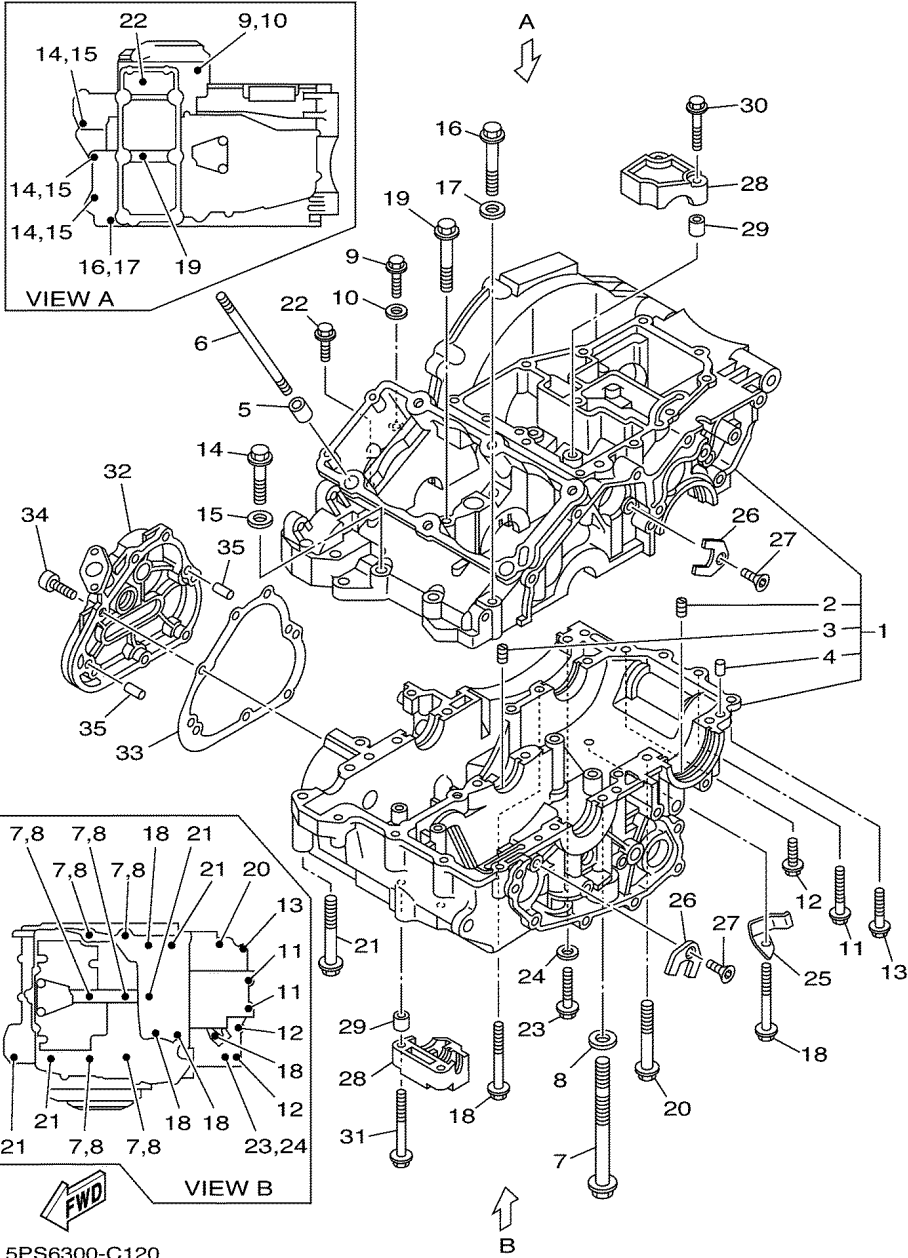

5PS6300-C120


CRANKCASE COVER 1

Ref No	Part No	Description
01	5PS-15411-00-00	Cover, Crankcase 1
02	93317-21288-00	Bearing
03	93109-12075-00	Oil Seal
04	5PS-15451-01-00	Gasket, Crankcase Cover 1
05	99530-08012-00	Pin, Dowel
06	5PS-17653-00-00	Slider
07	90109-065A8-00	Bolt
08	91314-06025-00	Bolt
09	5PS-1541E-00-00	Stay, Cover
10	91317-06030-00	Bolt
11	99530-10114-00	Pin, Dowel
12	90465-08125-00	Clamp
13	93106-15034-00	Oil Seal
14	5PS-15419-00-00	Cover, Shifter 1
15	91317-06014-00	Bolt
16	91317-06010-00	Bolt
17	91317-06020-00	Bolt
18	90465-08034-00	Clamp
19	5PS-15420-00-00	Crankcase Cover Assy 2
20	5PS-15326-00-00	• . Damper, Engine Mount 2
21	5PS-15335-00-00	• . Damper 3
22	5PS-15337-00-00	• . Damper 4
23	91314-06025-00	Bolt
24	91314-06050-00	Bolt
25	5PS-15431-00-00	Cover, Crankcase 3
26	5PS-15316-00-00	Damper, Engine Mount 1
27	5PS-15427-00-00	Cover, Cap 2
28	90149-05009-00	Screw
29	5PS-15462-01-00	Gasket, Crankcase Cover 3
30	91314-06025-00	Bolt
31	91314-06030-00	Bolt
32	99530-08012-00	Pin, Dowel
33	5PS-15441-00-00	Holder, Clutch Cable
34	5PS-15425-00-00	Cover, Generator 2
35	5PS-15463-01-00	Gasket, Cover Pinion 2
36	583-11126-00-00	Pipe, Breather 3
37	91380-06035-00	Bolt
38	90110-06006-00	Bolt, Hexagon Socket Head
39	91317-06045-00	Bolt
40	99530-10114-00	Pin, Dowel
41	90340-14128-00	Plug, Straight Screw
42	93210-14369-00	O-ring
43	90340-32123-00	Plug, Straight Screw
44	93210-32172-00	O-ring
45	5PS-8338L-00-00	Gasket

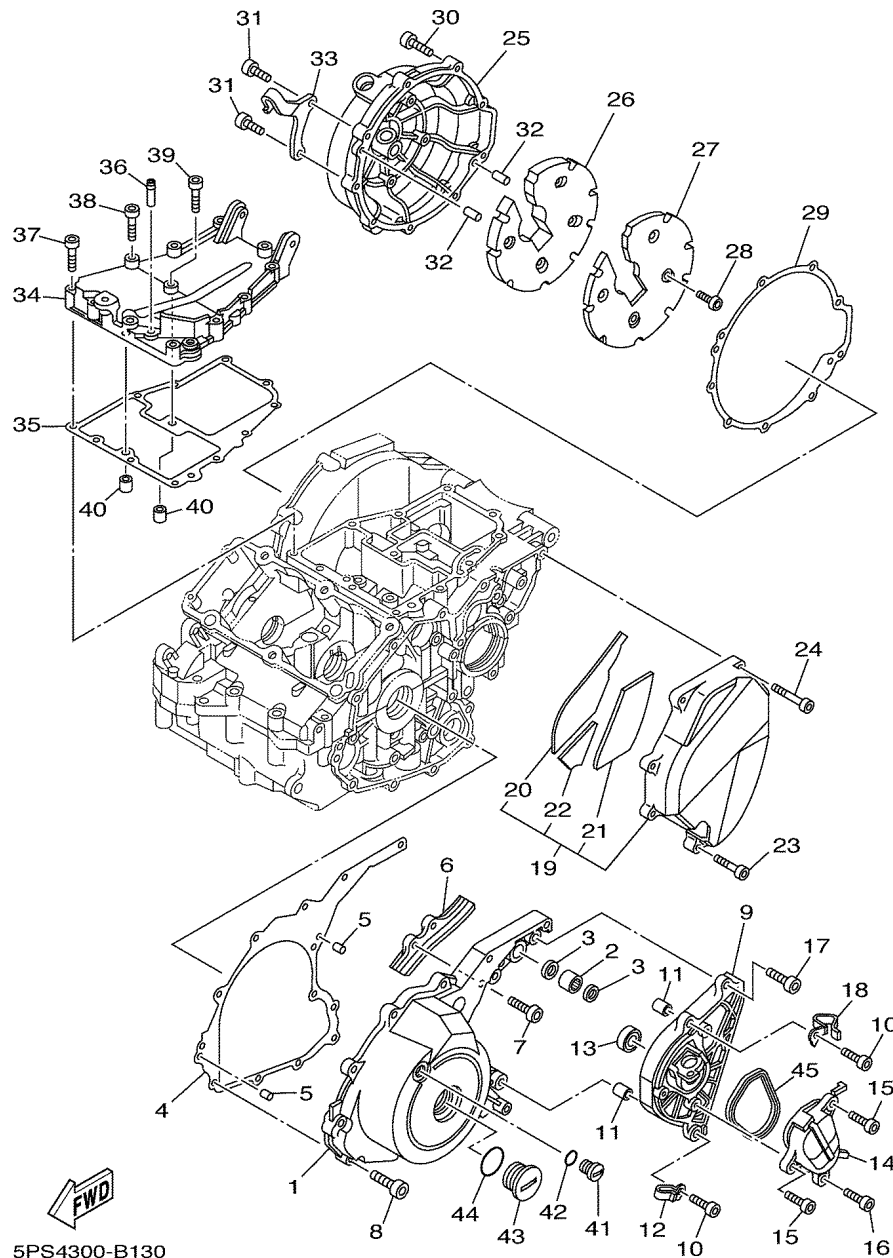

5PS4300-B130


Ref No	Part No	Description
01	5PS-15515-00-00	Gear 3
02	3LD-15517-00-00	Gear, Idler 2
03	26H-15521-00-00	Shaft 1
04	3LD-15512-00-00	Gear, Idler 1
05	3LD-15590-02-00	Starter One-way Assy
06	90149-06026-00	Screw
07	90201-30008-00	Washer, Plate

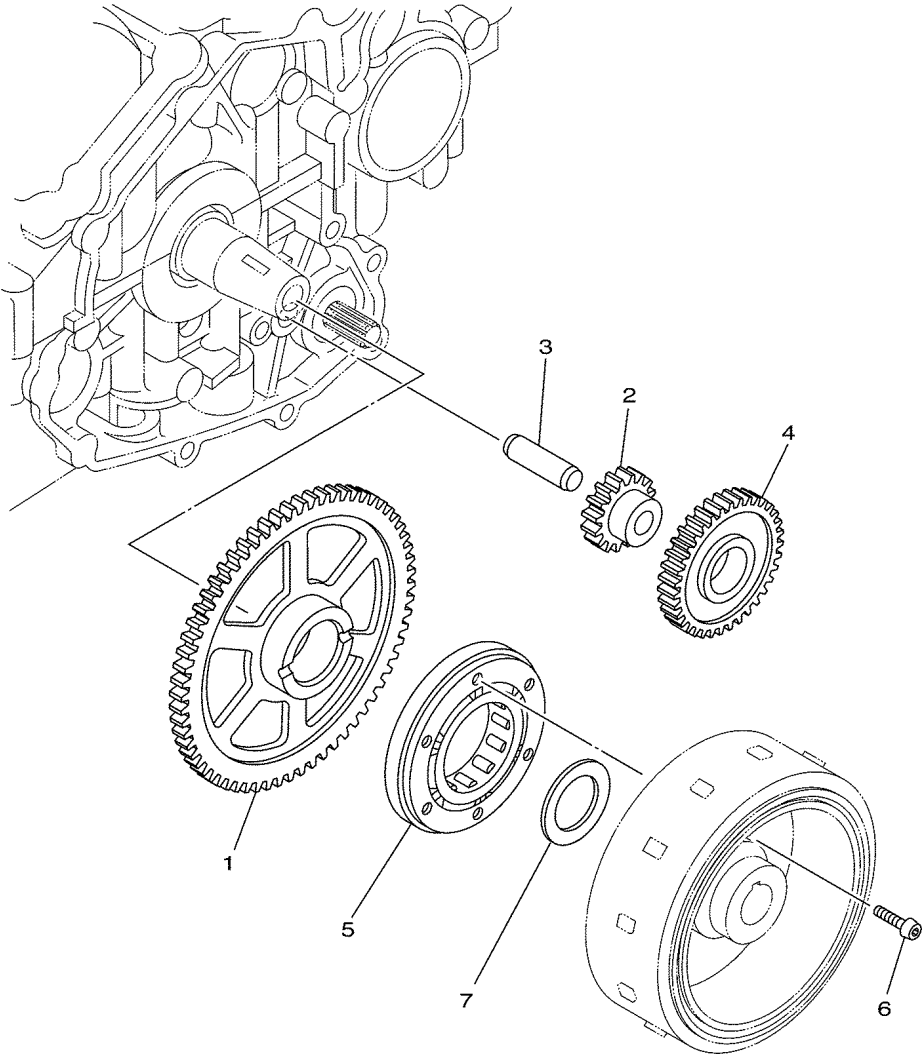

5PS1300-A140


CLUTCH

Ref No	Part No	Description
01	4TX-16150-02-00	Primary Driven Gear Comp.
02	5PS-16356-00-00	Rod, Push 1
03	93306-00304-00	Bearing
04	4H7-16154-00-00	Plate, Thrust 1
05	4TX-16371-00-00	Boss, Clutch
06	4H7-16321-02-00	Plate, Friction
07	4TX-16321-00-00	Plate, Friction
08	5EB-16351-01-00	Plate, Pressure 1
09	90501-230E4-00	Spring, Compression
10	90159-06123-00	Screw, With Washer
11	168-16324-00-00	Plate, Clutch 1
11	168-16325-00-00	Plate, Clutch 2
11	3J2-16324-00-00	Plate, Clutch 1
12	168-16324-00-00	Plate, Clutch 1
12	3J2-16324-00-00	Plate, Clutch 1
13	3J2-16324-00-00	Plate, Clutch 1
14	90215-20004-00	Washer, Lock
15	90170-20008-00	Nut
16	5PS-16340-00-00	Push Lever Assy
17	90508-14012-00	Spring, Torsion
18	5PS-16382-00-00	Axle, Push Lever
19	92907-08600-00	Washer, Plate
20	99001-07600-00	Circlip
21	93317-11020-00	Bearing
22	93102-12106-00	Oil Seal
23	90201-12163-00	Washer, Plate
24	93317-11287-00	Bearing
25	90201-10119-00	Washer, Plate
26	99009-10400-00	Circlip
27	3VD-16164-00-00	Plate, Thrust 2
28	3VD-16154-00-00	Plate, Thrust 1
29	4NX-16181-00-00	Spacer 1
30	93310-365B8-00	Bearing

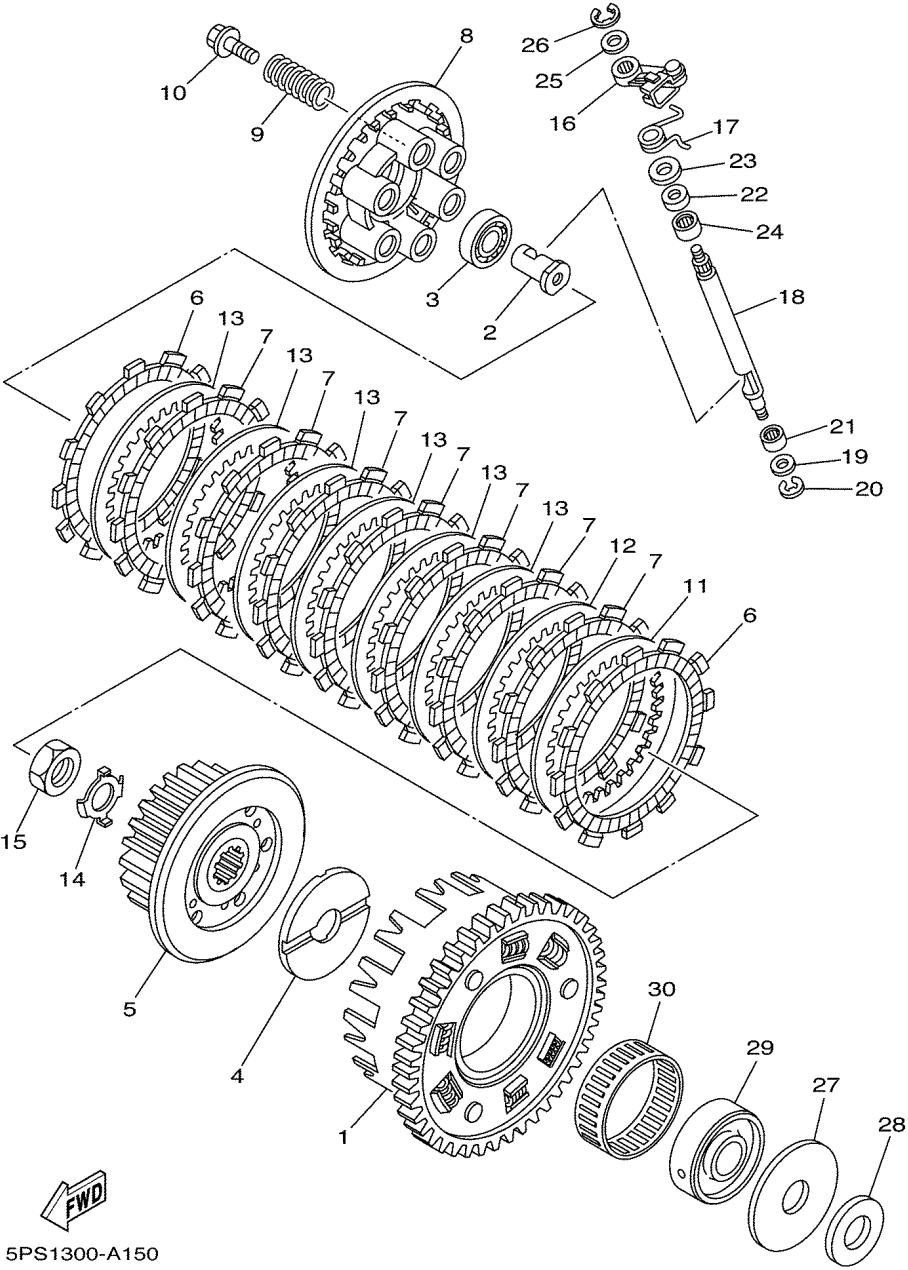


FWD
5PS1300-A150

Ref No	Part No	Description
01	5PS-17401-00-00	Main Axle Assy
02	93306-30534-00	Bearing
03	5PS-15163-00-00	Housing, Bearing 1
04	90387-25004-00	Collar
05	5PS-17151-00-00	Gear, 5th Pinion
06	90209-21332-00	Washer
07	93440-25084-00	Circlip
08	5PS-17131-00-00	Gear, 3rd Pinion
09	90387-2513E-00	Collar
10	5PS-17161-00-00	Gear, 6th Pinion
11	90209-22352-00	Washer
12	90209-21351-00	Washer
13	5PS-17121-00-00	Gear, 2nd Pinion
14	93306-20464-00	Bearing
15	90151-06011-00	Screw, Countersunk
16	5PS-17402-00-00	Drive Axle Assy
17	90387-32003-00	Collar
18	5PS-17221-00-00	Gear, 2nd Wheel
19	90209-28331-00	Washer
20	93440-31183-00	Circlip
21	5PS-17261-00-00	Gear, 6th Wheel
22	90209-28331-00	Washer
23	90387-2802W-00	Collar
24	5PS-17241-00-00	Gear, 4th Wheel
25	90209-29329-00	Washer
26	90209-28330-00	Washer
27	5PS-17231-00-00	Gear, 3rd Wheel
28	5PS-17251-00-00	Gear, 5th Wheel
29	90201-25M72-00	Washer, Plate
30	90387-2511A-00	Collar
31	5PS-17211-00-00	Gear, 1st Wheel
32	93102-40008-00	Oil Seal
33	5PS-17460-00-00	Sprocket, Drive
34	90215-30233-00	Washer, Lock
35	90179-22003-00	Nut
36	90201-20008-00	Washer, Plate
37	278-17424-01-00	Circlip 1
38	93306-20455-00	Bearing
39	93440-45144-00	Circlip
40	5PS-17471-00-00	Plate, Cover
41	95827-06012-00	Bolt, Flange
42	5PS-17446-00-00	Plate
43	90201-10N12-00	Washer, Plate
44	95307-10700-00	Nut

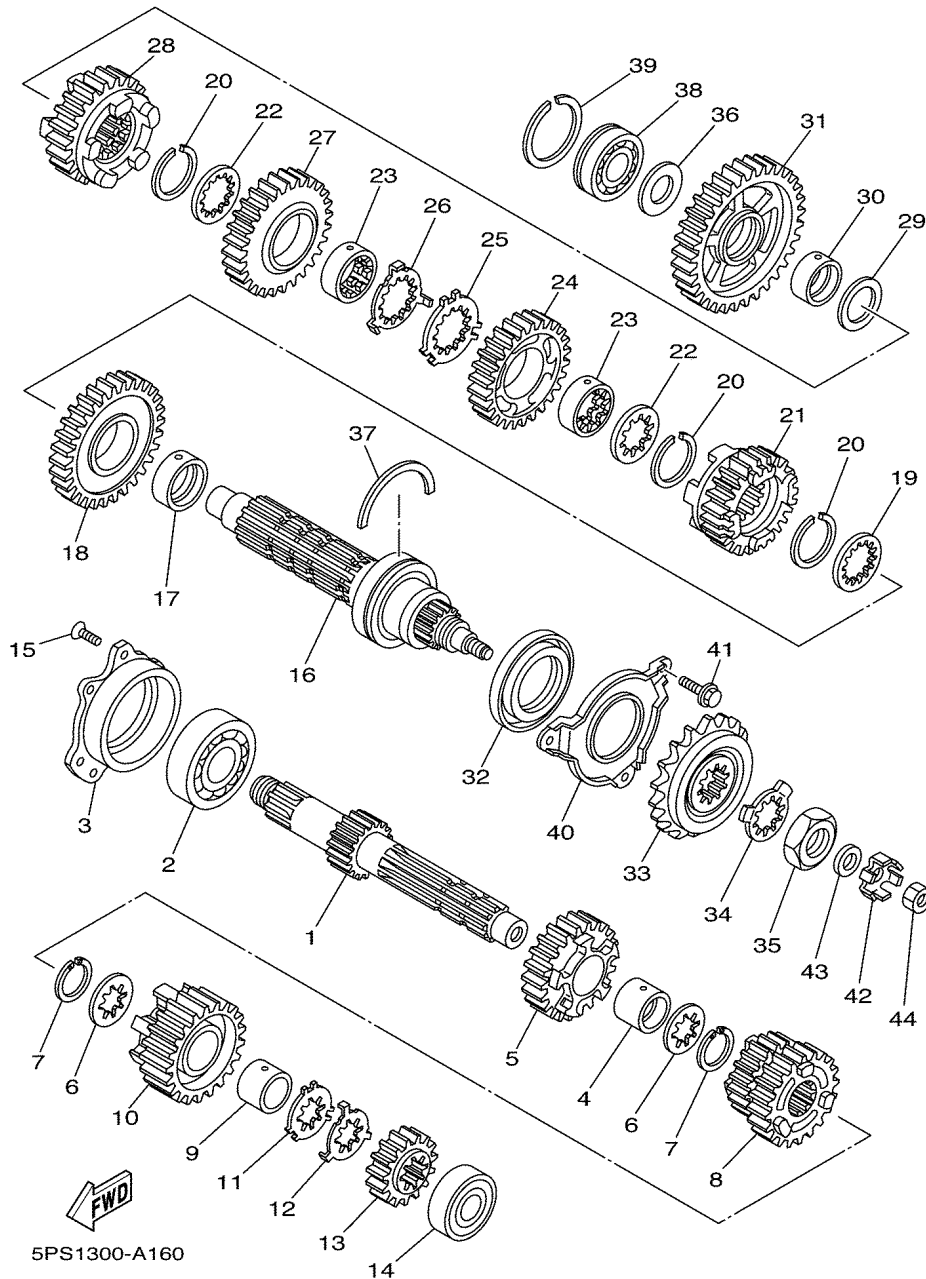


Ref No	Part No	Description
01	5PS-18540-00-00	Shift Cam Assy
02	90149-05321-00	• . Screw
03	4UN-18542-00-00	• . Point, Neutral
04	90501-06022-00	• . Spring, Compression
05	4UN-18566-00-00	• . Plate, Side 2
06	90110-06060-00	Bolt, Hexagon Socket Head
07	5PS-18511-00-00	Fork, Shift 1
08	5PS-18512-00-00	Fork, Shift 2
09	5PS-18513-00-00	Fork, Shift 3
10	5PS-18531-00-00	Bar, Shift Fork Guide 1
11	4XV-18531-00-00	Bar, Shift Fork Guide 1
12	90501-064L1-00	Spring, Compression
13	3LD-18536-00-00	Stopper, Shift Bar
14	90508-29016-00	Spring, Torsion
15	4SV-18140-00-00	Stopper Lever Assy
16	90110-06027-00	Bolt, Hexagon Socket Head
17	4NX-18175-00-00	Spacer

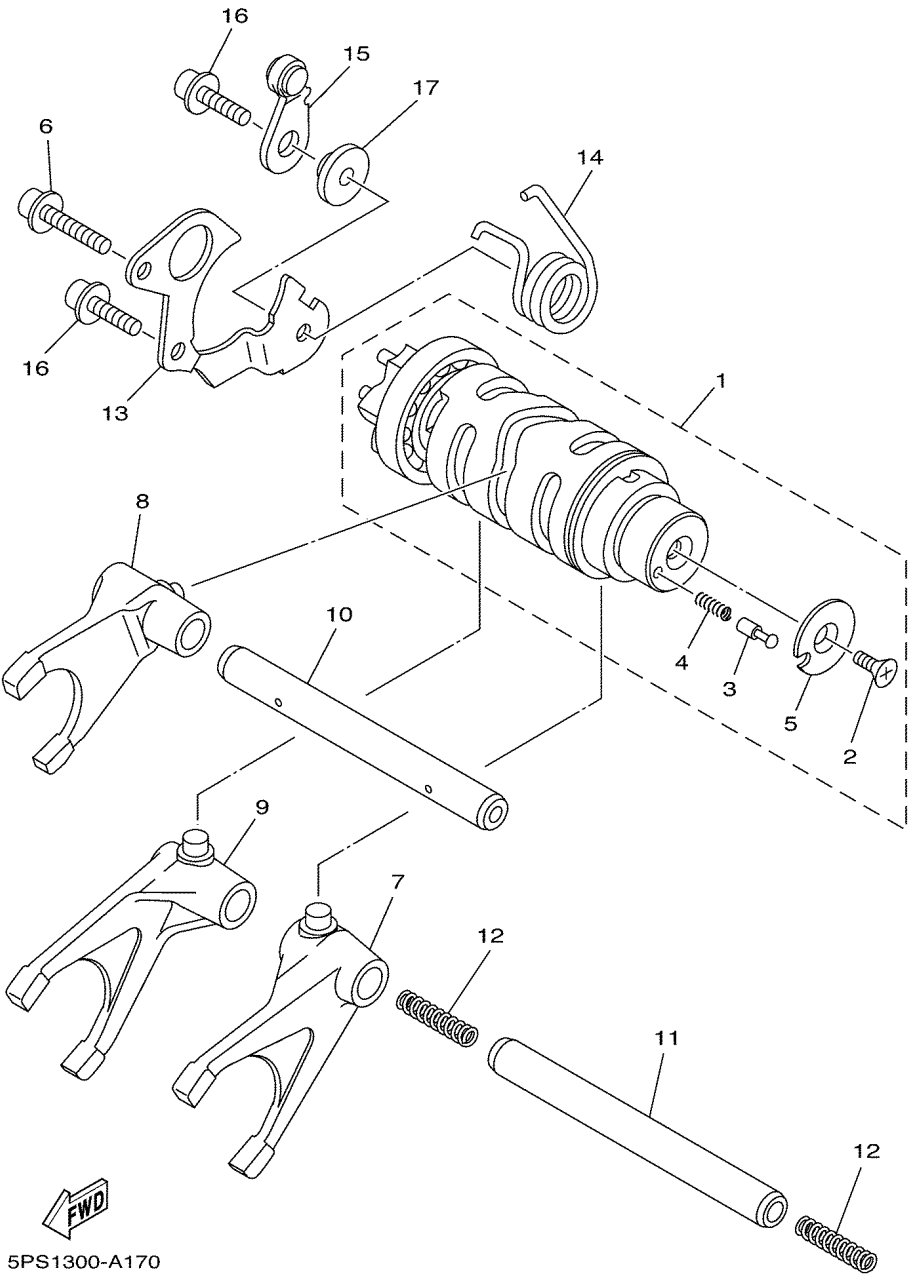

5PS1300-A170


Ref No	Part No	Description
01	5PS-18101-00-00	Shift Shaft Assy
02	90508-32682-00	• . Spring, Torsion
03	90201-191J4-00	• . Washer, Plate
04	99009-19400-00	• . Circlip
05	90201-12575-00	Washer, Plate
06	99001-10600-00	Circlip
07	5PS-18130-00-00	Shift Shaft Assy
08	2H9-18154-00-00	• . Cover, Dust
09	95827-06020-00	Bolt, Flange
10	2H9-18115-00-00	Rod, Shift
11	90170-06228-00	Nut
12	95304-06700-00	Nut
13	5PS-18110-00-00	Shift Pedal Assy
14	5EB-18113-00-00	• . Cover, Shift Pedal
15	2H9-18154-00-00	• . Cover, Dust
16	5PS-18116-00-00	Joint, Rod 1
17	5JW-27434-00-00	Bolt
18	90206-12074-00	Washer, Wave
19	90201-12013-00	Washer, Plate
20	90201-080H1-00	Washer, Plate
21	5SL-18127-00-00	Stopper, Screw
22	93101-12004-00	Oil Seal

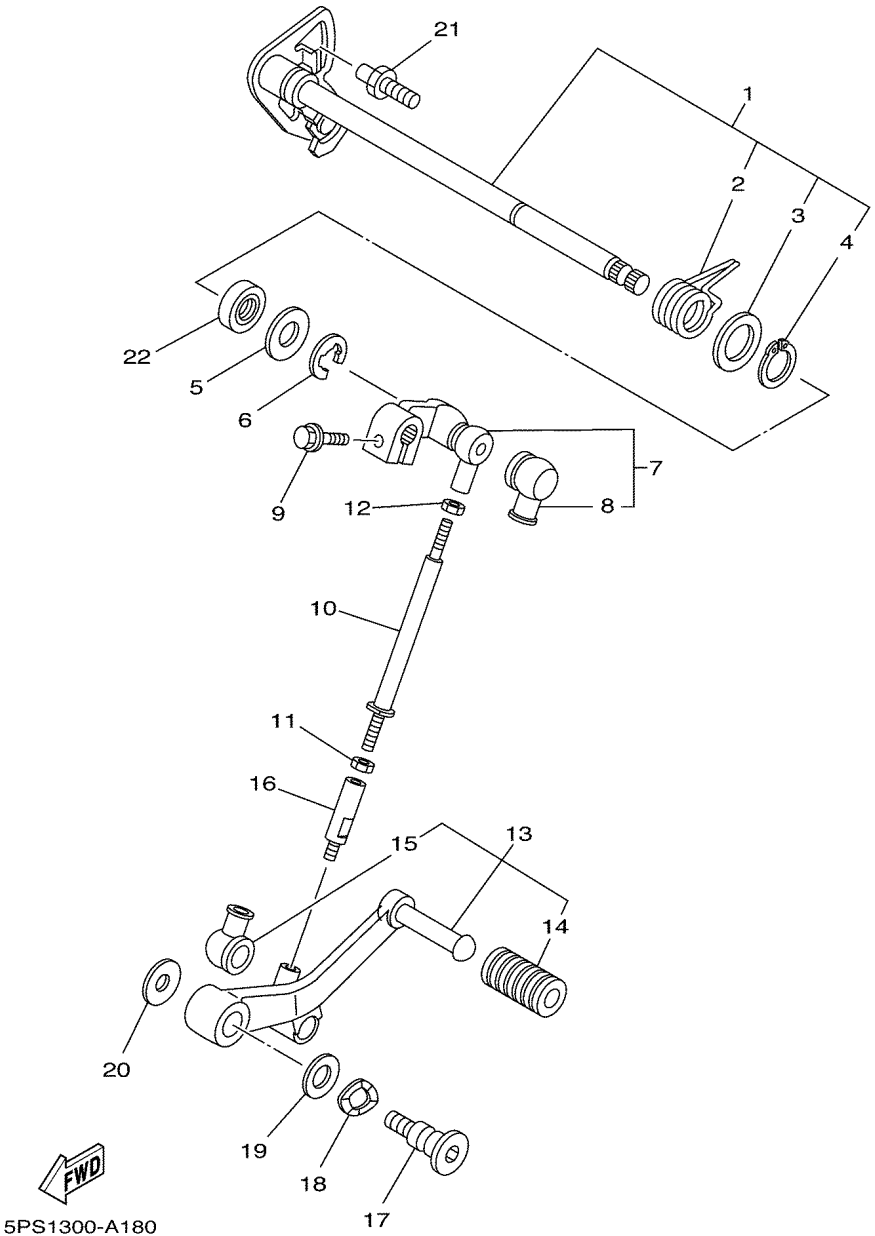


5PS1300-A180

FRAME

Ref No	Part No	Description
01	5PS-21110-20-00	Frame Comp.
02	5PS-21190-11-00	Rear Frame Comp.
03	90149-10002-00	Screw
04	90111-12001-00	Bolt,hex. Socket Button
05	90387-14003-00	Collar
06	90105-08047-00	Bolt, Washer Based
07	90111-12001-00	Bolt,hex. Socket Button
08	90387-14003-00	Collar
09	90105-08047-00	Bolt, Washer Based
10	90105-10032-00	Bolt, Washer Based
11	90179-10002-00	Nut
12	5EB-21495-00-00	Bolt, Engine Adjusting
13	90338-24112-00	Plug
14	90105-10113-00	Bolt, Washer Based
15	90179-10696-00	Nut
16	5EB-21495-00-00	Bolt, Engine Adjusting
17	5PS-21489-00-00	Bracket, Engine Lower
18	95817-08030-00	Bolt, Flange
19	5PS-2117V-00-00	Cover 7
20	5PS-2117W-00-00	Cover 8
21	5PS-2117M-00-00	Cover 2
22	90269-07001-00	Rivet
23	90464-12089-00	Clamp
24	90464-20181-00	Clamp
25	90464-13249-00	Clamp
26	90338-08008-00	Plug
27	1JK-21268-00-00	Seal

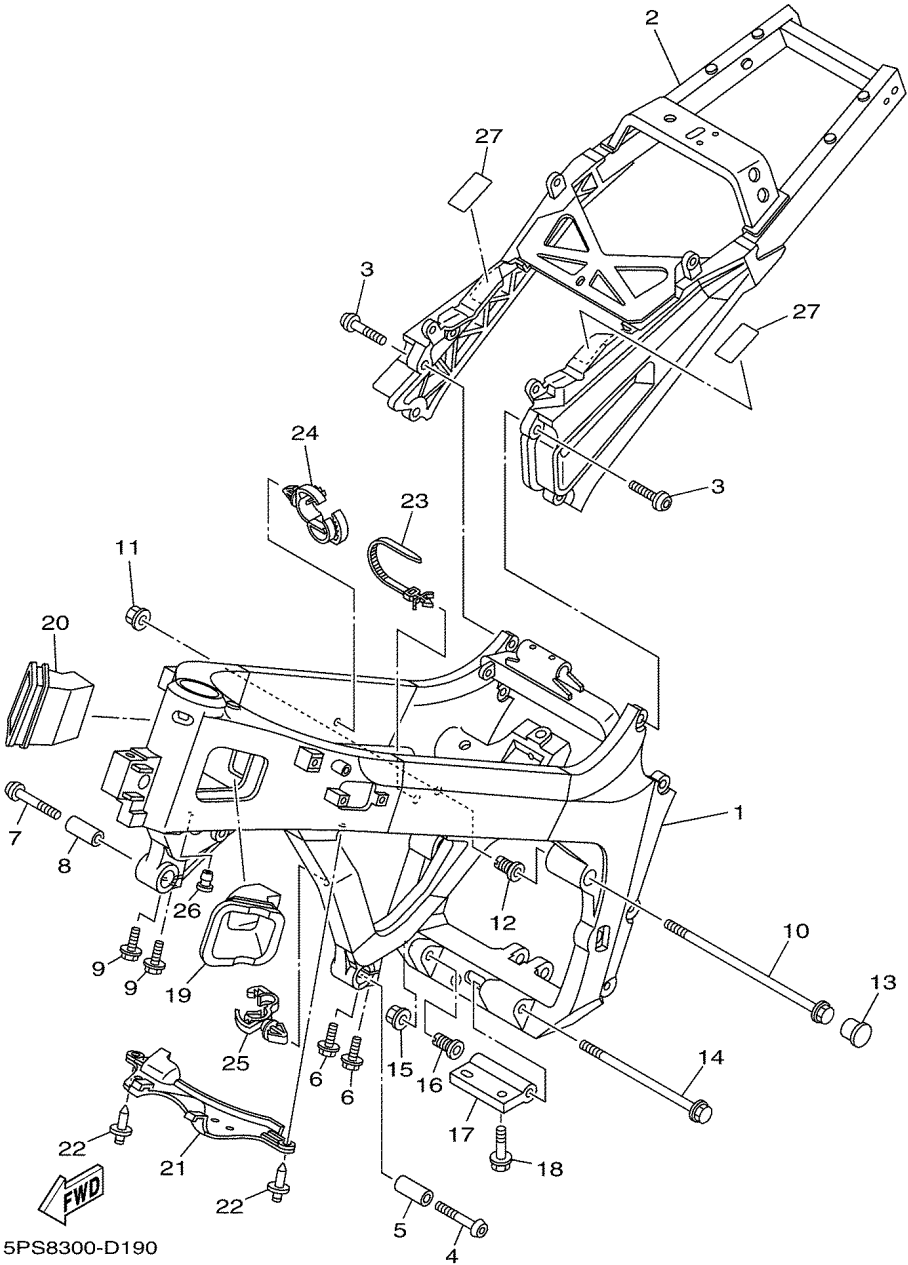


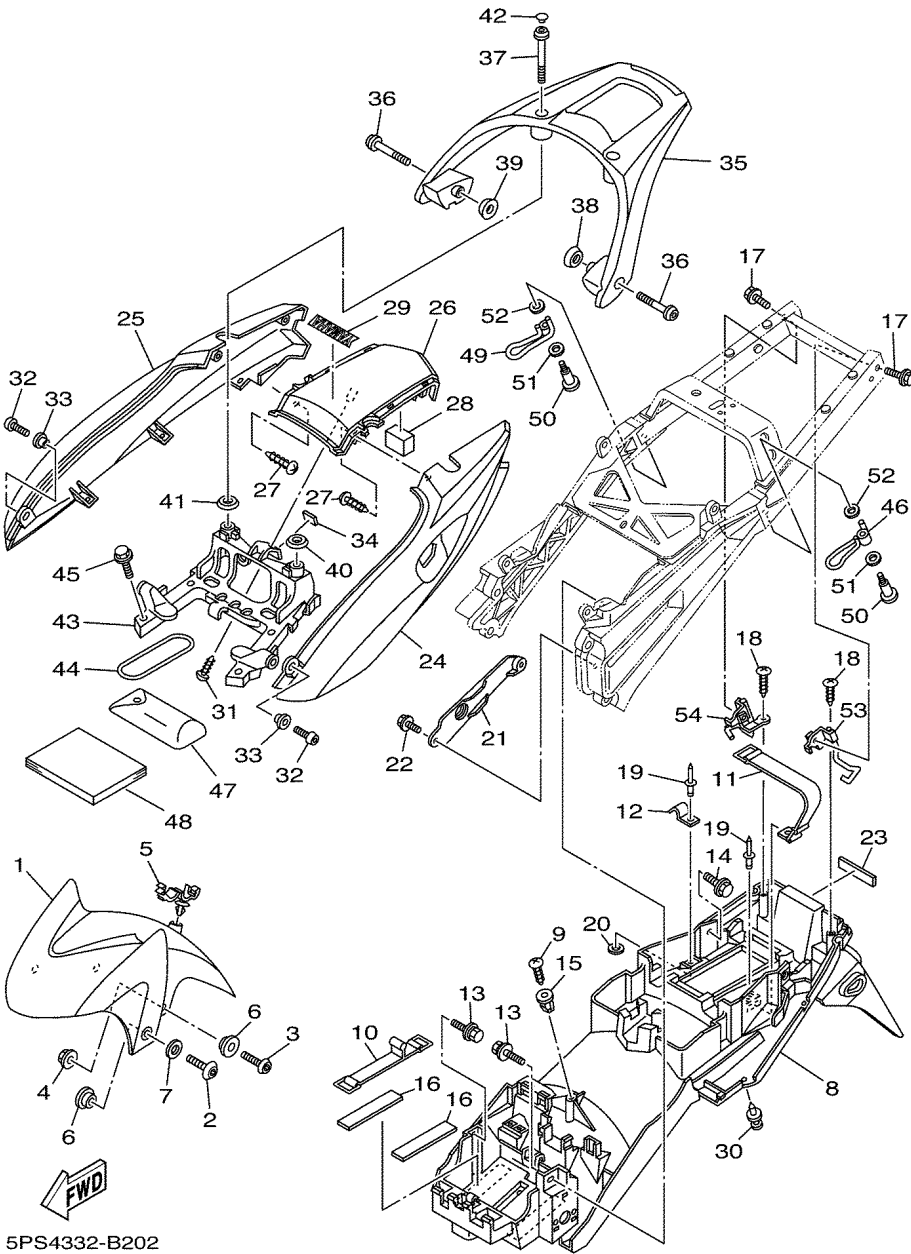


5PS4332-B202

Ref No	Part No	Description
01	5PS-21511-00-P1	Fender, Front
01	5PS-21511-00-P5	Fender, Front
02	90110-06200-00	Bolt, Hexagon Socket Head
03	92014-06020-00	Bolt, Button Head
04	90179-06009-00	Nut
05	90464-18002-00	Clamp
06	90387-065T2-00	Collar
07	90202-06170-00	Washer, Plate
08	5PS-21611-00-00	Fender, Rear
09	97707-60020-00	Screw, Tapping
10	3VD-82131-00-00	Band, Battery
11	5JW-21647-01-00	Band
12	5PS-2162A-00-00	Hook
13	90119-06108-00	Bolt, With Washer
14	90119-06118-00	Bolt, With Washer
15	90338-08226-00	Plug
16	1AE-2834E-00-00	Damper 1
17	90105-06020-00	Bolt, Washer Based
18	97707-50020-00	Screw, Tapping
19	90267-40110-00	Rivet, Blind
20	90201-04018-00	Washer, Plate
21	5PS-2163A-00-00	Cover, Rear Fender 1
22	90119-05062-00	Bolt, With Washer
23	5PS-21639-00-00	Damper 2
24	5PS-2471K-00-P0	Cover, Tail 1
24	5PS-2471K-00-P5	Cover, Tail 1
24	5PS-2471K-00-P7	Cover, Tail 1
25	5PS-2472K-00-P0	Cover, Tail 2
25	5PS-2472K-00-P5	Cover, Tail 2
25	5PS-2472K-00-P7	Cover, Tail 2
26	5PS-21651-00-P0	Cover, Rear Fender
26	5PS-21651-00-P5	Cover, Rear Fender
26	5PS-21651-00-P7	Cover, Rear Fender
27	97707-50012-00	Screw, Tapping
28	5PS-21649-00-00	Damper
29	99244-00080-00	Emblem, Yamaha
29	99247-00080-00	Emblem, Yamaha
30	90269-06081-00	Rivet
31	97707-50014-00	Screw, Tapping
32	92017-06014-00	Bolt, Button Head
33	90387-06048-00	Collar
34	51Y-21639-00-00	Damper 2
35	5PS-24773-10-00	Handle, Seat
36	90111-08005-00	Bolt,hex. Socket Button
37	90111-08006-00	Bolt,hex. Socket Button
38	5PS-24723-00-00	Damper, Seat
39	5PS-24724-00-00	Damper, Seat
40	5PS-24723-10-00	Damper, Seat
41	5PS-24724-10-00	Damper, Seat
42	90338-08163-00	Plug
43	5PS-2117E-00-00	Bracket, Taillight
44	4XV-21376-00-00	Band, Tool
45	95827-08035-00	Bolt, Flange
46	5PS-21654-00-00	Wire
47	5PS-28100-01-00	Tool Kit

Ref No	Part No	Description
48	5PS-28199-F3-00	Manual,owner's
48	5PS-28199-G3-00	Manual,owner's
48	5PS-28199-H3-00	Manual,owner's
49	5PS-21654-10-00	Wire
50	90109-06046-00	Bolt
51	90206-08051-00	Washer, Wave
52	90201-06043-00	Washer, Plate
53	5PS-2132F-00-00	Hook
54	5PS-2139E-00-00	Hook 2

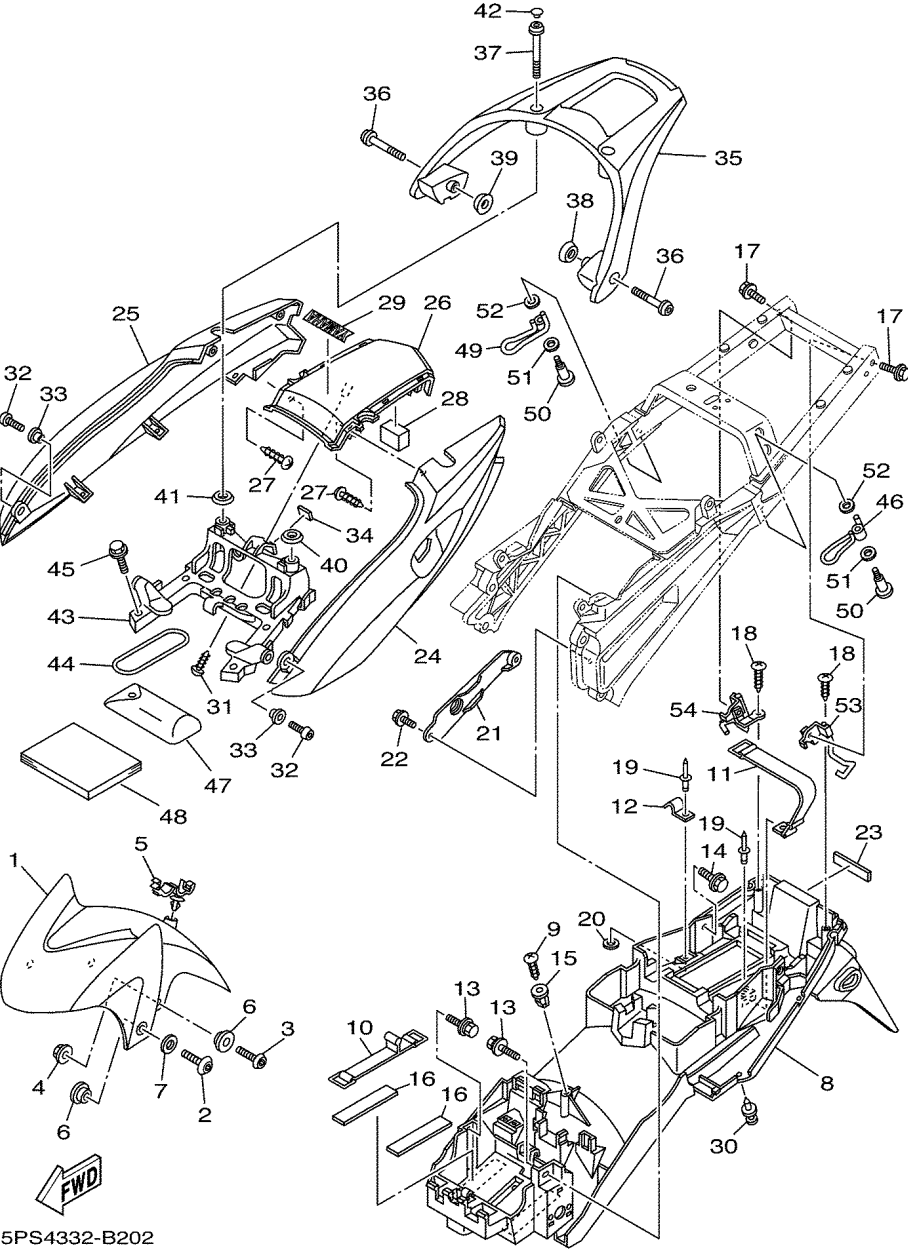


5PS4332-B202

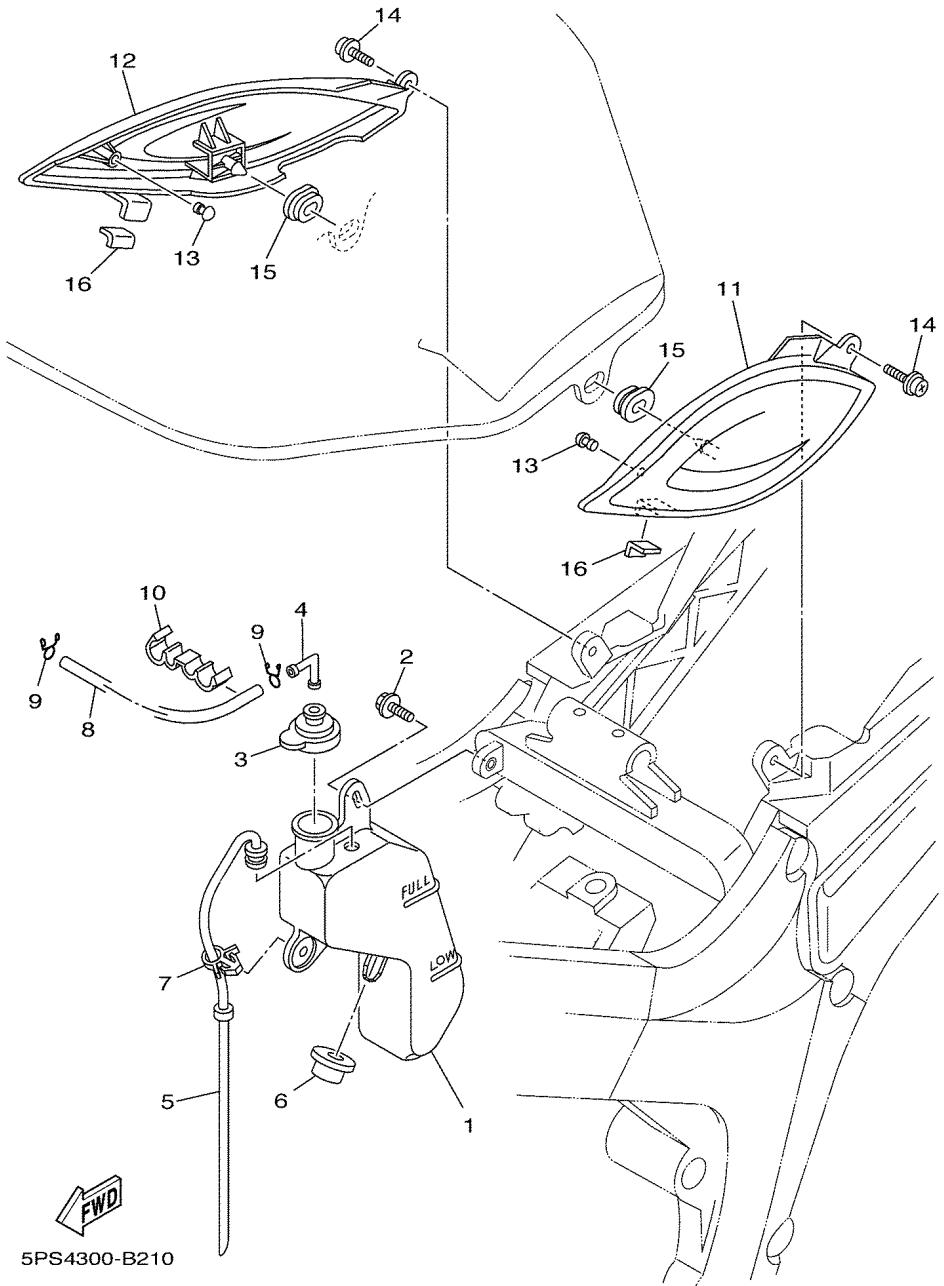


Ref No	Part No	Description
01	5PS-21871-00-00	Tank, Recovery
02	90119-06117-00	Bolt, With Washer
03	5EB-21875-00-00	Cap
04	26H-21828-00-00	Elbow
05	5PS-21816-00-00	Pipe 1
06	90480-20566-00	Grommet
07	90464-15157-00	Clamp
08	90445-083J5-00	Hose
09	90467-08075-00	Clip
10	90464-10233-00	Clamp
11	5PS-21711-00-00	Cover, Side 1
12	5PS-21721-00-00	Cover, Side 2
13	1J7-21717-00-00	Damper
14	90159-06033-00	Screw, With Washer
15	90480-01558-00	Grommet
16	3TB-28217-00-00	Damper 1

Ref No	Part No	Description
01	5PS-22110-01-00	Rear Arm Comp.
02	5PS-22184-00-00	Bush
03	93315-42523-00	Bearing
04	93315-42536-00	Bearing
05	5EB-22127-00-00	Shim
06	5EB-22123-00-00	Bush 1
07	3FV-22128-00-00	Cover, Thrust 1
08	93109-33049-00	Oil Seal
09	5PS-22141-00-00	Shaft, Pivot
10	90185-18167-00	Nut, Self-locking
11	90201-186M4-00	Washer, Plate
12	5PS-22125-00-00	Bolt
13	93317-21746-00	Bearing
14	93109-17071-00	Oil Seal
15	90387-126Y1-00	Collar
16	5PS-2217A-00-00	Arm, Relay
17	5PS-2217M-00-00	Arm 1
18	93317-21746-00	Bearing
19	93317-31771-00	Bearing
20	93109-17071-00	Oil Seal
21	90387-126Y1-00	Collar
22	90101-12749-00	Bolt
23	90185-12119-00	Nut, Self-locking
24	92907-12600-00	Washer
25	90105-10323-00	Bolt, Washer Based
26	95607-10200-00	Nut, Self-locking
27	90387-1012B-00	Collar
28	90101-10659-00	Bolt
29	95617-10100-00	Nut, U
30	90201-101J1-00	Washer, Plate
31	90387-127W0-00	Collar
32	5PS-22151-00-00	Seal, Guard
33	90119-06096-00	Bolt, With Washer
34	90387-06372-00	Collar
35	5PS-25875-00-00	Holder, Brake Hose 1
36	4NK-25876-00-00	Holder, Brake Hose 2
37	95027-06016-00	Bolt, Flange
38	90464-18002-00	Clamp
39	5PS-21650-00-00	Rear Fender Comp.
40	90119-06117-00	Bolt, With Washer
41	90269-08001-00	Rivet

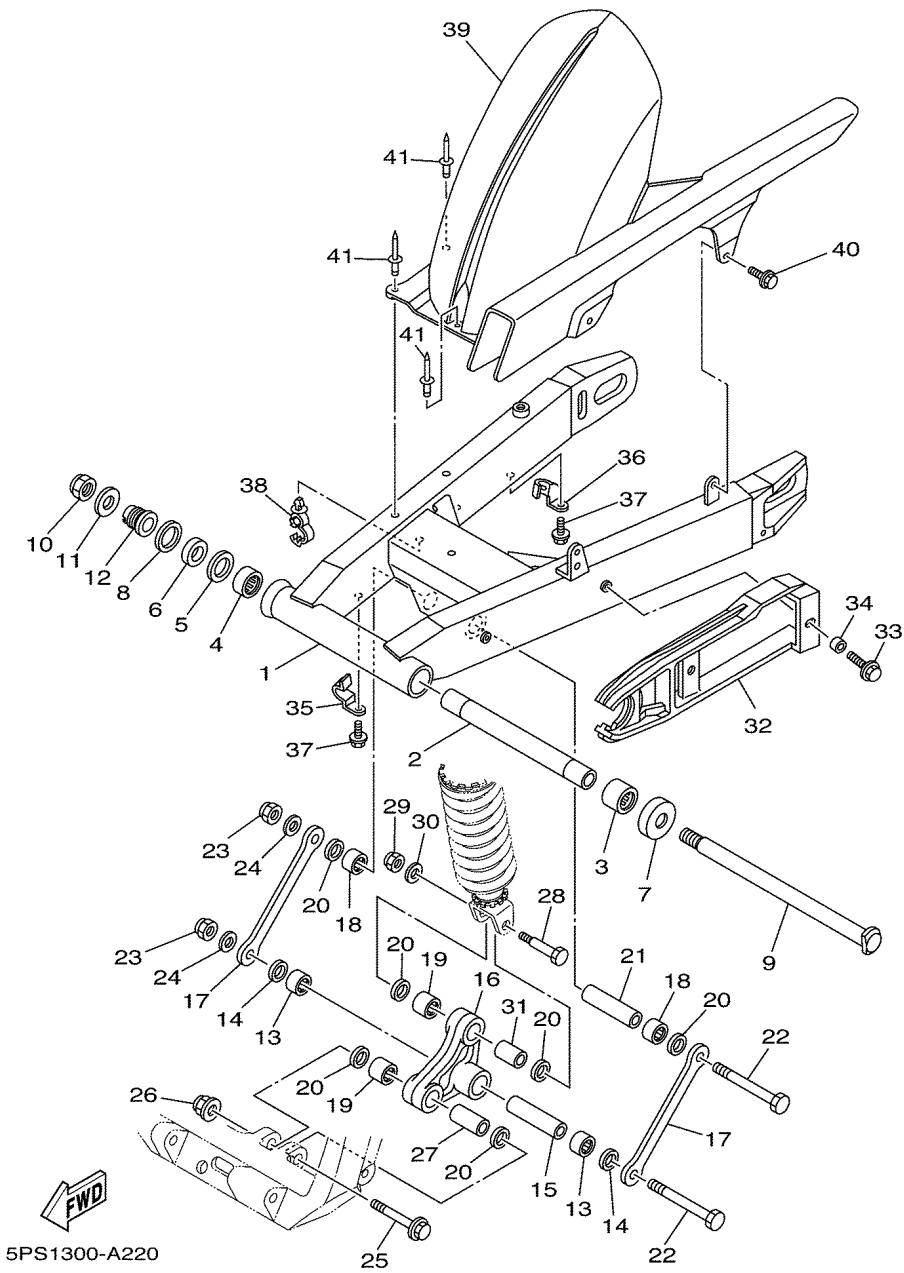


5PS1300-A220

Ref No	Part No	Description
01	5PS-22210-00-00	Shock Absorber Assy, Rear
02	4GY-22216-20-00	• . Bush, Rear Shock Absorber
03	90105-10402-00	Bolt, Washer Based
04	95617-10100-00	Nut, U
05	5PS-22219-01-00	Bracket, Upper
06	95607-14200-00	Nut, Self-locking
07	90201-101J1-00	Washer, Plate

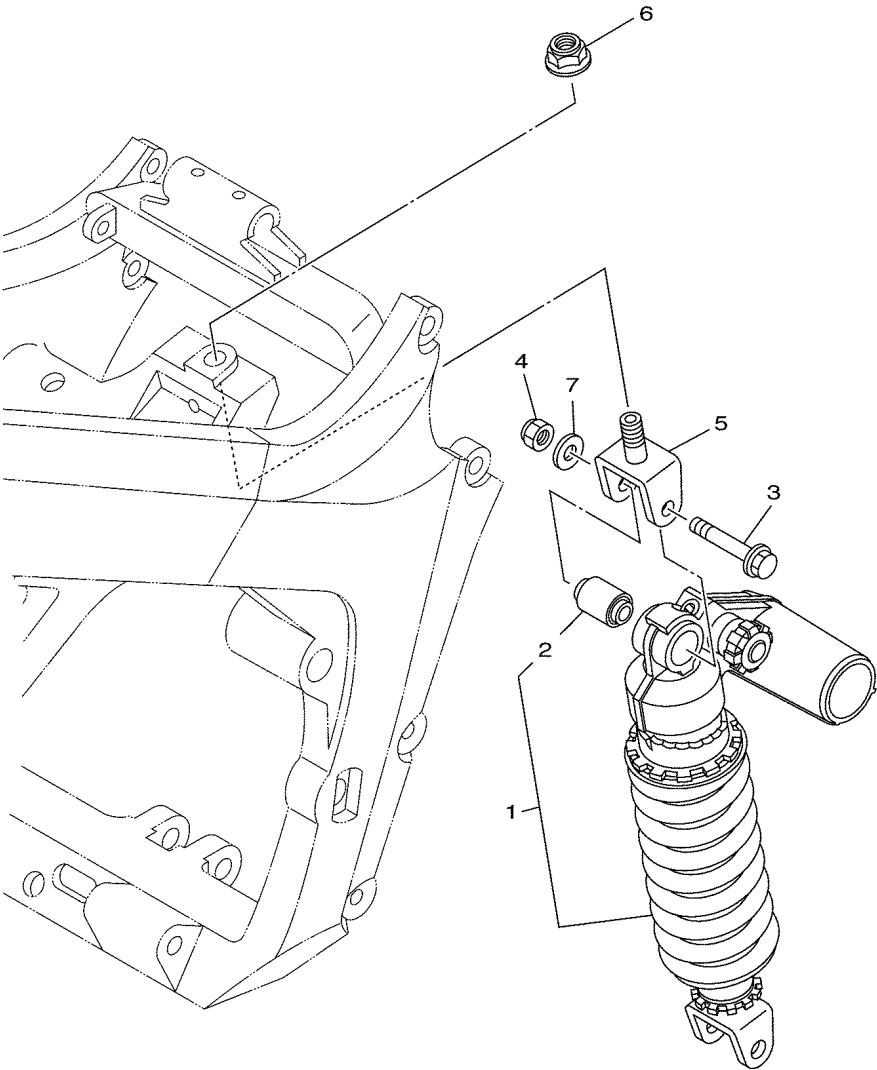


5PS1300-A230

Ref No	Part No	Description
01	93399-99932-00	Bearing
02	3FV-23462-00-00	Seal, Steering
03	93399-99932-00	Bearing
04	4XV-23415-01-00	Cover, Ball Race 1
05	90179-30691-00	Nut
06	4XV-23418-00-00	Washer, Special
07	90202-30235-00	Washer, Plate
08	90176-28083-00	Nut, Crown
09	90201-281U8-00	Washer, Plate
10	5PS-23435-20-00	Crown, Handle
11	91314-08030-00	Bolt
12	4H7-23441-01-98	Holder, Handle Upper
13	91314-08030-00	Bolt
14	90338-08163-00	Plug
15	5PS-23389-01-00	Guide, Cable
16	90119-06228-00	Bolt, With Washer
17	4KM-23123-01-00	Cover, Lower 1

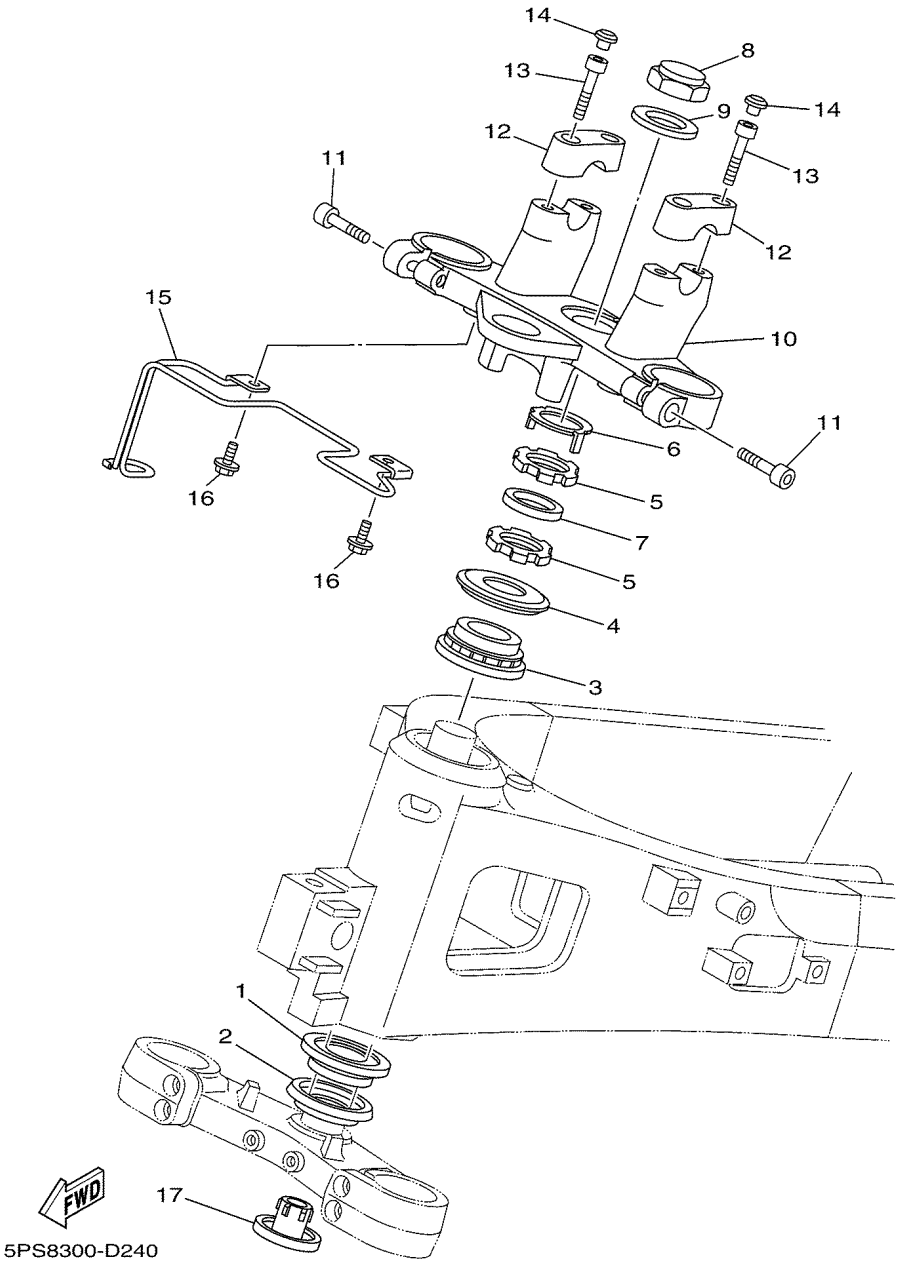


FRONT FORK

Ref No	Part No	Description
01	5PS-23102-20-00	Front Fork Assy (l.h)
02	5PS-23126-20-00	• Tube, Outer (left)
03	5PS-23110-10-00	• Inner Tube Comp.1
04	3GM-23171-00-00	• Piston, Front Fork
05	5PS-23170-10-00	• Cylinder Comp., Front Fork
06	3GM-23125-00-00	• Metal, Slide 1
07	4V4-23146-L0-00	• Washer, Oil Seal
08	4PU-23145-01-00	• Oil Seal
09	4V4-23153-L0-00	• Ring, Snap
10	4PU-23144-00-00	• Seal, Dust
11	5PS-23173-00-00	• Spindle, Taper
12	509-23158-L0-00	• Gasket
13	278-23181-50-00	• Bolt, Hexagon Socket Head
14	5PS-23141-10-00	• Spring, Front Fork
15	3LR-23149-00-00	• Washer, Spring Upper
16	4GY-23118-10-00	• Spacer
17	3FV-23149-00-00	• Washer, Spring Upper
18	5PS-23111-00-00	• Bolt, Cap
19	5PS-23103-20-00	Front Fork Assy (r.h)
20	5PS-23136-20-00	• Tube, Outer (right)
21	5PS-23110-10-00	• Inner Tube Comp.1
22	3GM-23171-00-00	• Piston, Front Fork
23	5PS-23170-10-00	• Cylinder Comp., Front Fork
24	3GM-23125-00-00	• Metal, Slide 1
25	4V4-23146-L0-00	• Washer, Oil Seal
26	4PU-23145-01-00	• Oil Seal
27	4V4-23153-L0-00	• Ring, Snap
28	4PU-23144-00-00	• Seal, Dust
29	5PS-23173-00-00	• Spindle, Taper
30	509-23158-L0-00	• Gasket
31	278-23181-50-00	• Bolt, Hexagon Socket Head
32	5PS-23141-10-00	• Spring, Front Fork
33	3LR-23149-00-00	• Washer, Spring Upper
34	4GY-23118-10-00	• Spacer
35	3FV-23149-00-00	• Washer, Spring Upper
36	5PS-23111-00-00	• Bolt, Cap
37	91314-08040-00	• Bolt
38	5PS-23340-20-00	Under Bracket Comp.
39	91317-08025-00	Bolt
40	4PU-2331G-00-00	Cover
41	4NX-21541-00-00	Damper 1

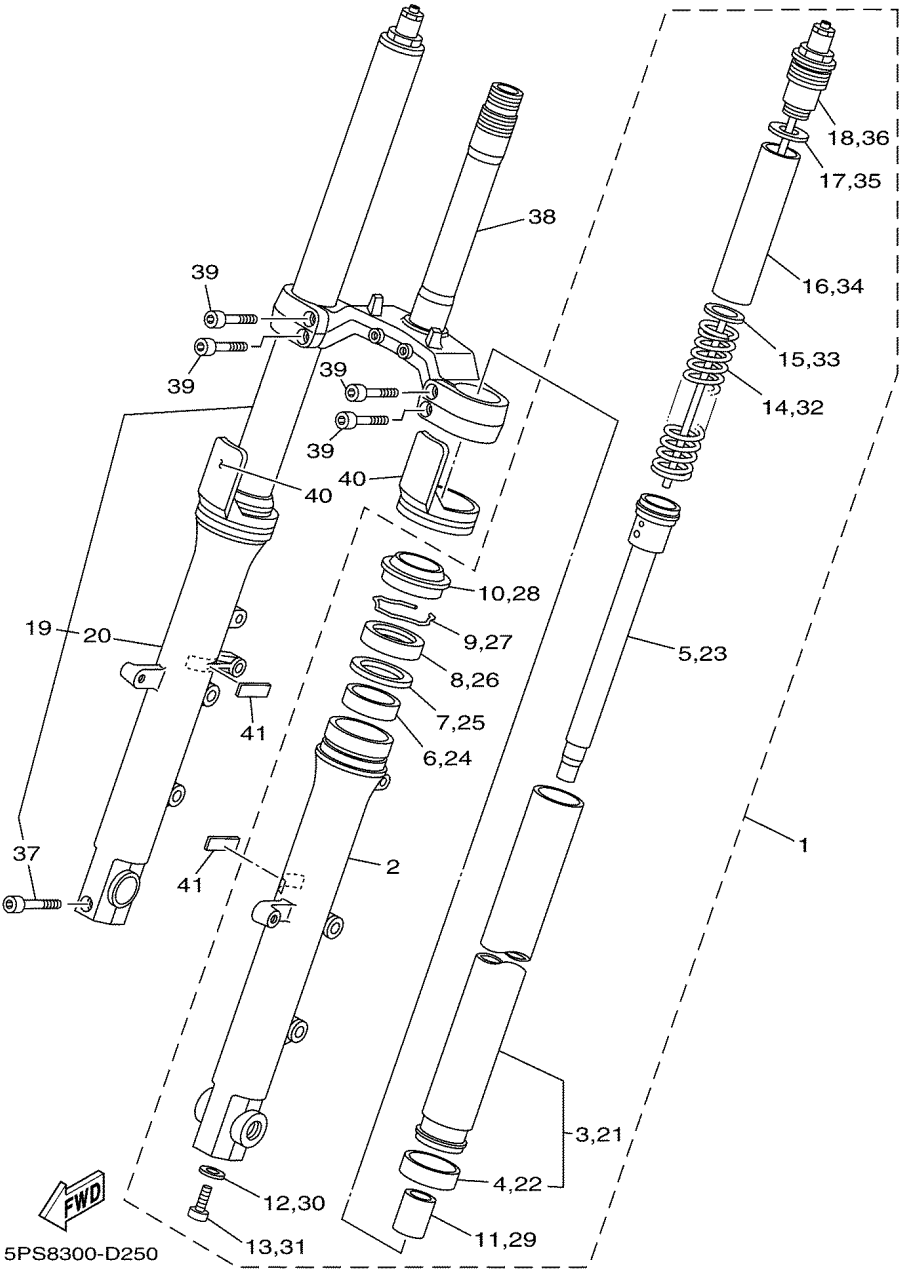

FUEL TANK


Ref No	Part No	Description
01	5PS-13971-00-00	Pipe, Fuel 1
02	90464-16007-00	Clamp
03	90464-16005-00	Clamp
04	5PS-13972-00-00	Pipe, Fuel 2
05	90467-12003-00	Clip
06	90467-12003-00	Clip
07	5PS-Y2410-10-05	Fuel Tank Comp.
07	5PS-Y2410-10-06	Fuel Tank Comp.
07	5PS-YK241-10-P5	Fuel Tank Comp.
08	5PS-24240-00-00	• . Graphic Set
08	5PS-24240-10-00	• . Graphic Set
09	5PW-2413B-00-00	Emblem
10	5PS-24191-00-00	Bracket, Fuel Tank 1
11	5PS-24181-00-00	Damper, Locating 1
12	5PS-24181-10-00	Damper, Locating 1
13	5PS-24183-00-00	Damper, Locating 3
14	90387-0602Y-00	Collar
15	5PS-24186-00-00	Washer, Special
16	92017-06025-00	Bolt, Button Head
17	95807-08016-00	Bolt, Flange
18	5EB-24183-00-00	Damper, Locating 3
19	90387-061W6-00	Collar
20	95027-06090-00	Bolt, Flange
21	5PS-24192-00-00	Bracket, Fuel Tank 2
22	92017-06010-00	Bolt, Button Head
23	5JW-24491-00-00	Bracket, Fuel Pump
24	5JW-24486-00-00	O-ring
25	90110-05014-00	Bolt, Hexagon Socket Head
26	5JJ-24602-00-00	Cap Assy
27	90110-05112-00	Bolt, Hexagon Socket Head
28	91317-05010-00	Bolt
29	5PS-24318-00-00	Pipe, Overflow
30	90467-09006-00	Clip
31	5PS-24318-00-00	Pipe, Overflow
32	90467-09006-00	Clip
33	5PS-2414H-10-00	Damper, Plate 1
34	5PS-28217-00-00	Damper 1
35	5PS-2139X-00-00	Damper
36	5PS-28372-00-00	Damper
37	5PS-13907-01-00	Fuel Pump Comp.

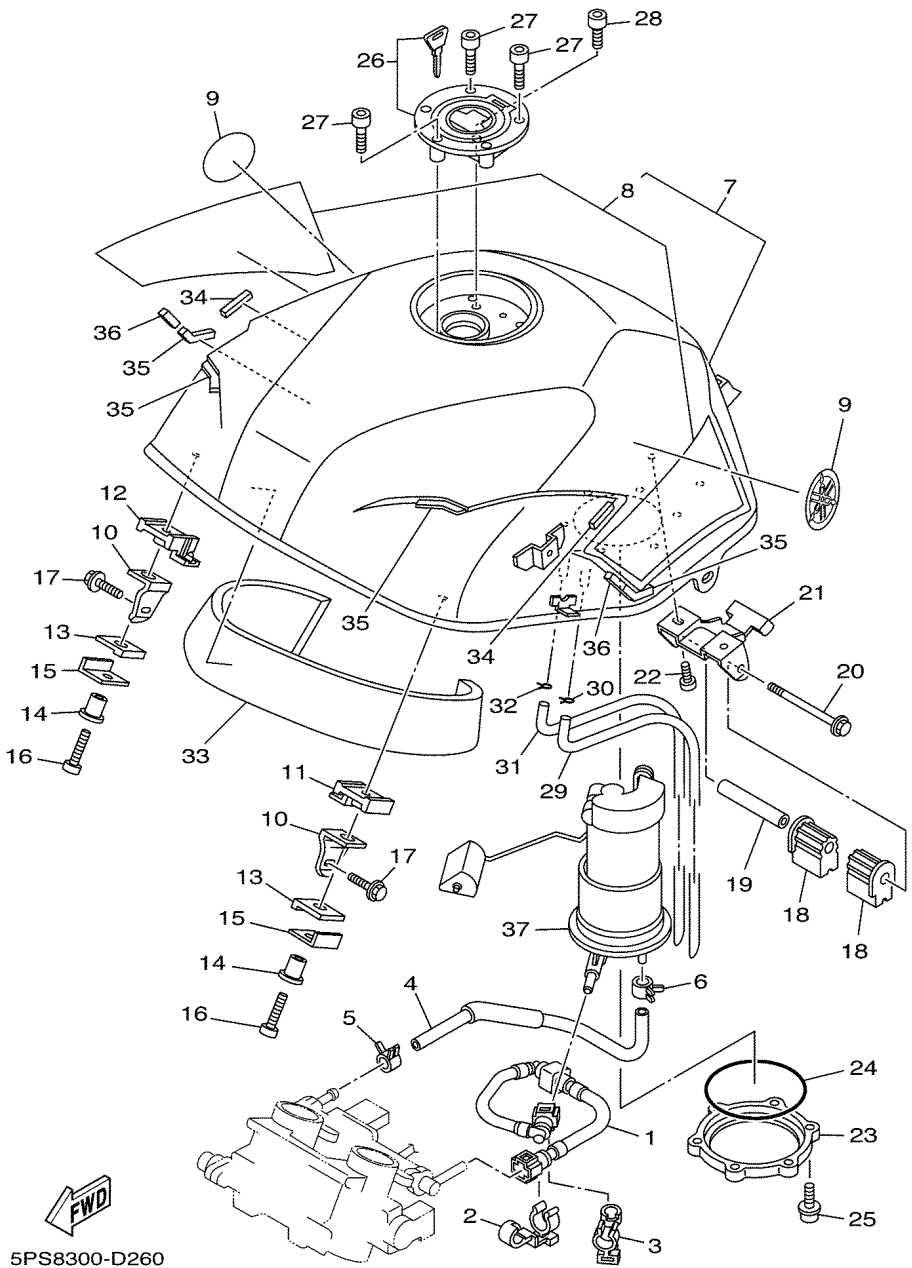


5PS8300-D260

SEAT

Ref No	Part No	Description
01	5PS-24730-01-00	Double Seat Assy
02	5PS-2470F-00-00	• . Seat Cover Comp.
03	4HM-24728-00-00	• . Bracket, Seat
04	90179-06635-00	• . Nut
05	22W-24741-00-00	• . Pad, Seat
06	90338-06018-00	• . Plug
07	5PS-24741-00-00	• . Pad, Seat
08	5LV-24737-00-00	• . Damper, Seat
09	4BP-24780-00-00	Seat Lock Assy
10	5PS-24792-00-00	Plate
11	95707-06500-00	Nut, Flange
12	5PS-2478E-00-00	Cable, Seat Lock
13	2TV-W2470-00-00	Seat Lock Assy
14	5PS-2117K-00-00	Stay, Lock
15	5PS-24746-00-00	Washer, Seat
16	90170-06183-00	Nut
17	5JJ-2475X-01-00	Cover,2
18	97707-40012-00	Screw, Tapping

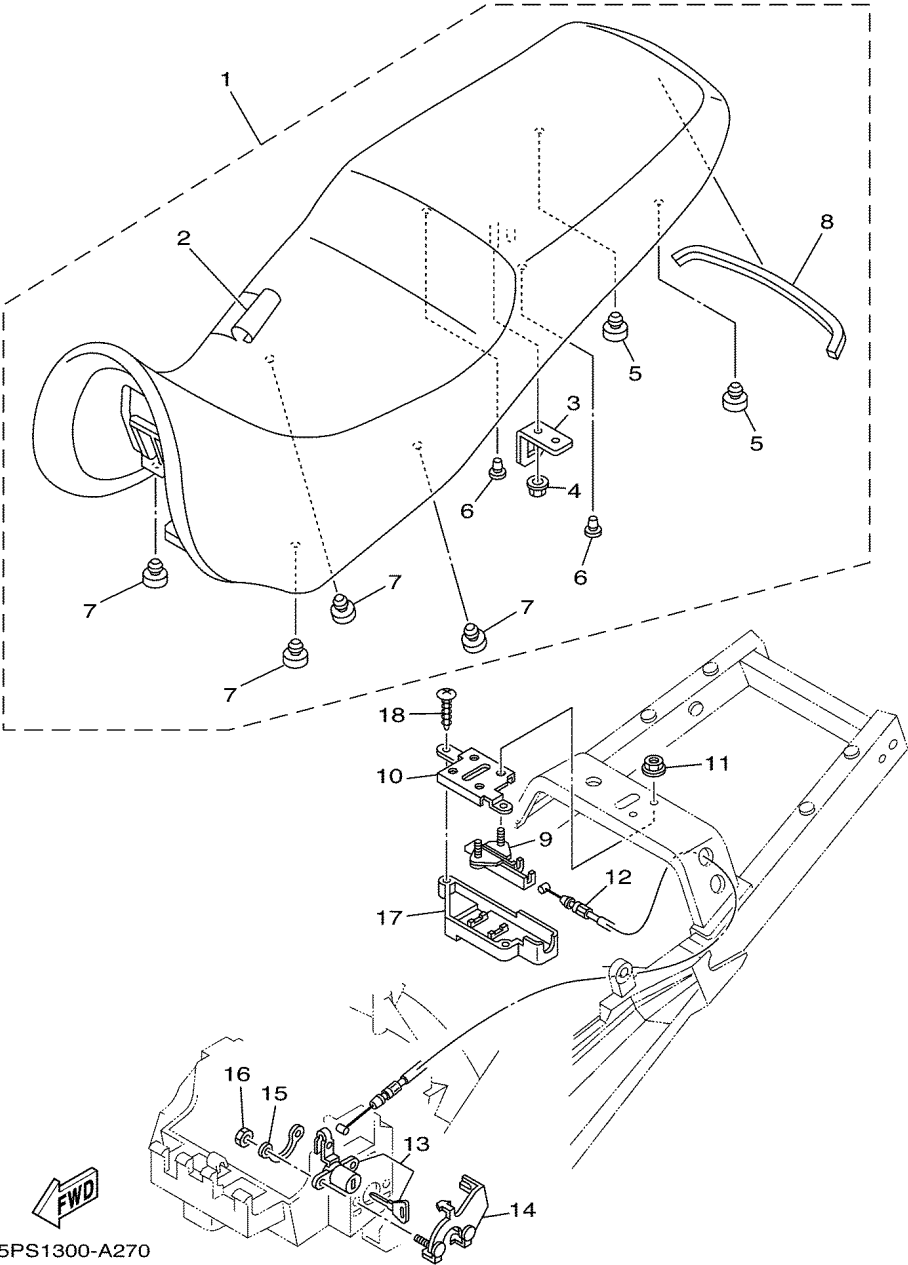


Ref No	Part No	Description
01	5PS-25168-00-98	Cast Wheel, Front
02	4XV-25117-00-00	Spacer, Bearing
03	93306-00420-00	Bearing
04	93106-28043-00	Oil Seal
05	*00-00000-00-00	Clutch Tune-up Kit
05	94112-18019-00	Tire
06	93900-00030-00	Valve, Rim
07	5MT-25398-00-00	Balancer, Wheel
07	5MT-25398-10-00	Balancer, Wheel
07	5MT-25398-20-00	Balancer, Wheel
08	4XV-25181-00-00	Axle, Wheel
09	90387-2200T-00	Collar

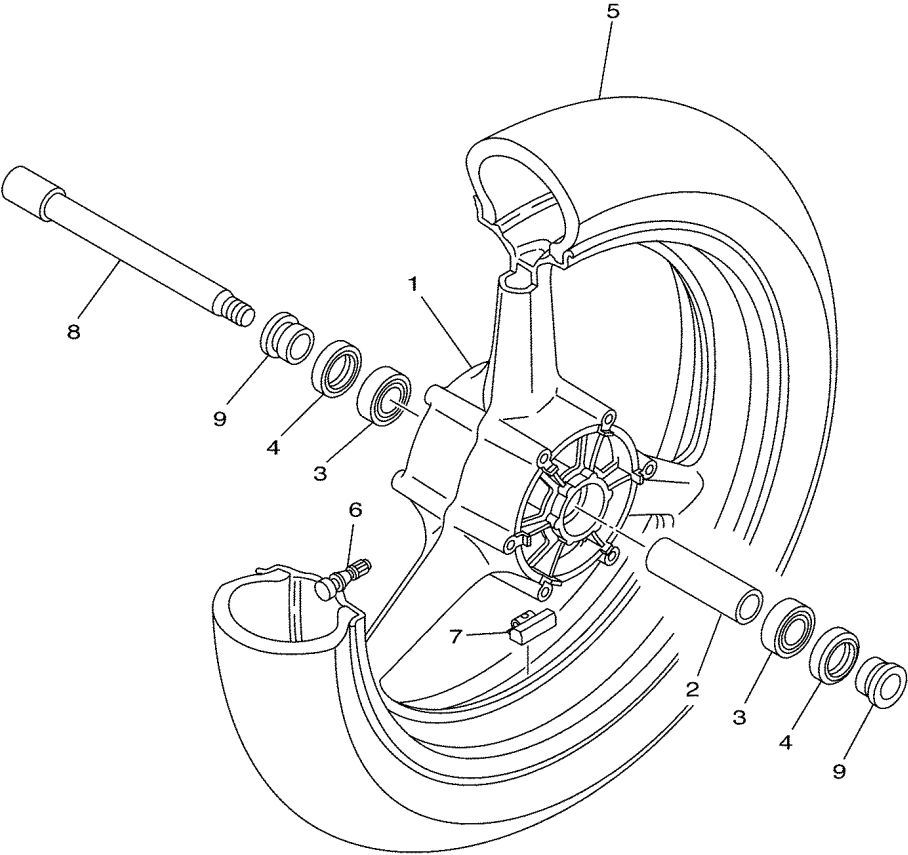


5PS1300-A280


Ref No	Part No	Description
01	5PX-2581T-00-00	Disk Brake Assy
02	90109-064G6-00	Bolt
03	5SL-2580T-00-00	Caliper Assy (left)
04	4SV-W0057-00-00	• . Piston Assy, Caliper
05	3MA-W0047-10-00	•• .. Caliper Seal Kit
06	4SV-W0057-10-00	• . Piston Assy, Caliper
07	3GM-W0047-10-00	•• .. Caliper Seal Kit
08	5SL-W0045-00-00	• . Brake Pad Kit
09	4SV-25919-00-00	• . Support, Pad
10	4SV-25924-00-00	• . Pin, Pad
11	3GM-25925-00-00	• . Clip
12	1J3-W0048-00-00	• . Bleed Screw Kit
13	5SL-2580U-00-00	Caliper Assy (right)
14	4SV-W0057-00-00	• . Piston Assy, Caliper
15	3MA-W0047-10-00	•• .. Caliper Seal Kit
16	4SV-W0057-10-00	• . Piston Assy, Caliper
17	3GM-W0047-10-00	•• .. Caliper Seal Kit
18	5SL-W0045-00-00	• . Brake Pad Kit
19	4SV-25919-00-00	• . Support, Pad
20	4SV-25924-00-00	• . Pin, Pad
21	3GM-25925-00-00	• . Clip
22	1J3-W0048-00-00	• . Bleed Screw Kit
23	90105-105A7-00	Bolt, Washer Based

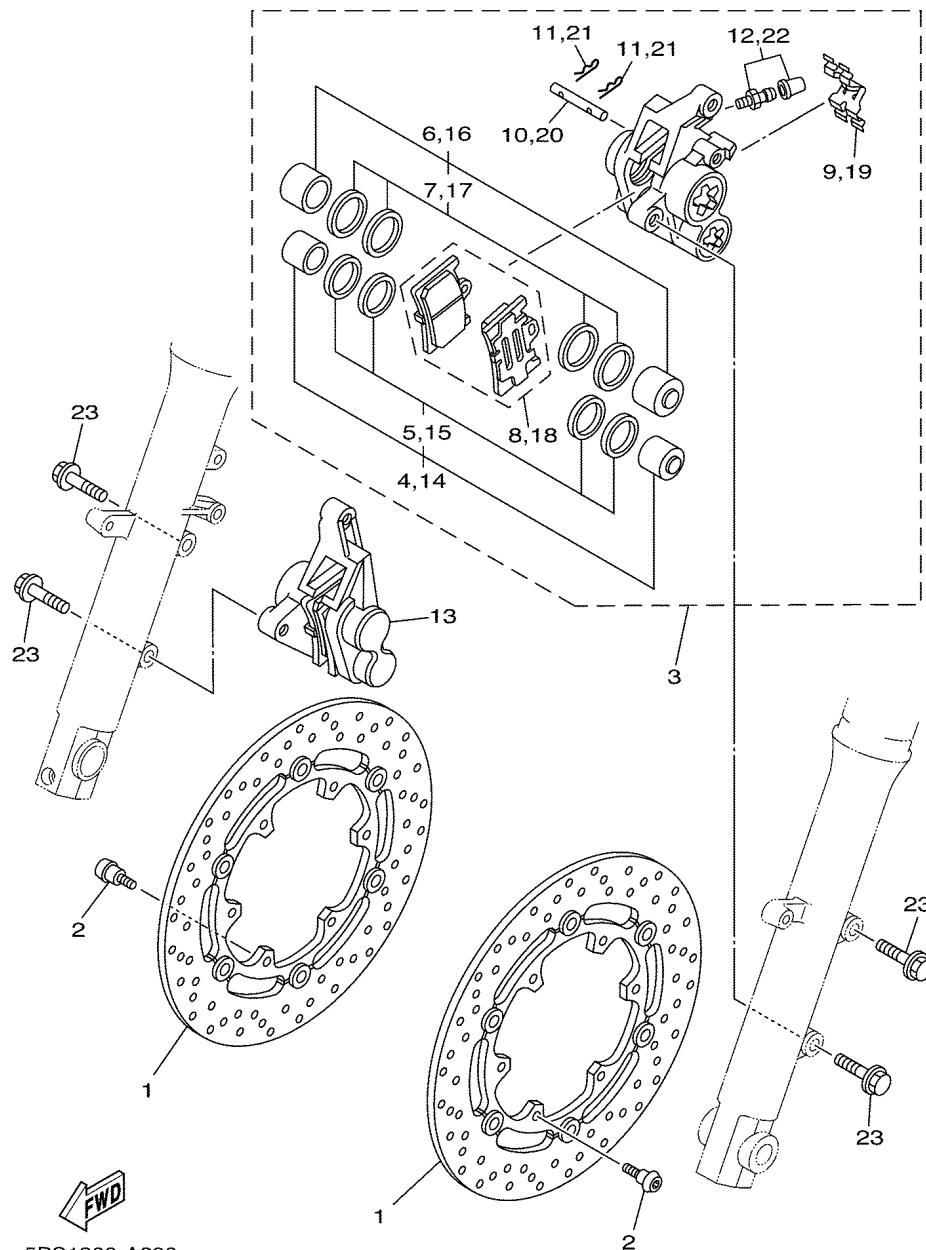

5PS1300-A290

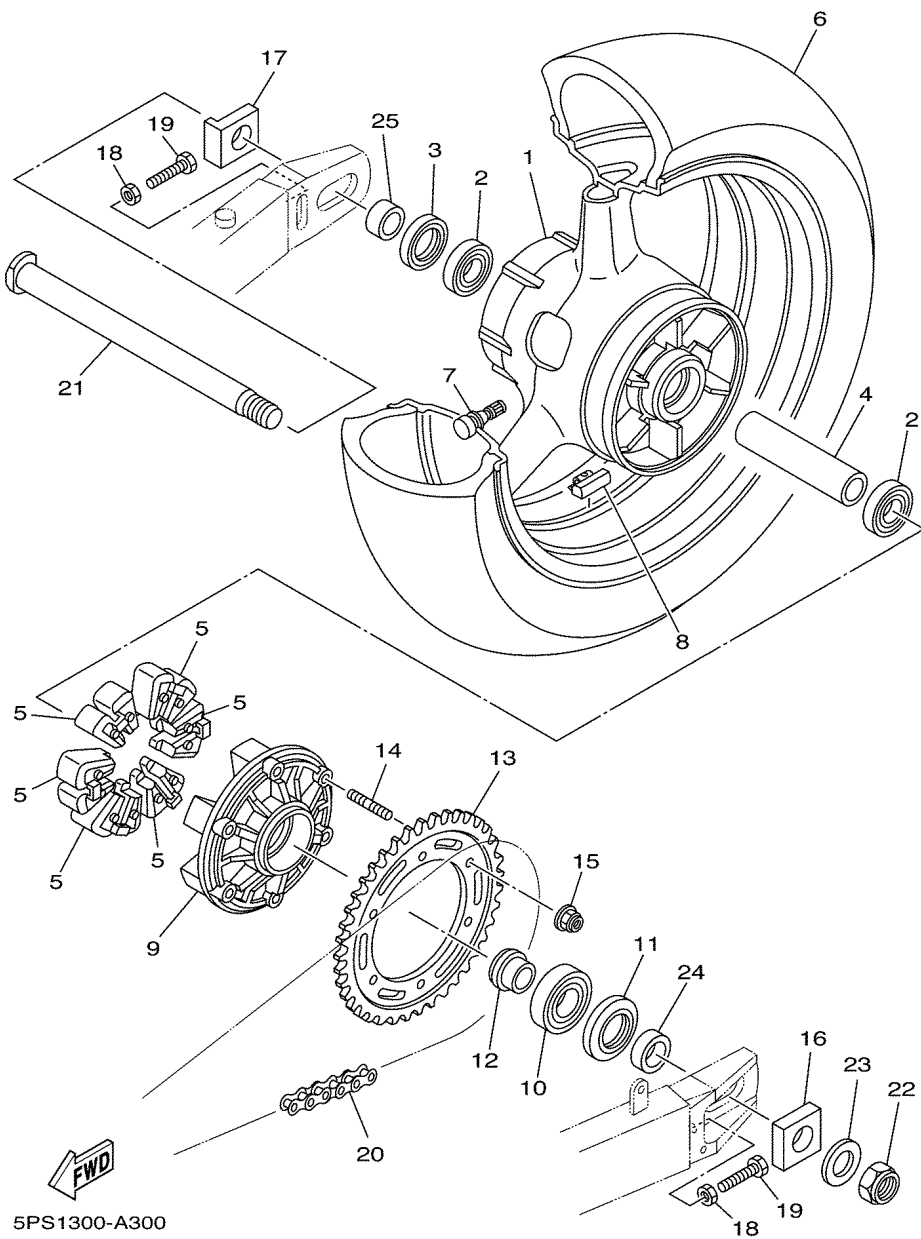


Ref No	Part No	Description
01	5PS-25338-00-98	Cast Wheel, Rear
02	93306-07806-00	Bearing
03	93106-35042-00	Oil Seal
04	5PS-25317-00-00	Spacer, Bearing
05	5EA-25364-00-00	Damper
06	*00-00000-00-00	Clutch Tune-up Kit
06	94116-17008-00	Tire
07	93900-00030-00	Valve, Rim
08	5MT-25398-00-00	Balancer, Wheel
08	5MT-25398-10-00	Balancer, Wheel
08	5MT-25398-20-00	Balancer, Wheel
09	5PS-25366-00-00	Clutch, Hub
10	93306-20644-00	Bearing
11	93106-40041-00	Oil Seal
12	4FM-25377-00-00	Collar, Wheel
13	5PS-25442-00-00	Sprocket, Driven
14	90116-10575-00	Bolt, Stud
15	95607-10200-00	Nut, Self-locking
16	5EB-25388-00-00	Puller, Chain 1
17	5PS-25389-00-00	Puller, Chain 2
18	95307-08600-00	Nut
19	90101-08766-00	Bolt
20	94581-46118-00	Chain
21	4FM-25381-10-00	Axle, Wheel
22	90185-24165-00	Nut, Self-locking
23	90201-257R5-00	Washer, Plate
24	5PS-25376-00-00	Collar, Wheel
25	5EB-25377-00-00	Collar, Wheel

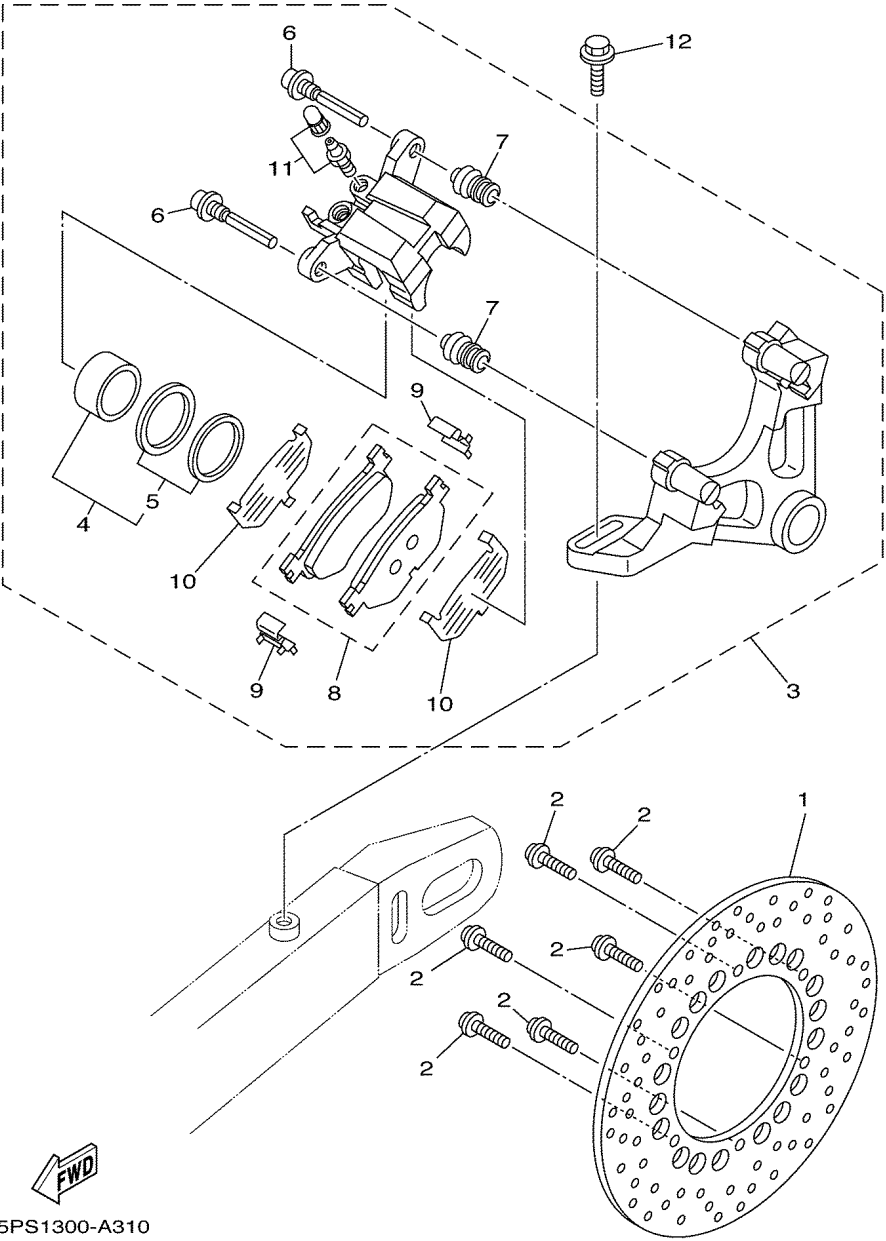


Ref No	Part No	Description
01	4JH-2582W-00-00	Disk, Rear Brake 2
02	90109-083G4-00	Bolt
03	5PS-2580W-01-00	Caliper Assy, Rear 2
04	5JW-W0057-00-00	• . Piston Assy, Caliper
05	5JW-W0047-00-00	•• .. Caliper Seal Kit
06	5JW-25914-10-00	• . Pin, Slide
07	4TT-25937-00-00	• . Boot 2
08	5PS-W0046-00-00	• . Brake Pad Kit 2
09	5JW-25919-00-00	• . Support, Pad
10	5GJ-25827-00-00	• . Shim, Caliper
11	51L-W0048-00-00	• . Bleed Screw Kit
12	90105-08386-00	Bolt, Washer Based


5PS1300-A310

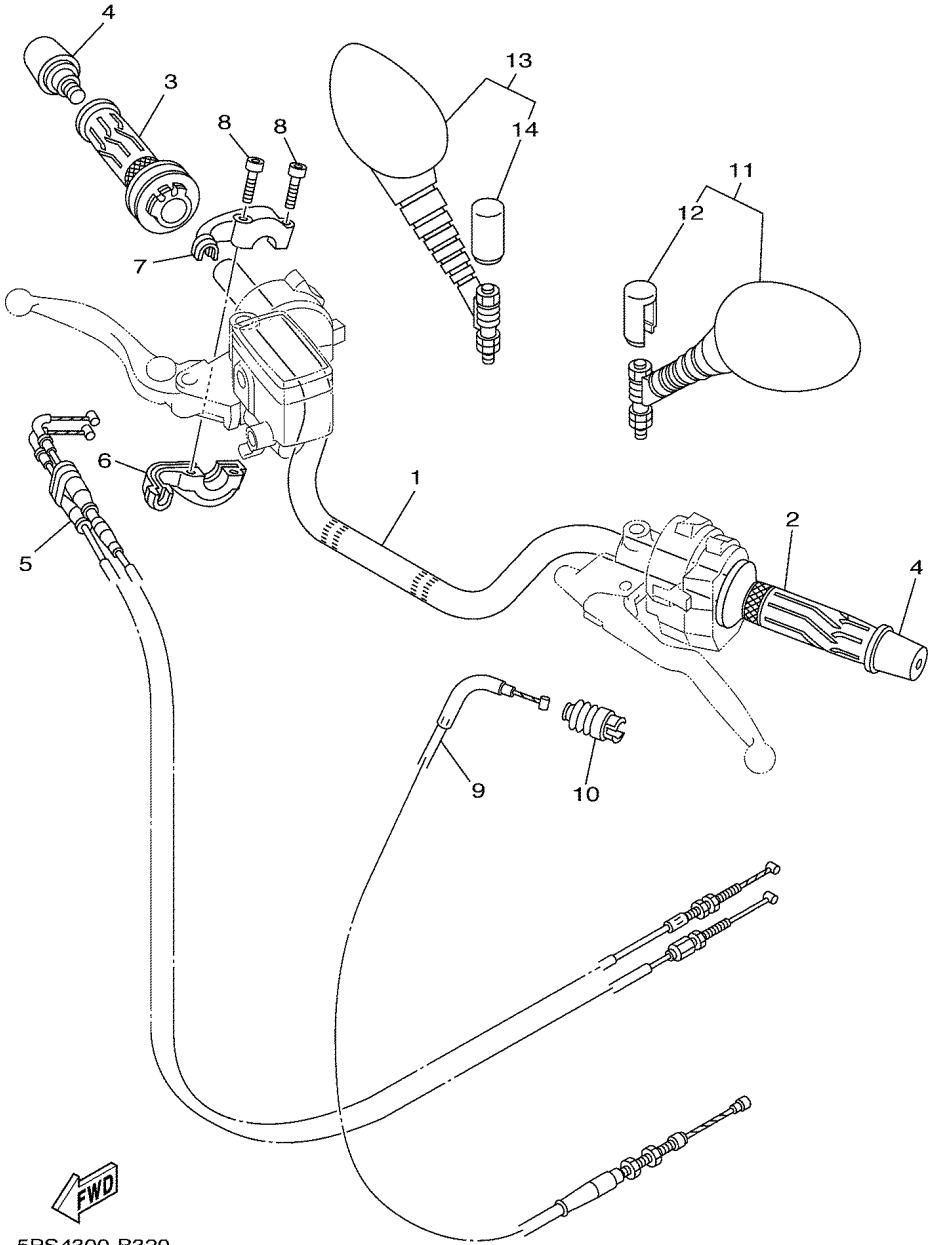

Ref No	Part No	Description
01	5PS-26111-01-00	Handlebar
02	5JW-26241-00-00	Grip
03	5PS-26240-00-00	Grip Assy
04	51J-26246-01-00	End, Grip
05	5PS-26302-00-00	Throttle Cable Assy
06	4KG-26281-00-00	Cap, Grip Upper
07	3XW-26282-01-00	Cap, Grip Lower
08	91317-05035-00	Bolt
09	5PS-26335-01-00	Cable, Clutch
10	1E6-26342-00-00	Boot, Cable
11	4TX-26280-42-00	Rear View Mirror Assy(left)
12	5PS-26133-01-00	• . Cap
13	4TX-26290-42-00	Rear View Mirror Assy (right)
14	5PS-26133-01-00	• . Cap

Ref No	Part No	Description
01	5PS-W2587-00-00	Master Cylinder Sub Assy
02	5VS-W0041-00-00	• . Cylinder Kit, Master
03	5VS-25852-00-00	• . Cap, Reservoir
04	5VS-25855-00-00	• . Bush,diaphragm
05	5VS-25854-00-00	• . Diaphragm, Reservoir
06	5VS-2589H-00-00	• . Screw
07	5VS-2589F-00-00	Bolt, Lever
08	95617-06100-00	Nut, U
09	5VS-83922-00-00	Lever 2
10	5VS-26332-00-00	Bolt
11	5VS-25867-00-00	Bracket, Master Cylinder
12	4HM-83980-00-00	Front Stop Switch Assy
13	98502-04012-00	Screw, Pan Head
14	92902-04100-00	Washer, Spring
15	92902-04600-00	Washer, Plate
16	5PS-25872-10-00	Hose, Brake 1
17	90401-10159-00	Bolt, Union
18	90401-10172-00	Bolt, Union
19	90201-10118-00	Washer, Plate
20	1UA-82591-00-00	Band
21	90105-06790-00	Bolt, Washer Based
22	2R8-25876-20-00	Holder, Brake Hose 2
23	90105-06790-00	Bolt, Washer Based

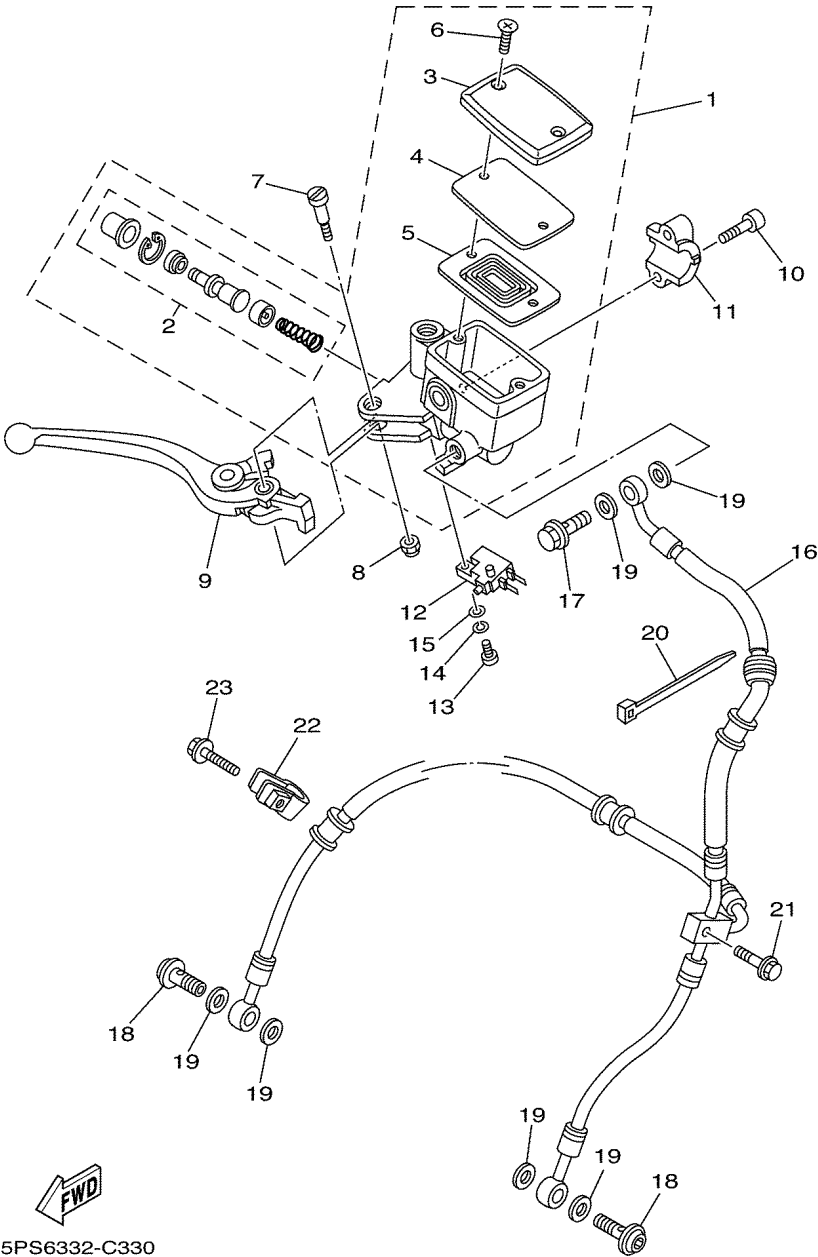


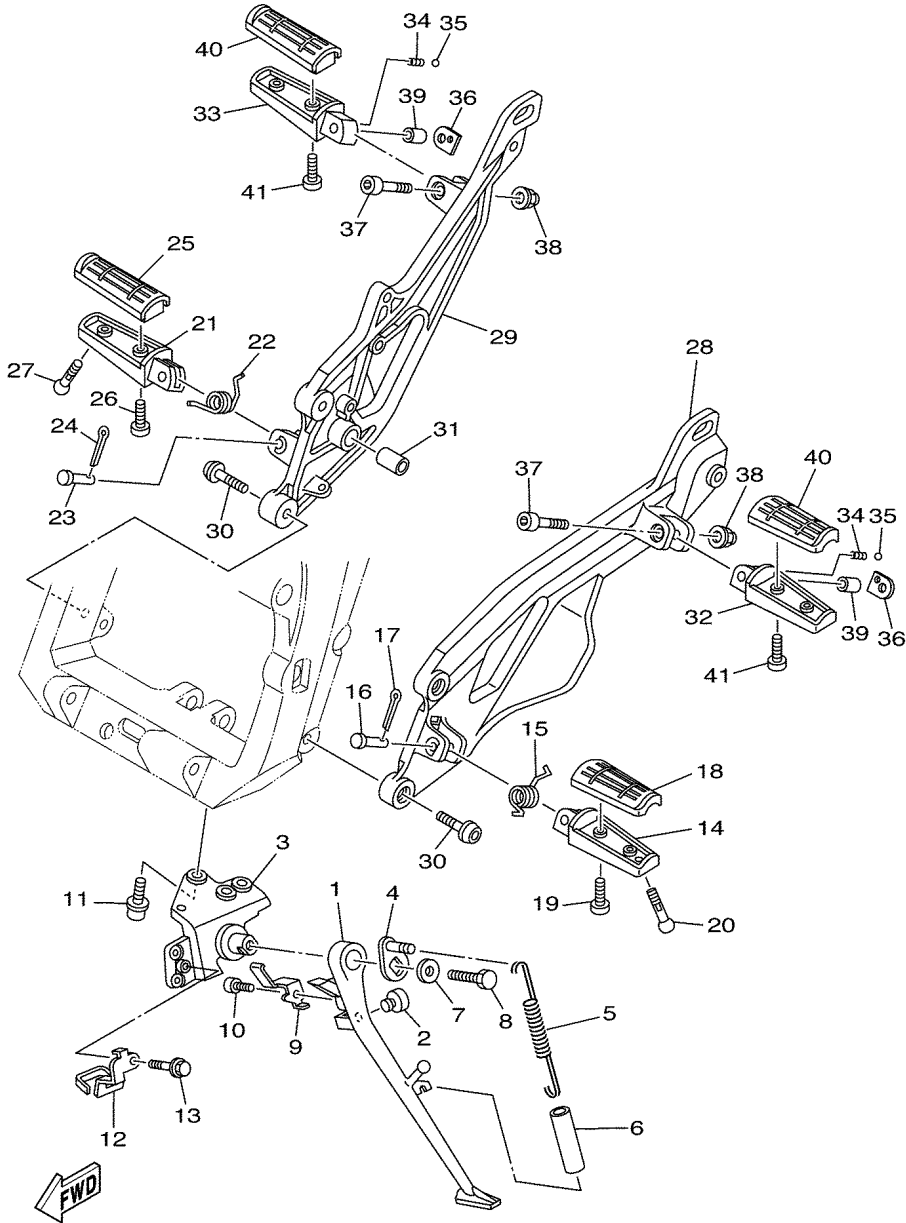


5PS1300-A340

Ref No	Part No	Description
01	5PS-27311-00-00	Stand, Side
02	128-27114-00-00	Stopper, Main Stand
03	5PS-27321-00-00	Bracket, Side Stand
04	5PS-27352-00-00	Hook, Side Stand
05	90506-20008-00	Spring, Tension
06	90445-197J2-00	Hose
07	90201-081R9-00	Washer, Plate
08	90101-08662-00	Bolt
09	5JJ-27315-00-00	Link, Side Stand
10	90110-06226-00	Bolt, Hexagon Socket Head
11	90109-082F5-00	Bolt
12	5PS-27323-00-00	Bracket 1
13	95027-06010-00	Bolt, Flange
14	4BH-27451-01-00	Footrest
15	90508-20572-00	Spring, Torsion
16	90240-08084-00	Pin, Clevis
17	91401-25015-00	Pin, Cotter
18	3YX-27413-00-00	Cover, Footrest
19	90157-05079-00	Screw, Pan Head
20	90109-083E2-00	Bolt
21	4BH-27461-01-00	Footrest
22	90508-20572-00	Spring, Torsion
23	90240-08084-00	Pin, Clevis
24	91401-25015-00	Pin, Cotter
25	3YX-27413-00-00	Cover, Footrest
26	90157-05079-00	Screw, Pan Head
27	90109-083E2-00	Bolt
28	5PS-27442-00-00	Bracket 2
29	5PS-27443-00-00	Bracket 3
30	90110-08220-00	Bolt, Hexagon Socket Head
31	90383-14001-00	Bush, Formed
32	5LV-27431-01-00	Footrest, Rear 1
33	5LV-27441-01-00	Footrest, Rear 2
34	90501-15001-00	Spring, Compression
35	93501-04011-00	Ball
36	5JJ-27437-00-00	Washer, Special
37	91314-06040-00	Bolt
38	95604-06200-00	Nut, U Flange
39	90387-06014-00	Collar
40	3YX-27413-00-00	Cover, Footrest
41	90157-05134-00	Screw, Pan Head

Ref No	Part No	Description
01	5PS-27211-00-00	Pedal, Brake
02	90201-14215-00	Washer, Plate
03	5PS-27212-00-00	Shaft, Brake Pedal
04	92014-06025-00	Bolt, Button Head
05	92990-06600-00	Washer, Plate
06	90506-20223-00	Spring, Tension
07	5PS-2583V-00-00	Rr. Master Cylinder Assy.
08	5PS-W0042-50-00	• . Cylinder Kit, Master
09	3LN-2585G-00-00	•• .. Circlip
10	5VX-2582A-00-00	• . Joint
11	4BP-2585F-00-00	• . O-ring
12	5VS-25894-00-00	Tank, Reservoir
13	5SL-25854-00-00	Diaphragm, Reservoir
14	5SL-25855-00-00	Bush, diaphragm
15	5SL-25852-00-00	Cap, Reservoir
16	90467-090A1-00	Clip
17	5PS-25895-10-00	Hose, Reservoir
18	47X-27222-00-00	Joint
19	95307-08700-00	Nut
20	92014-08030-00	Bolt, Button Head
21	90240-08013-00	Pin, Clevis
22	90201-08083-00	Washer, Plate
23	91401-20012-00	Pin, Cotter
24	5PS-21228-00-00	Bracket, Reserve Tank
25	90119-06044-00	Bolt, With Washer
26	95807-06014-00	Bolt, Flange
27	90183-06023-00	Nut, Spring
28	5PS-25874-10-00	Hose, Brake
29	90401-10172-00	Bolt, Union
30	90201-10118-00	Washer, Plate

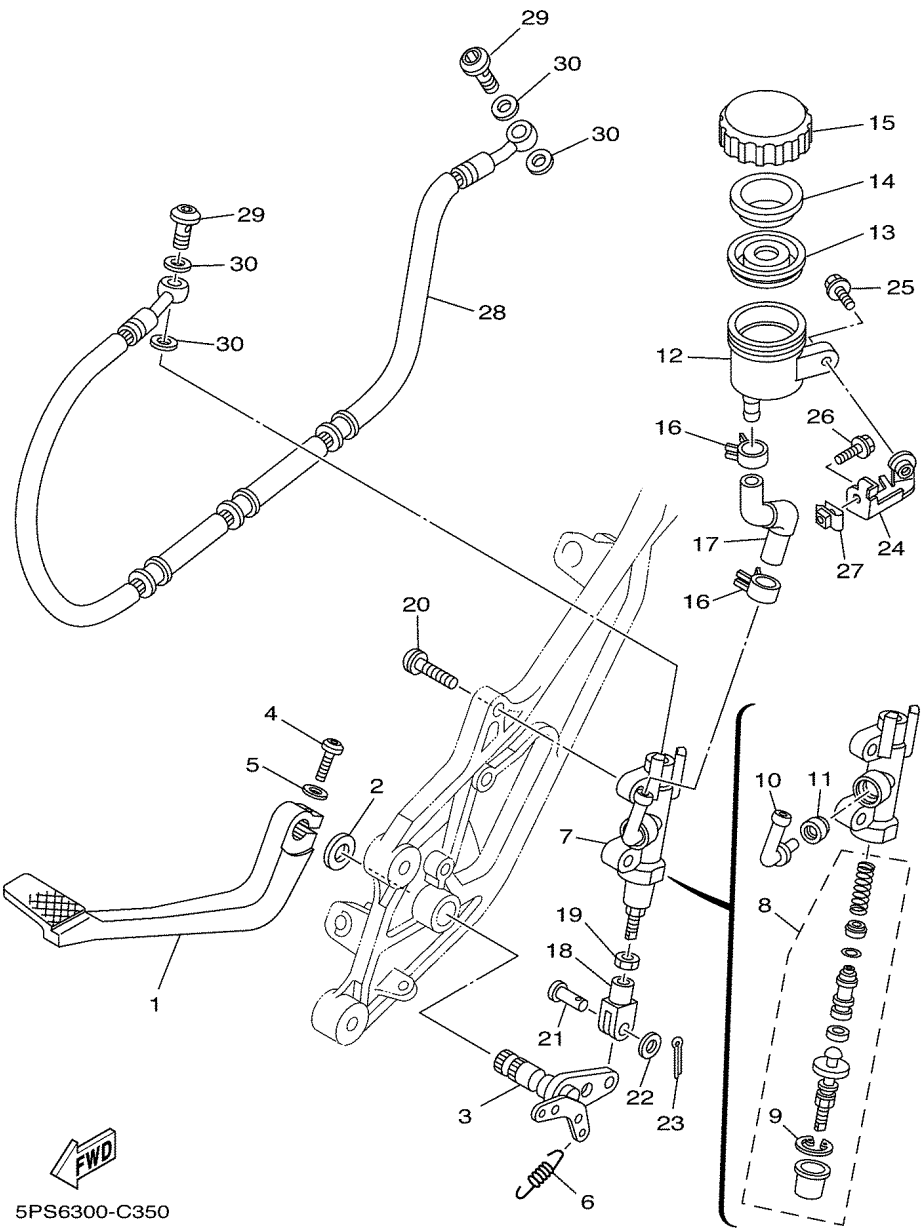



5PS6300-C350

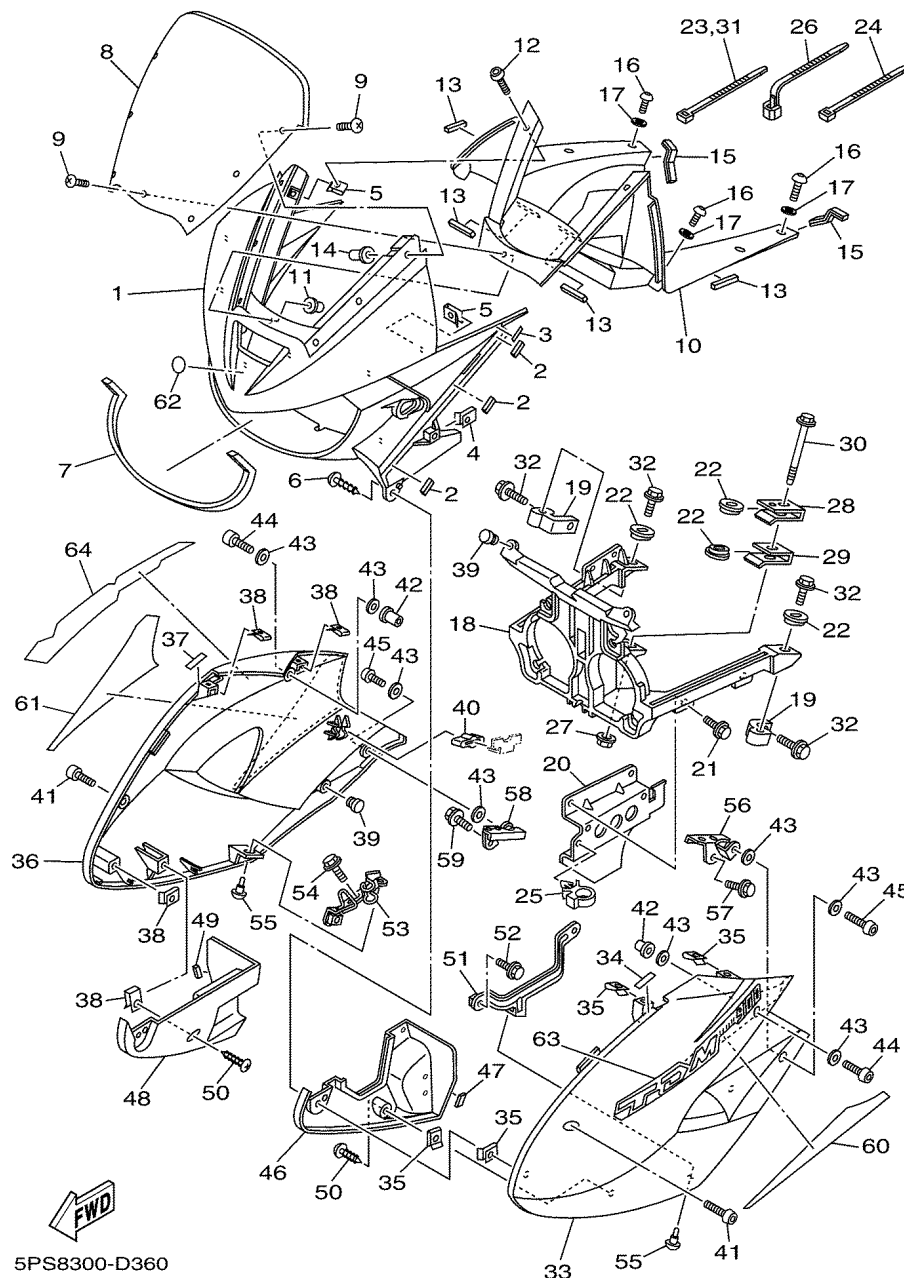


5PS8300-D360

Ref No	Part No	Description
01	5PS-2835G-00-P1	Body, Front Upper 1
01	5PS-2835G-00-P3	Body, Front Upper 1
02	4TX-21717-00-00	Damper
03	5PS-2178A-00-00	Label
04	90183-05061-00	Nut, Spring
05	90183-05042-00	Nut, Spring
06	90167-05080-00	Screw, Tapping
07	5PS-84163-00-00	Damper
08	5PS-28381-01-00	Windshield
09	90150-05024-00	Screw, Round Head
10	5PS-2836K-00-00	Panel, Inner 1
11	90179-05523-00	Nut
12	90167-05080-00	Screw, Tapping
13	5PS-28217-00-00	Damper 1
14	90179-05523-00	Nut
15	5PS-28345-00-00	Mole 1
16	90167-05076-00	Screw, Tapping
17	90202-05224-00	Washer, Plate
18	5PS-28356-01-00	Stay 1
19	5PS-28332-00-00	Stay, Leg Shield
20	5PS-28336-00-00	Plate
21	90119-06044-00	Bolt, With Washer
22	5PS-28373-00-00	Collar
23	90465-10098-00	Clamp
24	90464-35132-00	Clamp
25	90464-07209-00	Clamp
26	90464-15195-00	Clamp
27	95707-08500-00	Nut, Flange
28	5PS-28396-00-00	Plate 1
29	5PS-28397-00-00	Plate 2
30	5PS-28331-00-00	Bolt, Leg Shield
31	90465-10098-00	Clamp
32	95817-08025-00	Bolt, Flange
33	5PS-2835U-00-P5	Panel 1
33	5PS-2835U-00-P6	Panel 1
33	5PS-2835U-00-P7	Panel 1
34	5PS-2178A-00-00	Label
35	90183-05042-00	Nut, Spring
36	5PS-2835V-00-P5	Panel 2
36	5PS-2835V-00-P6	Panel 2
36	5PS-2835V-00-P7	Panel 2
37	5PS-2178A-00-00	Label
38	90183-05042-00	Nut, Spring
39	90338-10132-00	Plug
40	15A-21717-00-00	Damper
41	90110-05201-00	Bolt, Hexagon Socket Head
42	90179-05523-00	Nut
43	90202-05224-00	Washer, Plate
44	90149-05299-00	Screw
45	90110-05201-00	Bolt, Hexagon Socket Head
46	5PS-2837N-01-00	Grill, Air Intake 1
47	4TX-21717-00-00	Damper
48	5PS-2837R-00-00	Grill, Air Intake 2
49	4TX-21717-00-00	Damper



Ref No	Part No	Description
50	97707-50016-00	Screw, Tapping
51	5PS-28321-00-00	Stay 1
52	95807-06020-00	Bolt, Flange
53	5PS-28357-01-00	Stay 2
54	95807-06020-00	Bolt, Flange
55	90269-07077-00	Rivet
56	5PS-2836A-00-00	Bracket 1
57	95807-06012-00	Bolt, Flange
58	5PS-2836E-00-00	Bracket 2
59	95807-06012-00	Bolt, Flange
60	5PS-28393-00-00	Graphic 3
60	5PS-28393-10-00	Graphic 3
61	5PS-28394-00-00	Graphic 4
61	5PS-28394-10-00	Graphic 4
62	5LV-2836B-01-00	Tuning Fork Mark
63	5PS-28391-50-00	Graphic 1
63	5PS-28391-60-00	Graphic 1
63	5PS-28391-70-00	Graphic 1
64	5PS-28392-50-00	Graphic 2
64	5PS-28392-60-00	Graphic 2
64	5PS-28392-70-00	Graphic 2

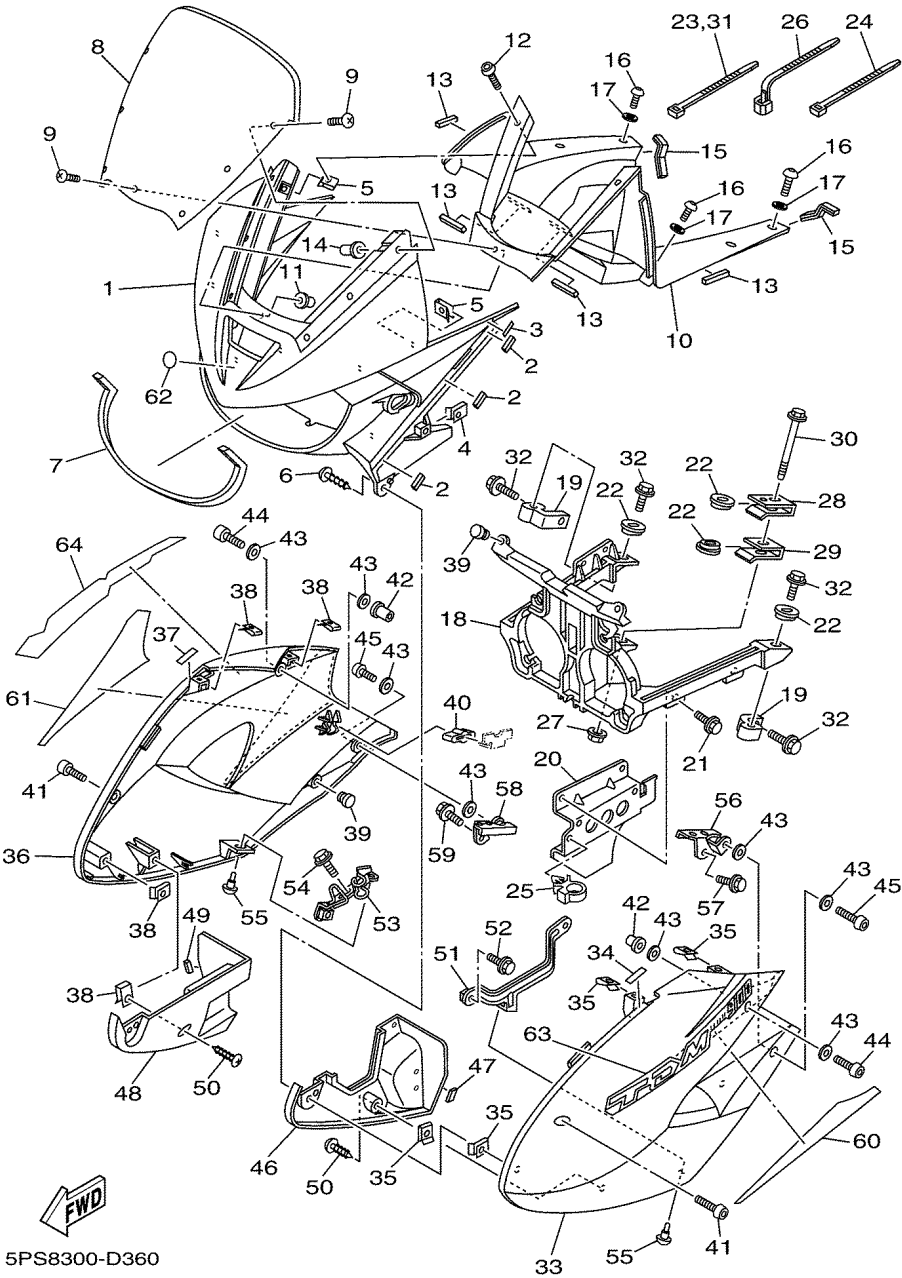

Ref No	Part No	Description
01	5PS-81410-00-00	Stator Assy
02	5PS-81450-00-00	Rotor Assy
03	90110-06042-00	Bolt, Hexagon Socket Head
04	90110-05011-00	Bolt, Hexagon Socket Head
05	90465-08380-00	Clamp


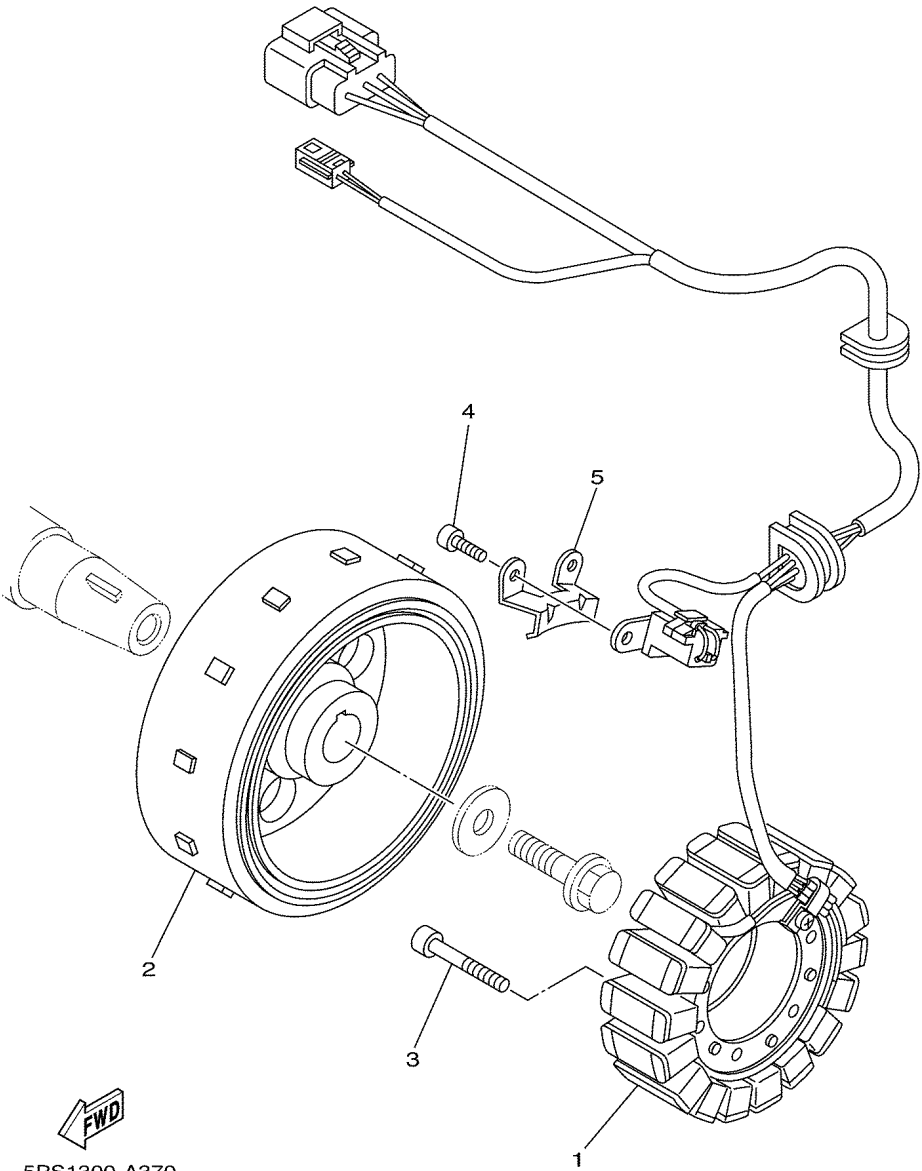


Ref No	Part No	Description
01	3LD-81890-00-00	Motor Assy
02	3AJ-81801-00-00	• . Brush Set
03	3AJ-81809-00-00	• . Washer Kit
04	3AJ-81830-00-00	• . Front Bracket Assy
05	3AJ-81826-00-00	• . Bolt
06	11H-81844-00-00	• . Gasket
07	1FK-81847-00-00	• . O-ring
08	1HX-81815-00-00	Cord, Starter Motor
09	4G0-81871-00-00	• . Cap
10	4XV-8182A-00-00	Nut
11	95817-06050-00	Bolt, Flange

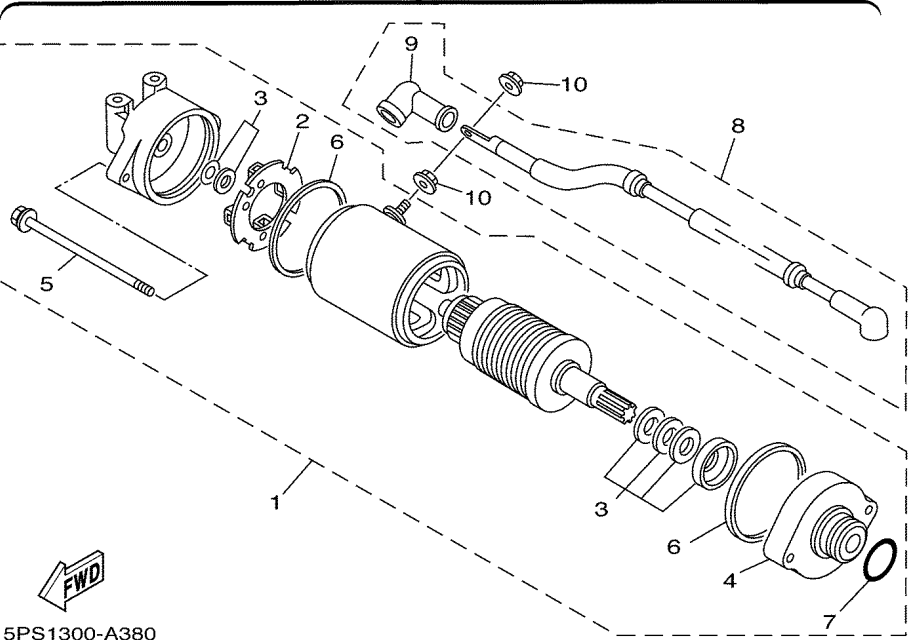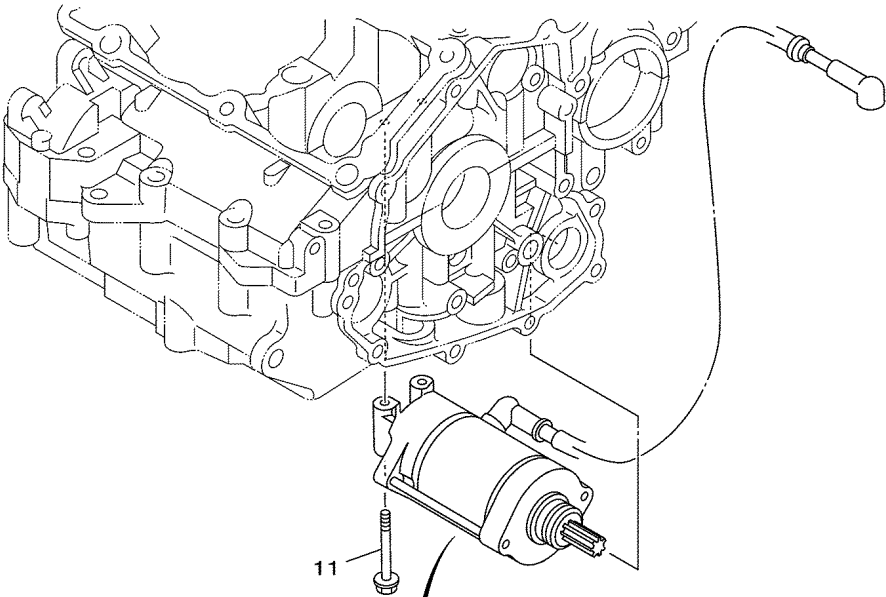


5PS1300-A380

Ref No	Part No	Description
01	5PW-83310-01-00	Front Flasher Light Assy 1
02	1KH-83311-00-00	• . Bulb, Flasher
03	5PW-8333A-00-00	• . Lens Comp
04	97706-04012-00	• . Screw, Tapping
05	5PW-83320-01-00	Front Flasher Light Assy 2
06	1KH-83311-00-00	• . Bulb, Flasher
07	5PW-8334A-00-00	• . Lens Comp
08	97706-04012-00	• . Screw, Tapping
09	5PW-83318-00-00	Stay, Flasher 1
10	5PS-83330-01-00	Rear Flasher Light Assy 1
11	1KH-83311-00-00	• . Bulb, Flasher
12	5PW-8334A-00-00	• . Lens Comp
13	97706-04012-00	• . Screw, Tapping
14	5PS-83340-01-00	Rear Flasher Light Assy 2
15	1KH-83311-00-00	• . Bulb, Flasher
16	5PW-8333A-00-00	• . Lens Comp
17	97706-04012-00	• . Screw, Tapping
18	5PW-83318-00-00	Stay, Flasher 1

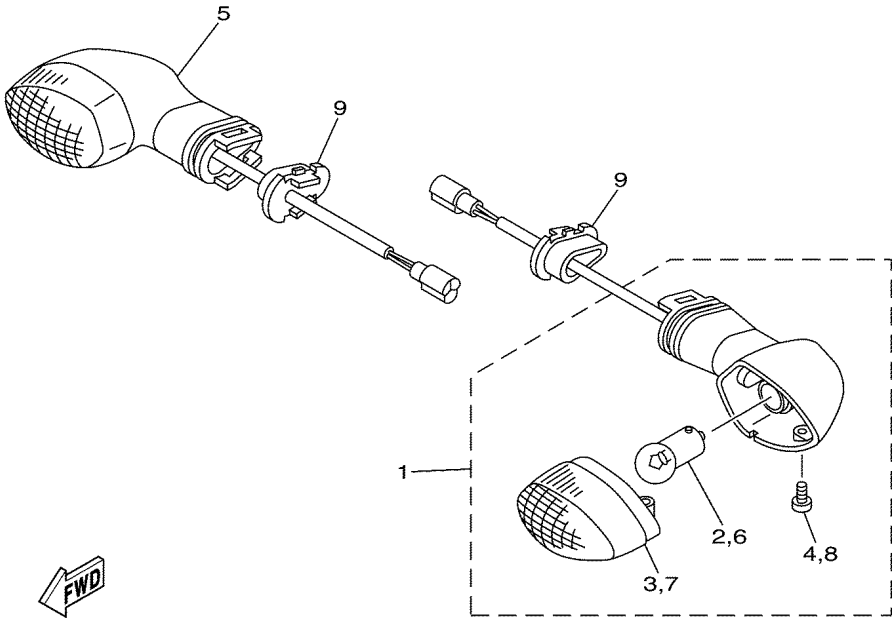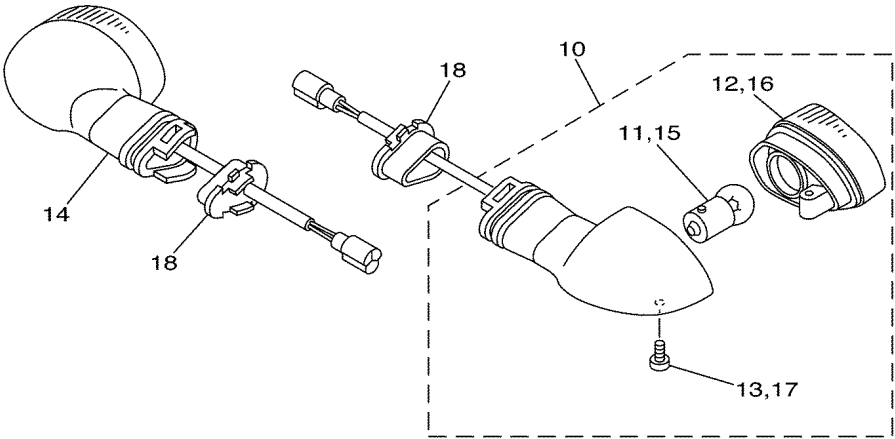


5PS1300-A390

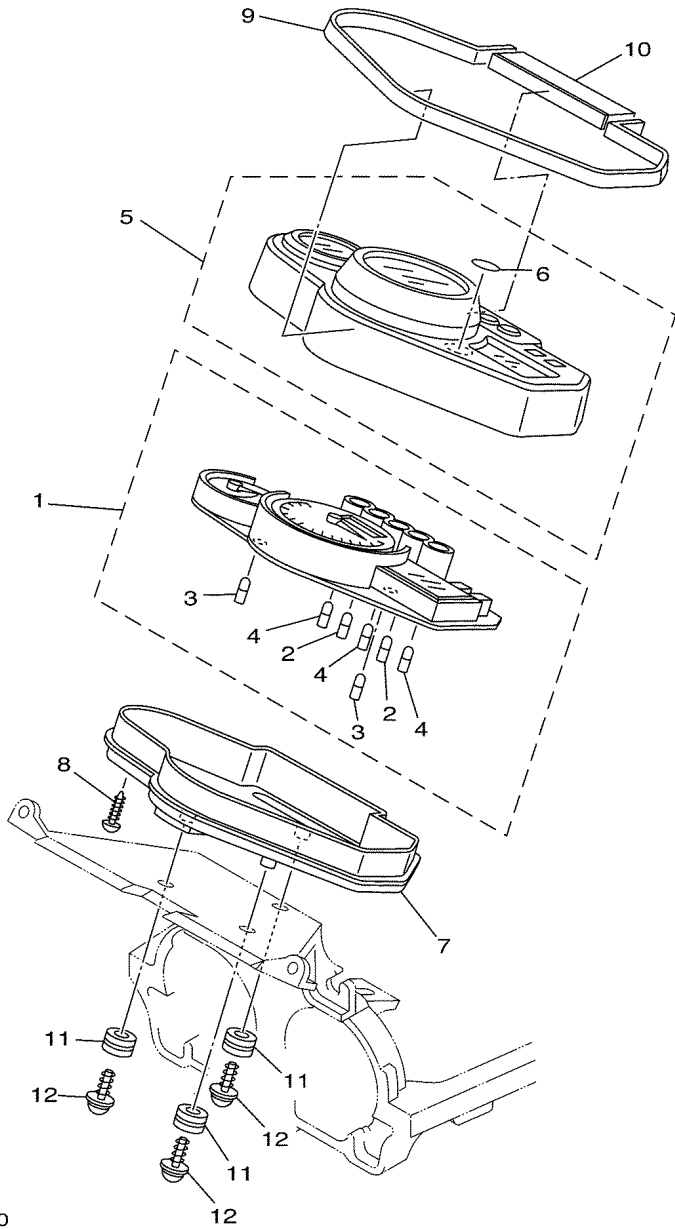

Ref No	Part No	Description
01	5PS-83570-20-00	Speedometer Assy
02	4YR-83517-00-00	• . Bulb
03	4YR-83517-10-00	• . Bulb
04	5PS-83517-00-00	• . Bulb
05	5PS-8353E-00-00	Case, Meter Upper
06	5GT-2836B-00-00	• . Tuning Fork Mark
07	5PS-83572-00-00	Case, Speedometer Lower
08	97707-40016-00	Screw, Tapping
09	5PS-83523-00-00	Damper
10	5PS-83541-00-00	Damper
11	5PS-83513-00-00	Damper
12	90164-05014-00	Screw, Tapping


5PS1300-A400

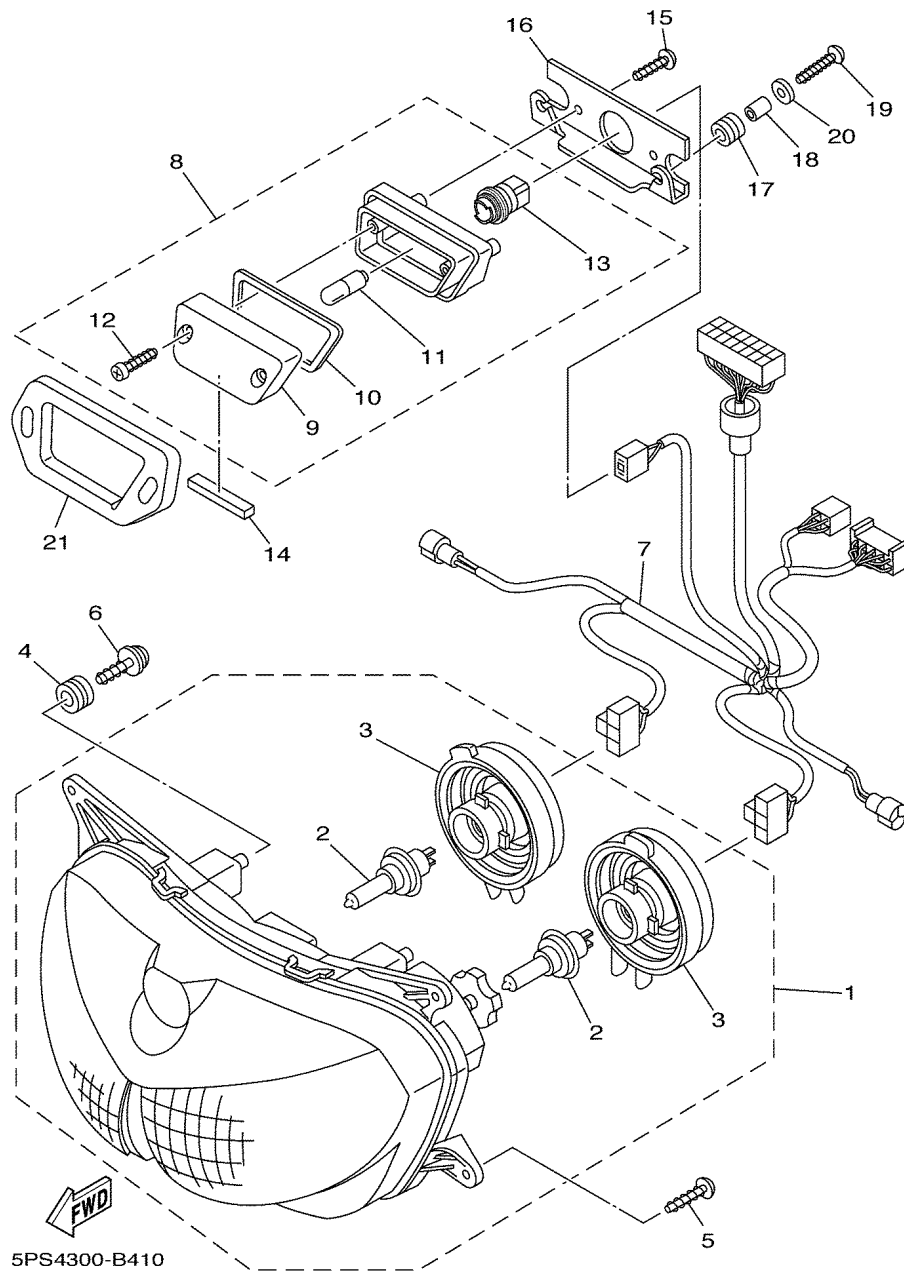

HEADLIGHT


Ref No	Part No	Description
01	5PS-84310-00-00	Headlight Unit Assy
02	*00-00000-00-00	• . Clutch Tune-up Kit
03	4TV-84397-00-00	• . Cover, Socket
04	5PS-83513-00-00	Damper
05	97707-50016-00	Screw, Tapping
06	90164-05014-00	Screw, Tapping
07	5PS-84359-10-00	Cord, Headlight
08	3GM-84301-01-00	Pilot Light Assy 1
09	3GM-84321-00-00	• . Lens Assy
10	3GM-84322-00-00	• . Gasket, Lens
11	47G-85353-00-00	• . Bulb
12	3GM-84192-10-00	• . Screw, Special
13	3GM-84346-00-00	• . Socket, Pilot Light
14	4XV-2834E-00-00	Damper 1
15	90167-05025-00	Screw, Tapping
16	4TX-8431R-00-00	Stay, Setting
17	90480-10517-00	Grommet
18	90387-052U5-00	Collar
19	90167-05037-00	Screw, Tapping
20	90201-054K4-00	Washer, Plate
21	3GM-84367-50-00	Damper, Headlight 2

Ref No	Part No	Description
01	5PS-84710-00-00	Taillight Unit Assy
02	1A2-84714-41-00	• . Bulb
03	5PS-84721-00-00	• . Lens, Taillight
04	47X-84723-00-00	• . Gasket, Tail Lens
05	5PS-84735-00-00	• . Cord Assy
06	90480-14323-00	Grommet
07	90201-06071-00	Washer, Plate
08	90387-066Y6-00	Collar
09	95307-06600-00	Nut
10	3Y6-85130-02-00	Rear Reflector Assy
11	95707-05500-00	Nut, Flange

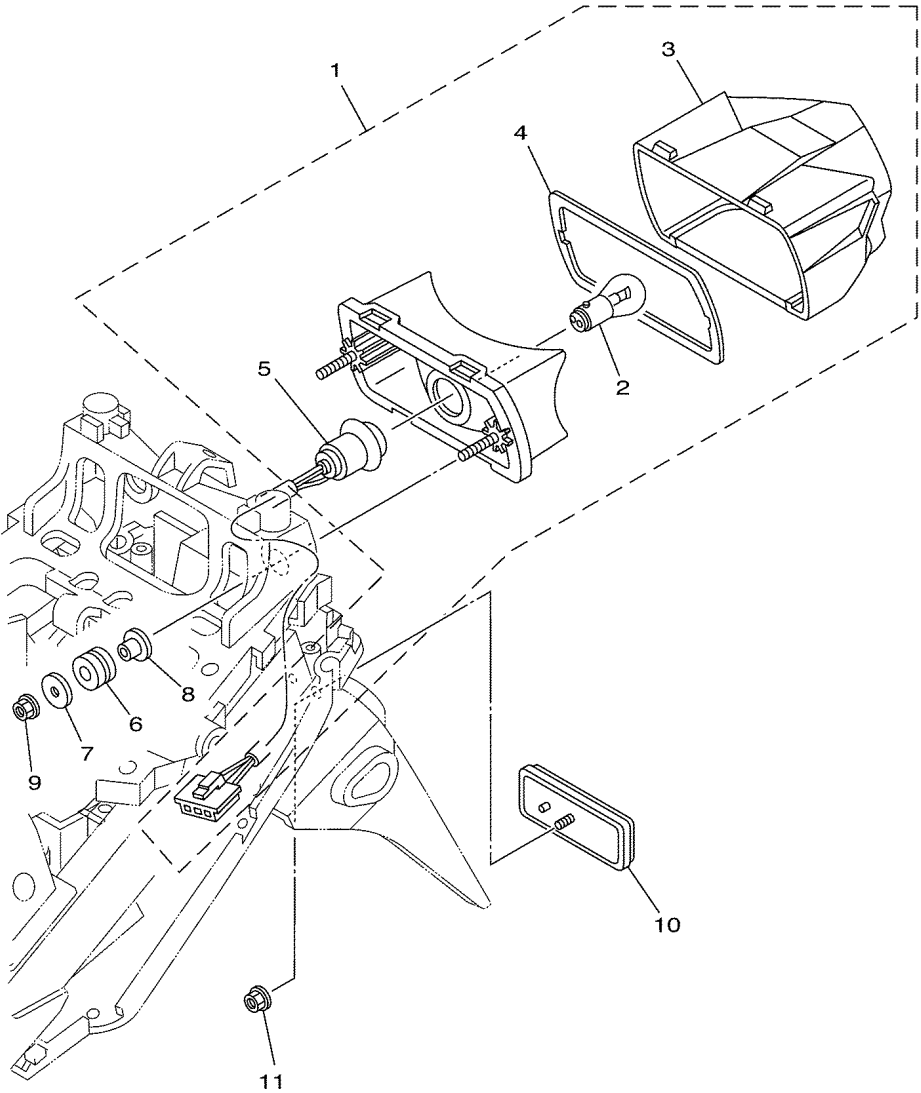

5PS1300-A420


Ref No	Part No	Description
01	5PS-83969-10-00	Switch, Handle 5
02	98507-05030-00	• . Screw, Pan Head
03	98507-05040-00	• . Screw, Pan Head
04	5RT-83975-00-00	Switch, Handle 2
05	98507-05022-00	• . Screw, Pan Head
06	437-83936-01-00	Band, Switch Cord
07	3YX-82911-01-00	Holder, Lever 1
08	3YX-83912-11-00	Lever 1
09	3YX-82917-01-00	Switch
10	90123-08096-00	Bolt
11	90179-08148-00	Nut
12	3YX-83945-00-00	Bolt, Lever
13	95607-06100-00	Nut, U
14	98707-03020-00	Screw, Flat Head
15	95027-06020-00	Bolt, Flange

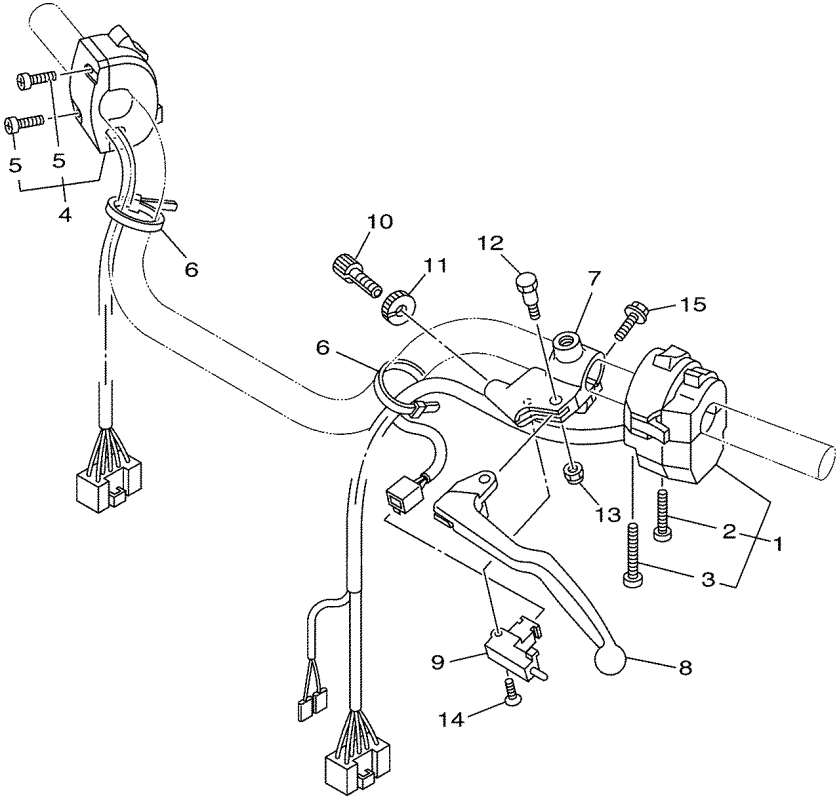

5PS6300-C430

ELEKTRISCHE AUSRÜSTUNG 1

Ref No	Part No	Description
01	97024-06016-00	Bolt
02	92904-06600-00	Washer
03	2UJ-82310-01-00	Ignition Coil Assy
04	91317-05016-00	Bolt
05	5JW-82370-00-00	Plug Cap Assy
06	4TX-82100-02-00	Battery Assy
07	5PS-82115-00-00	Wire, Plus Lead
08	5PS-82116-00-00	Wire, Minus Lead
09	5PS-82530-00-00	Stop Switch Assy
10	5PS-2144G-00-00	Stay, Stop Switch
11	98507-06008-00	Screw, Pan Head
12	5PS-82590-41-00	Wire Harness Assy
13	5JJ-82151-30-00	• . Fuse
14	5JJ-82151-10-00	• . Fuse
15	5JJ-82151-20-00	• . Fuse
16	5JJ-82151-90-00	• . Fuse
17	5PS-82151-00-00	• . Fuse
18	90464-13249-00	Clamp
19	90464-07M56-00	Clamp
20	90464-14001-00	Clamp
21	5JW-81960-00-00	Rectifier & Regulator Assy
22	95807-06030-00	Bolt, Flange
23	90183-06053-00	Nut, Spring
24	90202-05187-00	Washer, Plate
25	5PS-W8250-10-00	Main Sw. Immobilizer Kit
26	5PS-8591A-10-00	• . Engine Control Unit Assy
27	5VS-8255P-00-00	• . Immobilizer. Unit Comp.
28	5SL-82113-00-00	• . Screw
29	5SL-82511-08-00	Key, Main Switch
30	5VS-8258J-00-00	Housing, Connecteur 1
31	5VS-8259J-00-00	Housing, Connecteur 2
32	5VS-82729-00-00	Bracket, Lock
33	90101-06664-00	Bolt
34	90109-080G5-00	Bolt
35	90465-10098-00	Clamp
36	90464-25003-00	Clamp
37	5PS-82576-01-00	Lean Angle Sensor
38	91317-04025-00	Bolt
39	90183-04039-00	Nut, Spring
40	90201-047A2-00	Washer, Plate

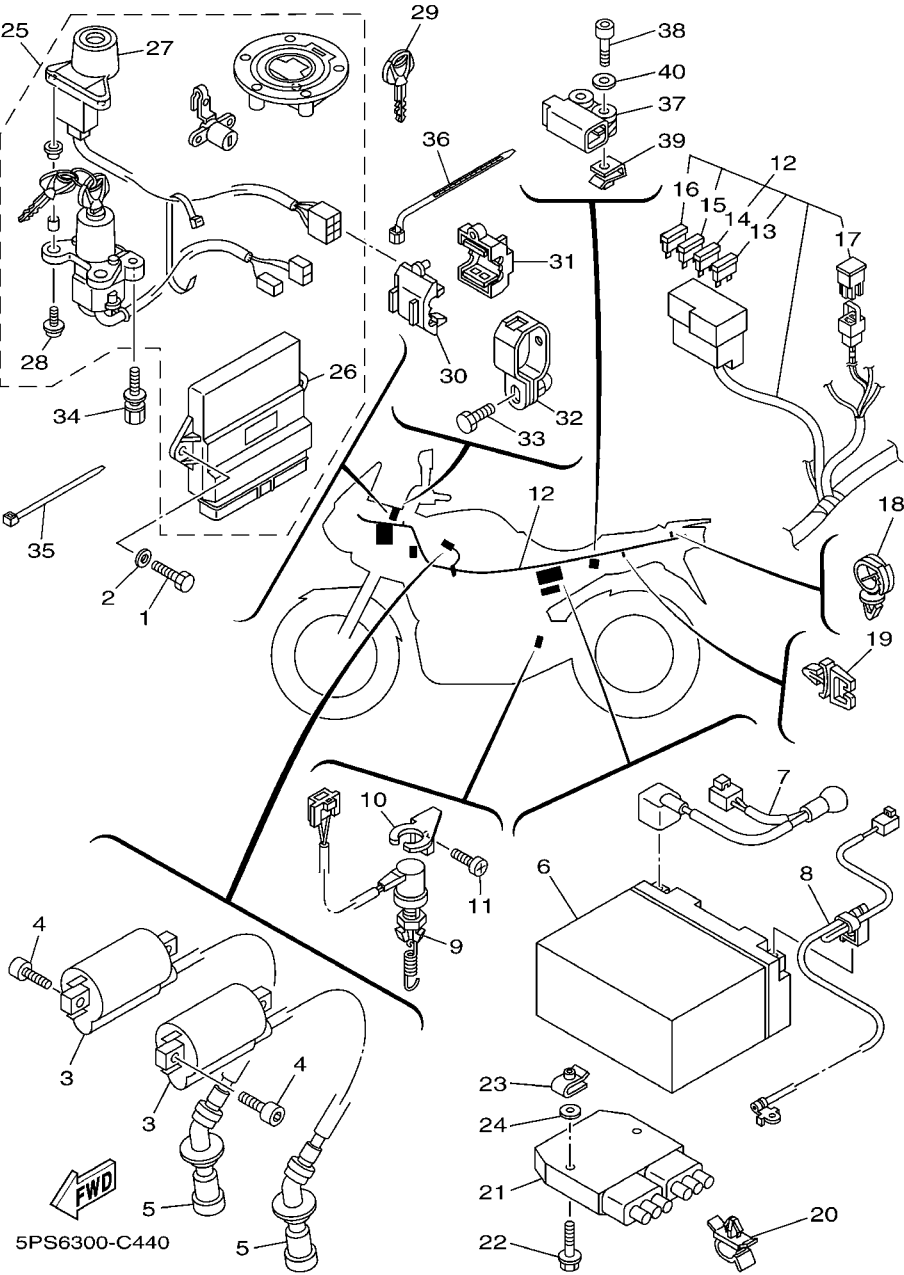

Ref No	Part No	Description
01	5RT-82566-60-00	Switch, Side Stand
02	98507-05020-00	Screw, Pan Head
03	95607-05200-00	Nut, Self-locking
04	5PS-82540-00-00	Neutral Switch Assy
05	93210-29196-00	O-ring
06	90149-06018-00	Screw
07	90462-08017-00	Clamp
08	5PS-85790-00-00	Thermosensor Assy
09	90430-12202-00	Gasket
10	5PS-82380-00-00	Sensor, Pressure
11	95027-06014-00	Bolt, Flange
12	90183-06053-00	Nut, Spring
13	5PS-85896-10-00	Sensor, Cam Position
14	90110-06124-00	Bolt, Hexagon Socket Head
15	90465-08028-00	Clamp
16	5PS-83755-01-00	Sensor, Speed
17	91317-06010-00	Bolt
18	5PS-8592A-10-00	Sensor
19	1UA-82591-00-00	Band
20	5PS-85720-00-00	Oil Level Gauge Assy
21	91317-06012-00	Bolt
22	3EL-81940-11-00	Starter Relay Assy
23	42X-82151-00-00	• . Fuse
24	95027-06008-00	Bolt, Flange
25	1UA-82591-00-00	Band
26	5PX-81950-00-00	Relay Assy
27	5EA-81950-20-00	Relay Assy
28	3XV-83350-21-00	Flasher Relay Assy
29	5PS-83371-00-00	Horn
30	92017-06010-00	Bolt, Button Head
31	5PS-2317E-00-00	Stay
32	95027-06010-00	Bolt, Flange
33	5PS-23378-20-00	Bracket, Horn
34	95827-06010-00	Bolt, Flange

