



Ref No	Part No	Description
01	3VD-11101-00-00	Cylinder Head Assy
02	3LD-11133-10-00	• . Guide, Intake Valve
03	3LD-11134-10-00	• . Guide, Exhaust Valve
04	93440-10109-00	• . Circlip
05	99510-08016-00	• . Pin, Dowel
06	90340-18101-00	• . Plug, Straight Screw
07	90105-06153-00	• . Bolt, Washer Based
08	90116-08321-00	• . Bolt, Stud
09	90338-10150-00	• . Plug
10	94701-00361-00	Plug, Spark (ngk-dpr9ea)
11	90201-103M4-00	Washer, Plate
12	90179-10414-00	Nut
13	91316-06150-00	Bolt
14	95026-08012-00	Bolt, Flange
15	90430-08143-00	Gasket
16	3VD-11181-00-00	Gasket, Cylinder Head 1
17	3VD-Y1119-00-00	Cover Assy, Cylinder Head
18	3LD-11193-00-00	• . Gasket, Head Cover 1
19	3LD-11160-01-00	• . Breather Assy
20	98501-04006-00	• . Screw, Pan Head
21	92901-04100-00	• . Washer, Spring
22	90109-064F0-00	Bolt
23	90209-11262-00	Washer
24	2GH-1111G-00-00	Rubber, Mount 1

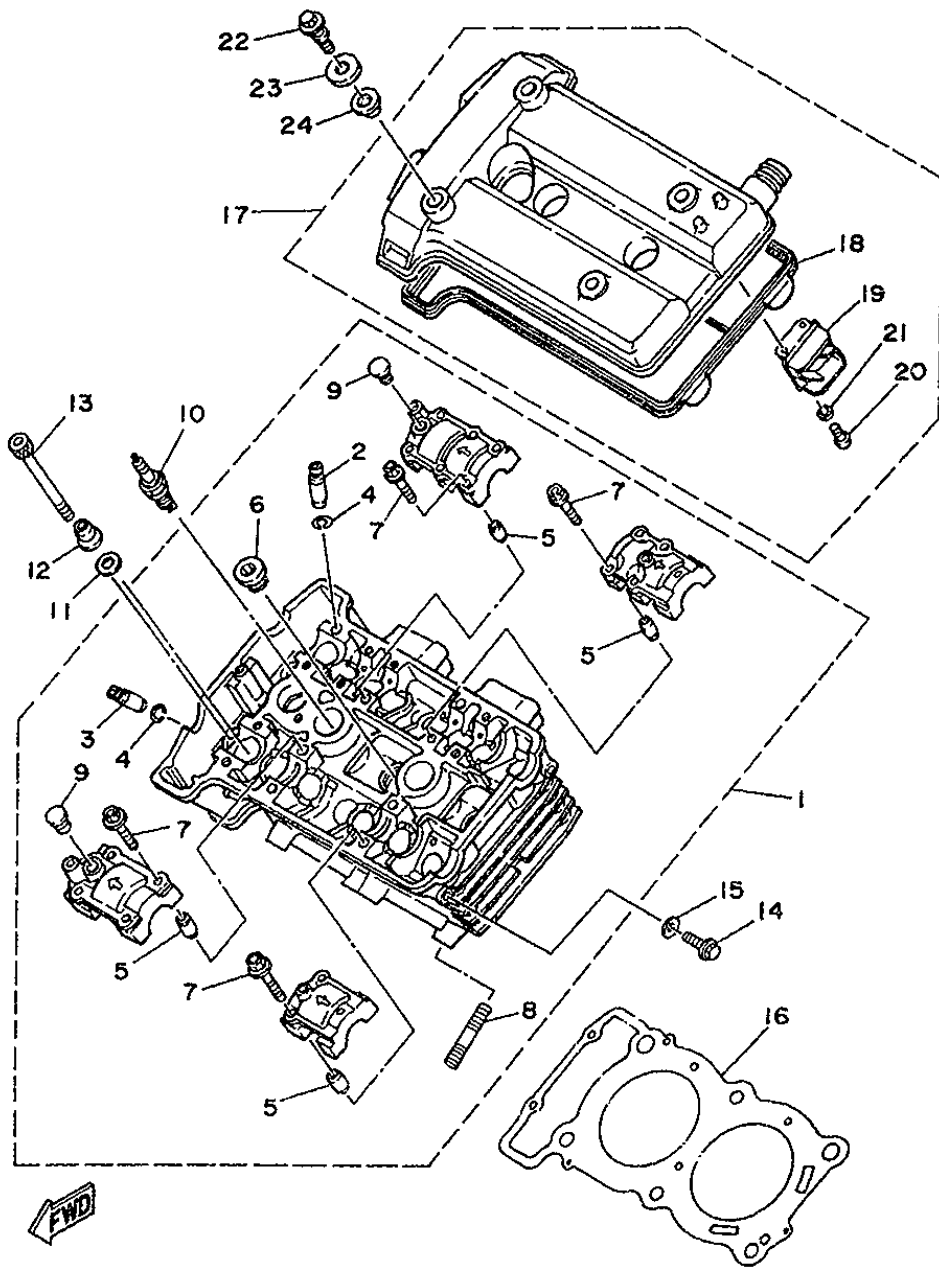


3LD1351-9010

Ref No	Part No	Description
01	3VD-11310-00-00	Cylinder
02	93210-90785-00	O-ring
03	3VD-11351-00-00	Gasket, Cylinder
04	99520-14016-00	Pin, Dowel
05	90153-06045-00	Screw, Hexagon
06	90430-06014-00	Gasket

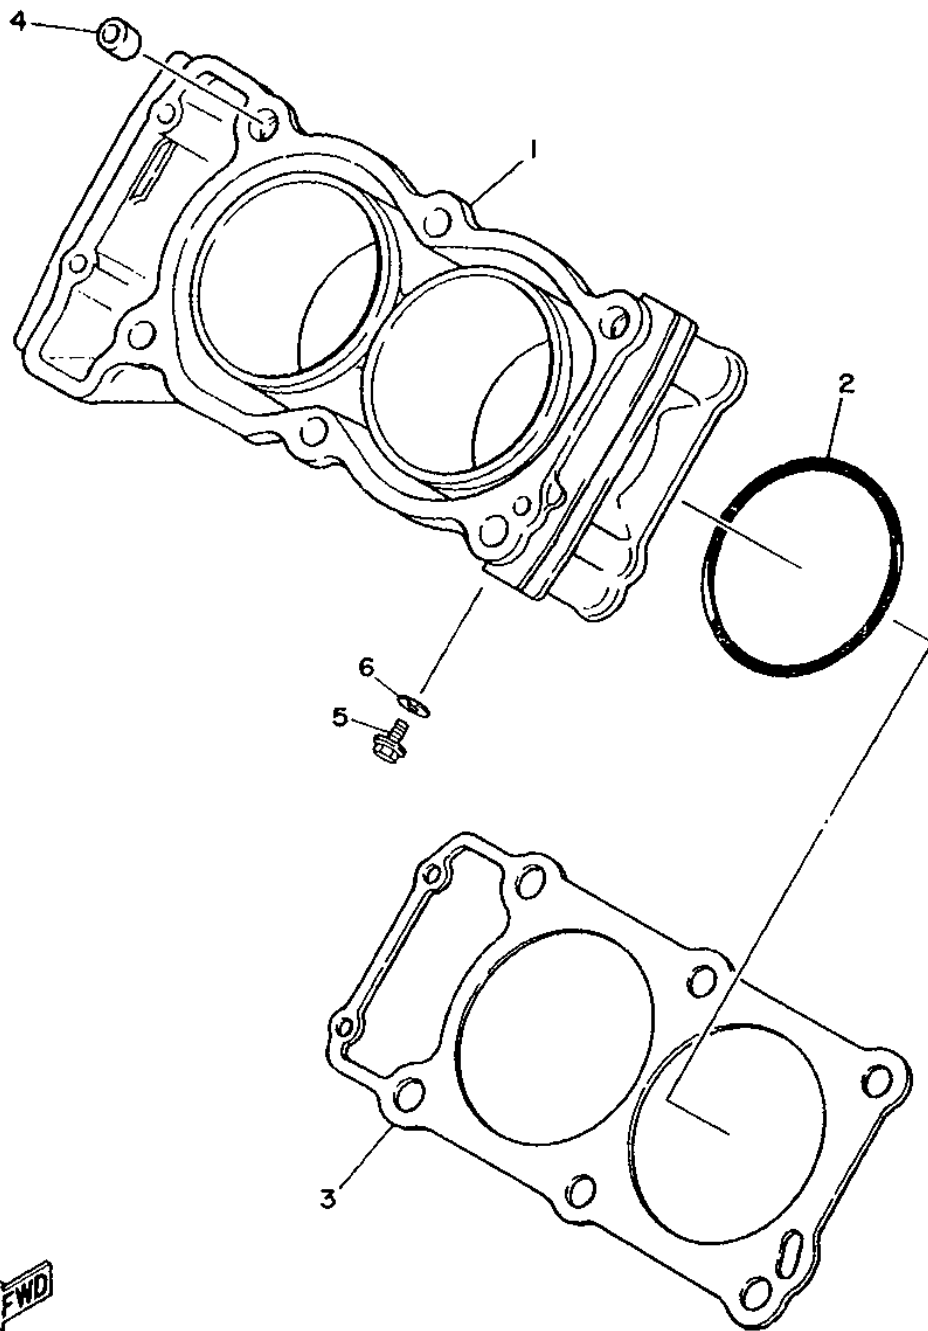


3LD1351-9020

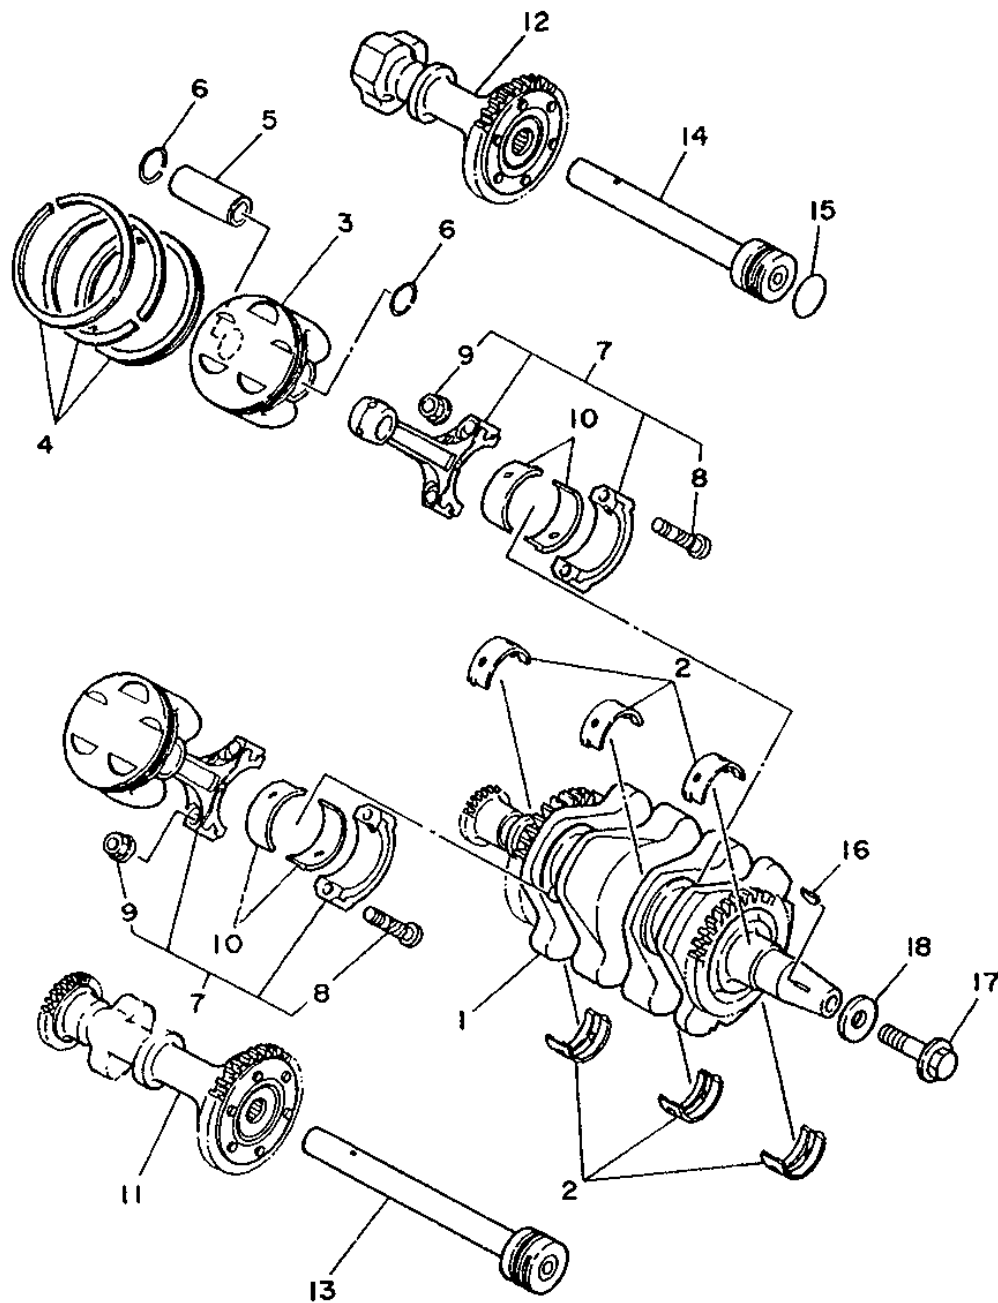

Ref No	Part No	Description
01	3VD-11400-01-00	Crankshaft Assy
02	3LD-11416-00-00	Plane Bearing, Crankshaft 1
02	3LD-11416-10-00	Plane Bearing, Crankshaft 1
02	3LD-11416-20-00	Plane Bearing, Crankshaft 1
02	3LD-11416-30-00	Plane Bearing, Crankshaft 1
02	3LD-11416-40-00	Plane Bearing, Crankshaft 1
02	3LD-11416-50-00	Plane Bearing, Crankshaft 1
02	3LD-11416-60-00	Plane Bearing, Crankshaft 1
03	3VD-11631-00-00	Piston (std)
03	3VD-11636-00-00	Piston (0.50mm O/s)
03	3VD-11638-00-00	Piston (1.00mm O/s)
04	3VD-11610-00-00	Piston Ring Set
04	3VD-11610-20-00	Piston Ring Set (0.50mm O/s)
04	3VD-11610-40-00	Piston Ring Set (1.00mm O/s)
05	3LD-11633-00-00	Pin, Piston
06	93450-22027-00	Circlip
07	3VD-11650-00-00	Connecting Rod Assy
08	3LD-11654-00-00	• . Bolt, Connecting Rod
09	90179-09379-00	• . Nut
10	3LD-11656-00-00	Plane Bearing, Connecting Rod
10	3LD-11656-10-00	Plane Bearing, Connecting Rod
10	3LD-11656-20-00	Plane Bearing, Connecting Rod
10	3LD-11656-30-00	Plane Bearing, Connecting Rod
11	3LD-11500-00-00	Balancer Assy
12	3VD-11510-00-00	Balancer Assy, 2
13	3LD-11583-00-00	Shaft, Balancer 1
14	3LD-11584-00-00	Shaft, Balancer 2
15	93210-30660-00	O-ring
16	90280-05029-00	Key, Woodruff
17	90105-12584-00	Bolt, Washer Based
18	90201-121H0-00	Washer, Plate




3LD1351-9030

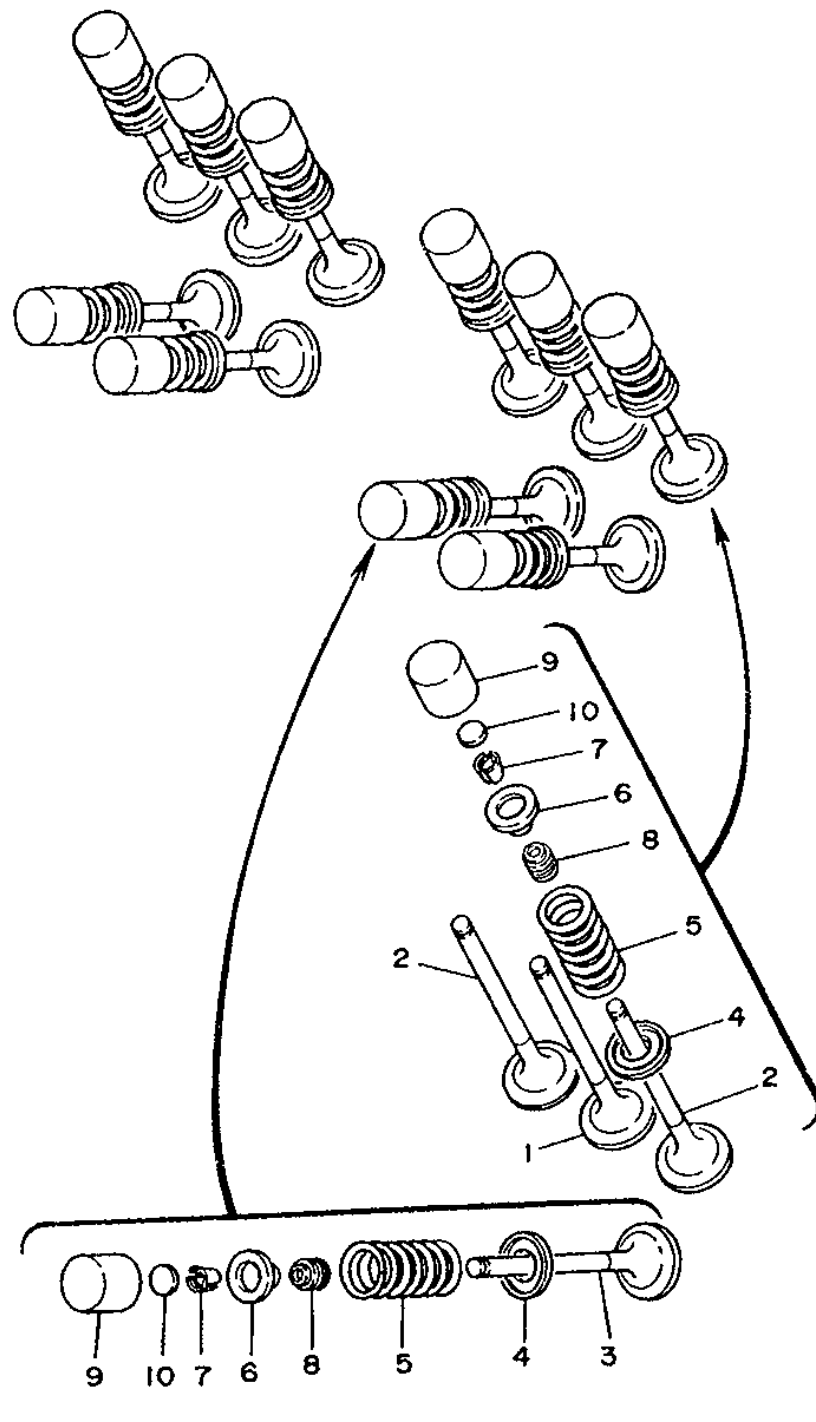


Ref No	Part No	Description
01	3LD-12111-00-00	Valve, Intake (3ld.)
02	3LD-12112-00-00	Valve, Intake 2 (3ld.)
03	3LD-12121-00-00	Valve, Exhaust (3ld)
04	1WG-12116-00-00	Seat, Valve Spring
05	3LD-12113-00-00	Spring, Valve Inner
06	3LD-12117-00-00	Retainer, Valve Spring
07	3LD-12118-00-00	Cotter, Valve
08	51Y-12119-00-00	Seal, Valve Stem
09	1WG-12153-21-00	Lifter, Valve
09	1WG-12153-31-00	Lifter, Valve
09	1WG-12153-09-00	Lifter, Valve (0/s)
10	3LD-12168-00-00	Pad, Adjusting (1.20)
10	3LD-12168-M0-00	Pad, Adjusting (1.65)
10	3LD-12168-R0-00	Pad, Adjusting (1.70)
10	3LD-12168-U0-00	Pad, Adjusting (1.75)
10	3LD-12168-W0-00	Pad, Adjusting (1.80)
10	3LD-12168-Y0-00	Pad, Adjusting (1.85)
10	3LD-12169-10-00	Pad, Adjusting (1.90)
10	3LD-12169-30-00	Pad, Adjusting (1.95)
10	3LD-12169-50-00	Pad, Adjusting (2.00)
10	3LD-12169-70-00	Pad, Adjusting (2.05)
10	3LD-12169-90-00	Pad, Adjusting (2.10)
10	3LD-12168-20-00	Pad, Adjusting (1.25)
10	3LD-12169-E0-00	Pad, Adjusting (2.15)
10	3LD-12169-G0-00	Pad, Adjusting (2.20)
10	3LD-12169-J0-00	Pad, Adjusting (2.25)
10	3LD-12169-L0-00	Pad, Adjusting (2.30)
10	3LD-12169-N0-00	Pad, Adjusting (2.35)
10	3LD-12169-T0-00	Pad, Adjusting (2.40)
10	3LD-12168-40-00	Pad, Adjusting (1.30)
10	3LD-12168-60-00	Pad, Adjusting (1.35)
10	3LD-12168-80-00	Pad, Adjusting (1.40)
10	3LD-12168-A0-00	Pad, Adjusting (1.45)
10	3LD-12168-F0-00	Pad, Adjusting (1.50)
10	3LD-12168-H0-00	Pad, Adjusting (1.55)
10	3LD-12168-K0-00	Pad, Adjusting (1.60)

Ref No	Part No	Description
01	3LD-12171-00-00	Camshaft 1
02	3LD-12181-00-00	Camshaft 2
03	3LD-12176-00-00	Sprocket, Cam Chain
04	90105-07342-00	Bolt, Washer Based
05	94591-40138-00	Chain (82rh2015-138l)
06	3LD-12241-00-00	Guide, Stopper 2
07	97026-06012-00	Bolt
08	3VD-12210-00-00	Tensioner Assy, Cam Chain
09	3VD-12213-00-00	Gasket, Tensioner Case
10	91316-06025-00	Bolt
11	3LD-12251-00-00	Damper, Chain 1
12	3LD-12252-00-00	Damper, Chain 2
13	3LD-12247-00-00	Shaft, Tensioner

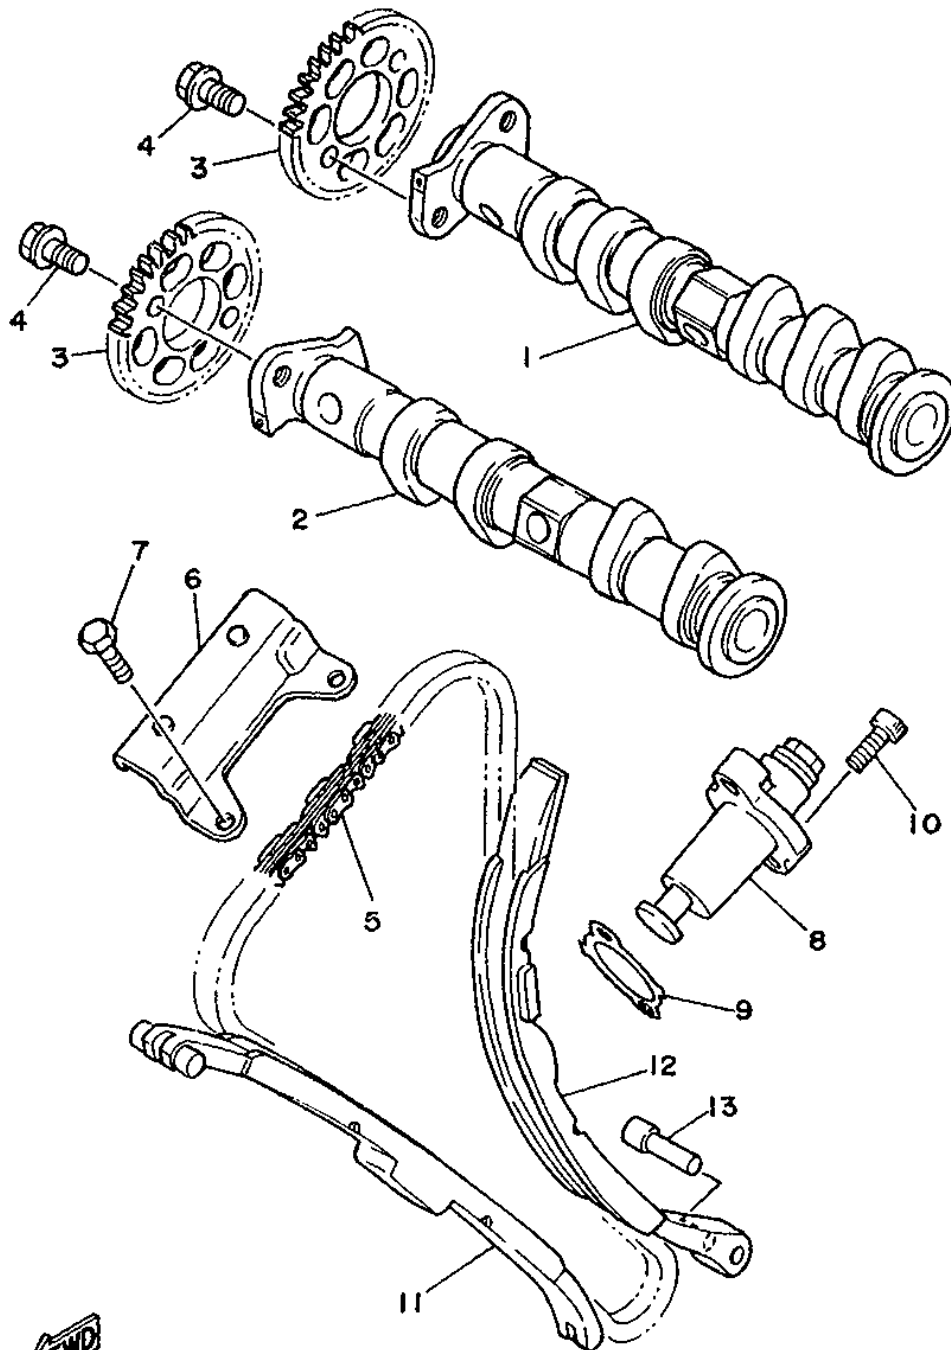


3LD1351-9050

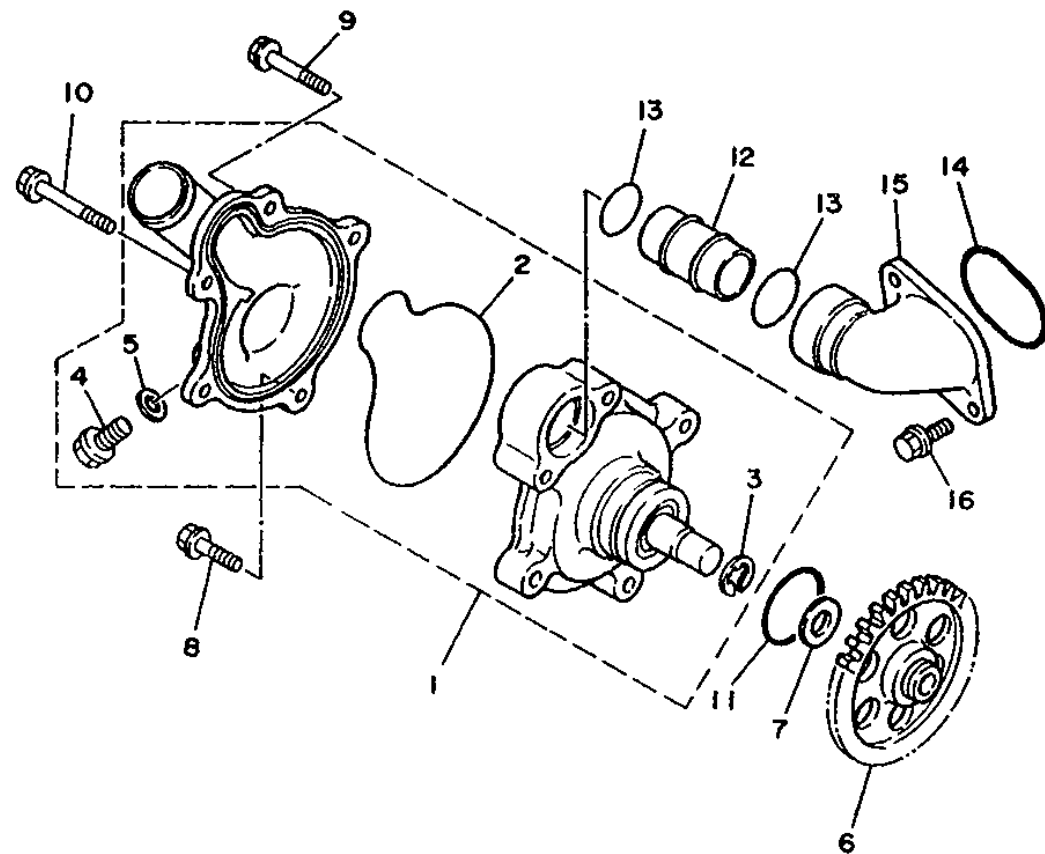

Ref No	Part No	Description
01	3VD-12420-00-00	Water Pump Assy
02	3LD-12439-00-00	• O-ring
03	99009-12400-00	• Circlip
04	95026-06012-00	• Bolt, Flange
05	90430-06014-00	• Gasket
06	3VD-12459-00-00	Gear, Impeller Shaft
07	90201-127E1-00	Washer, Plate
08	95026-06030-00	Bolt, Flange
09	95026-06045-00	Bolt, Flange
10	95026-06060-00	Bolt, Flange
11	93210-33133-00	O-ring
12	3LD-12481-00-00	Pipe 1
13	93210-21190-00	O-ring
14	93210-36788-00	O-ring
15	3VD-12469-00-00	Joint 1
16	95026-06016-00	Bolt, Flange




3LD1351-9060

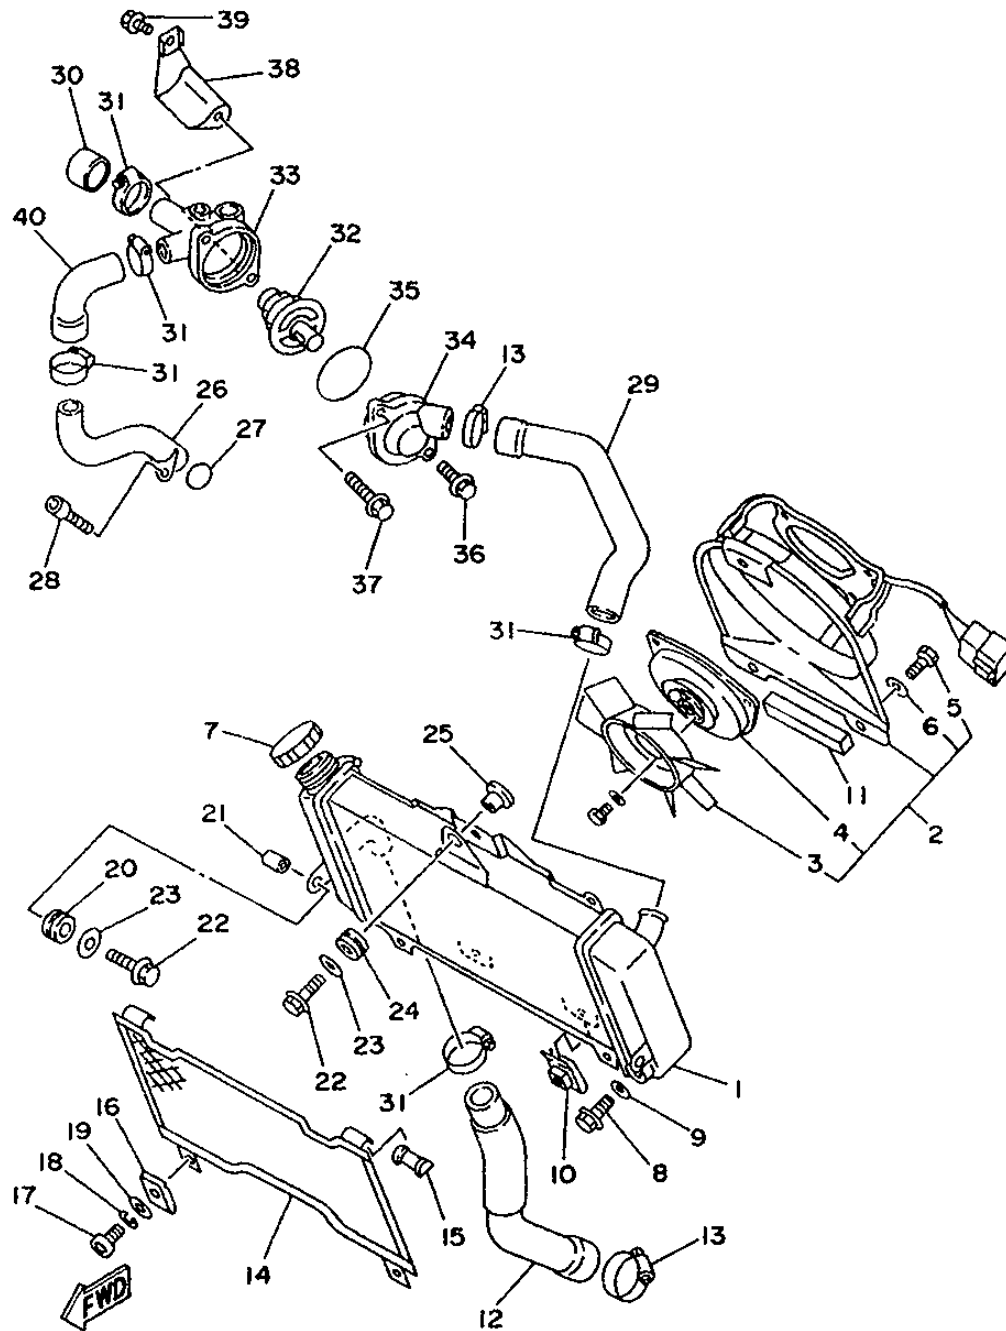


3VD1351-1070

Ref No	Part No	Description
01	3VD-12461-00-00	Radiator Assy
02	1UF-12405-00-00	Blower Assy
03	1UF-12611-00-00	• Fan
04	26H-12630-00-00	• Motor Assy
05	98501-05008-00	• Screw, Pan Head
06	92901-05600-00	• Washer, Plate
07	26H-12462-00-00	Cap, Radiator
08	1AA-12561-00-00	Plug, drain Cock
09	1AA-12435-00-00	Gasket
10	1AA-12535-00-00	Plate
11	3VD-12465-00-00	Damper, Radiator
12	3VD-12578-00-00	Hose 3
13	90450-38040-00	Hose Clamp Assy
14	1UF-12467-00-00	Cover, Radiator
15	1UF-12435-00-00	Gasket
16	90183-05024-00	Nut, Spring
17	98506-05010-00	Screw, Pan Head
18	92906-05100-00	Washer, Spring
19	92906-05600-00	Washer, Plate
20	90480-15363-00	Grommet
21	90387-07392-00	Collar
22	95816-06025-00	Bolt, Flange
23	90201-06697-00	Washer, Plate
24	90480-18276-00	Grommet
25	90387-07037-00	Collar
26	3VD-12482-00-00	Pipe 2
27	93210-18417-00	O-ring
28	91316-06016-00	Bolt
29	3VD-12577-00-00	Hose 2
30	3VD-12567-00-00	Cap, Water
31	90450-32051-00	Hose Clamp Assy
32	1AE-12410-00-00	Thermostat Assy
33	1UF-12417-01-00	Housing, Thermostat
34	1UF-12413-00-00	Cover, Thermostat
35	93210-49046-00	O-ring
36	95026-06020-00	Bolt, Flange
37	95026-06030-00	Bolt, Flange
38	3VD-1244E-00-00	Bracket 1
39	95026-06010-00	Bolt, Flange
40	3VD-12579-00-00	Hose 4

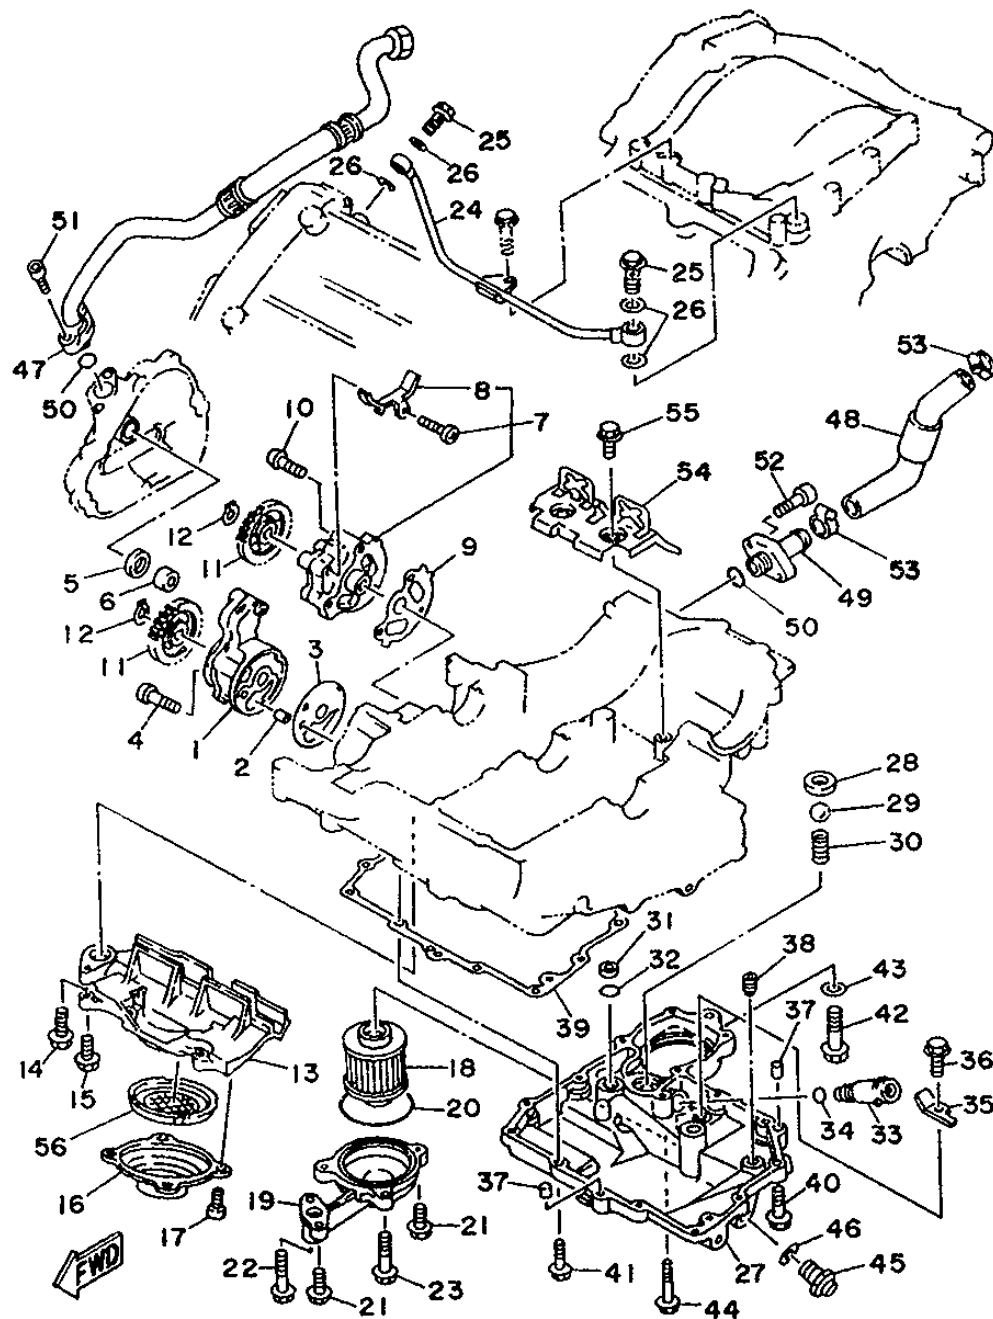


3VD1351-1080

Ref No	Part No	Description
01	3LD-13300-00-00	Oil Pump Assy
02	99510-08012-00	Pin, Dowel
03	3LD-13329-00-00	Gasket, Pump Cover
04	98503-06045-00	Screw, Pan Head
05	90430-14131-00	Gasket
06	90387-120W5-00	Collar
07	3LD-13303-00-00	Oil Pump Assy, 2
08	3LD-13371-00-00	• . Plate
09	3LD-13339-00-00	Gasket, Pump Cover
10	98501-06035-00	Screw, Pan Head
11	3VD-13325-00-00	Gear, Pump Driven
12	99009-11400-00	Circlip
13	3VD-13412-00-00	Housing, Strainer
14	95026-06025-00	Bolt, Flange
15	95026-06020-00	Bolt, Flange
16	3VD-13411-00-00	Strainer, Oil
17	98501-06010-00	Screw, Pan Head
18	4X7-13440-90-00	Element Assy, Oil Cleaner
19	3LD-13447-00-00	Cover, Oil Element
20	93210-64297-00	O-ring
21	95026-06020-00	Bolt, Flange
22	95026-06030-00	Bolt, Flange
23	95026-06040-00	Bolt, Flange
24	3LD-13161-00-00	Pipe, Delivery 1
25	90401-10106-00	Bolt, Union
26	90430-10171-00	Gasket
27	3VD-13417-00-00	Cover, Strainer
28	3LD-13113-00-00	Seat, Check Ball
29	93505-08030-00	Ball
30	90501-104F9-00	Spring, Compression
31	90387-106W6-00	Collar
32	93210-12790-00	O-ring
33	11H-13490-00-00	Relief Valve Assy
34	93210-10096-00	O-ring
35	3LD-13151-00-00	Stay
36	90105-06553-00	Bolt, Washer Based
37	99510-08016-00	Pin, Dowel
38	4H7-15138-00-00	Nozzle 1
39	3VD-13414-00-00	Gasket, Strainer Cover
40	90105-06456-00	Bolt, Washer Based
41	95026-06025-00	Bolt, Flange
42	95021-10040-00	Bolt, Flange
43	90430-10171-00	Gasket
44	95026-06035-00	Bolt, Flange
45	3VD-13455-00-00	Plug
46	214-11198-01-00	Gasket
47	3VD-13464-00-00	Hose, Oil 1
48	3VD-13465-00-00	Hose, Oil 2
49	3VD-13416-00-00	Pipe, Oil 1
50	93210-13657-00	O-ring
51	91316-06020-00	Bolt
52	90110-06093-00	Bolt, Hexagon Socket Head
53	90460-27270-00	Clamp, Hose

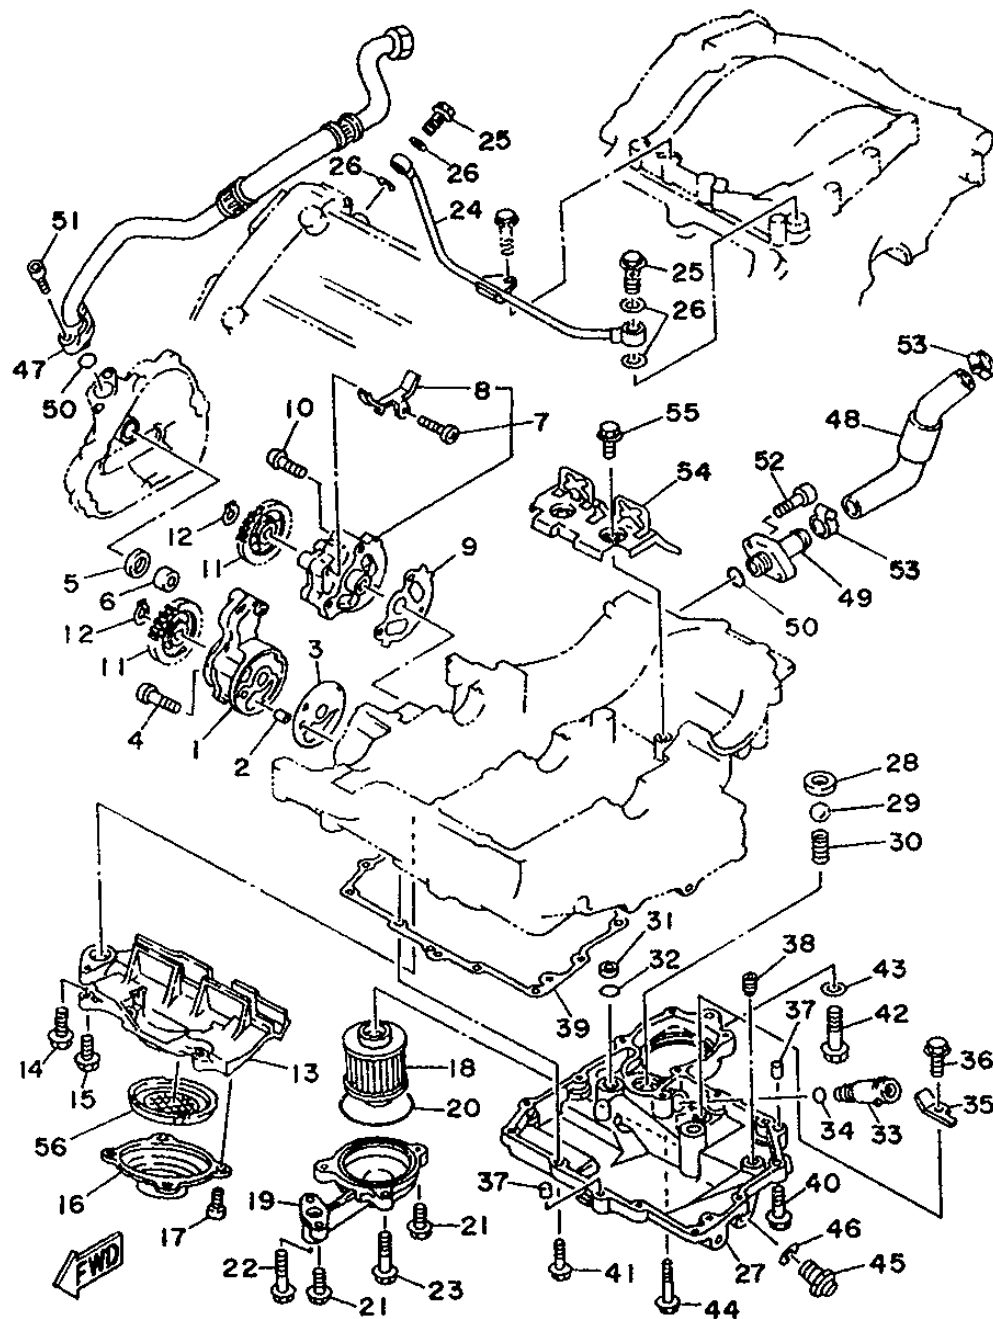

Ref No	Part No	Description
54	3VD-13317-00-00	Plate, Baffle
55	90105-06553-00	Bolt, Washer Based
56	3VD-13415-00-00	Seal, Oil Strainer

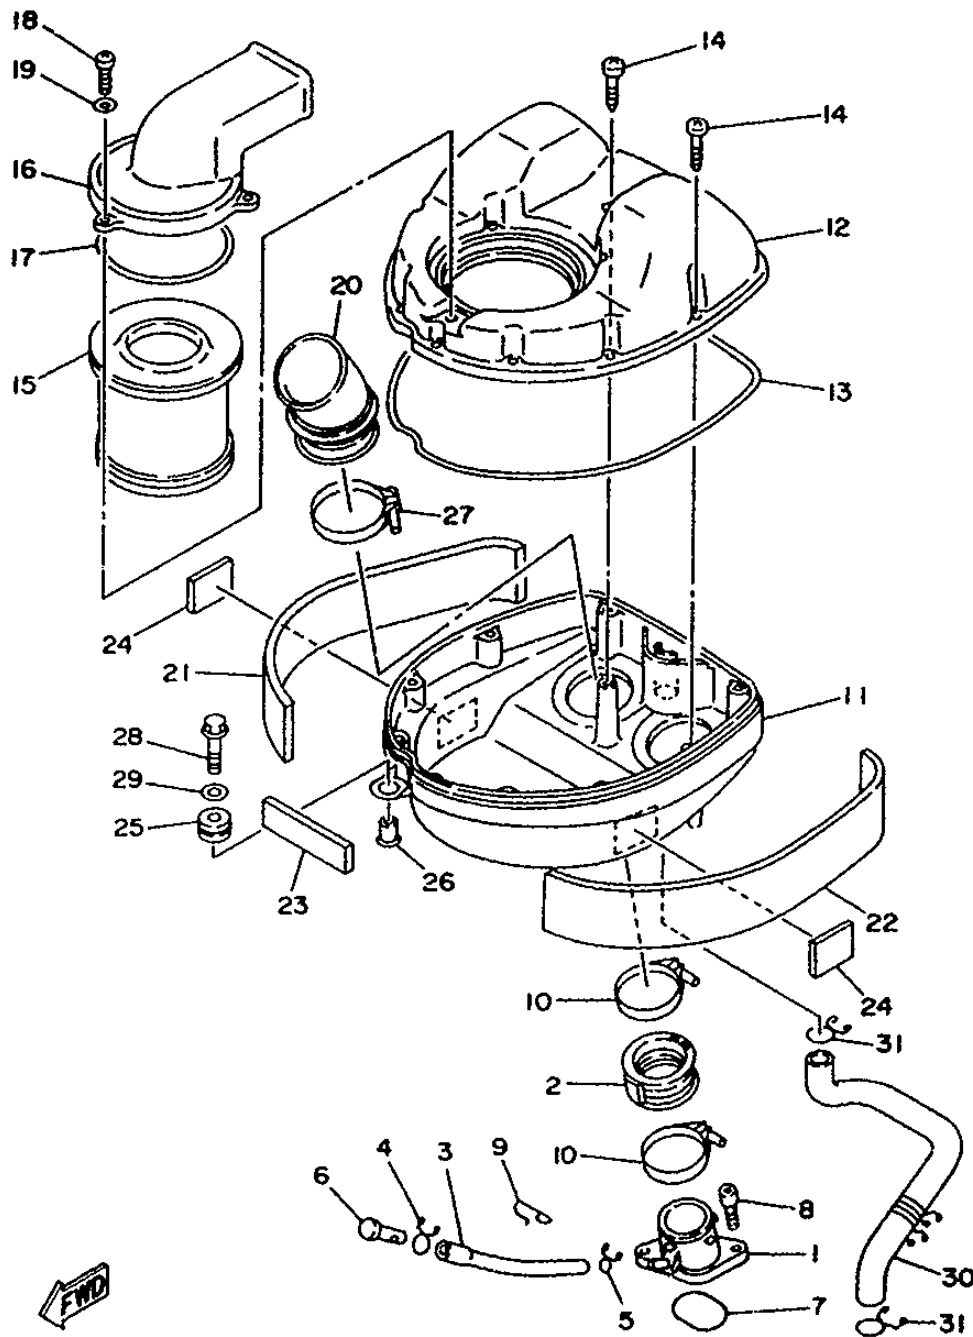


Ref No	Part No	Description
01	3LD-13586-01-00	Joint, Carburetor 1
02	3LD-13597-00-00	Joint, Carburetor 3
03	1VJ-13929-00-00	Pipe, Impulse
04	90467-08017-00	Clip
05	90467-08021-00	Clip
06	90240-06040-00	Pin, Clevis
07	93210-44545-00	O-ring
08	91316-06020-00	Bolt
09	90465-20035-00	Clamp
10	90450-57044-00	Hose Clamp Assy
11	3VD-14411-00-00	Case, Air Cleaner 1
12	3VD-14421-00-00	Case, Air Cleaner 2
13	1VJ-14462-00-00	Seal
14	97780-50125-00	Screw, Tapping
15	1AE-14451-00-00	Element, Air Cleaner
16	3VD-14422-00-00	Cap, Cleaner Case 2
17	5T0-14457-00-00	Seal
18	98501-05016-00	Screw, Pan Head
19	92901-05600-00	Washer, Plate
20	3GM-14453-00-00	Joint, Air Cleaner 1
21	3VD-14425-00-00	Damper 1
22	3VD-14426-00-00	Damper 2
23	3VD-1442G-00-00	Damper 3
24	3BB-22261-00-00	Damper, Sub Tank
25	90480-14023-00	Grommet
26	90387-060M9-00	Collar
27	90450-67033-00	Hose Clamp Assy
28	97001-06030-00	Bolt
29	90201-06052-00	Washer, Plate
30	3VD-11166-00-00	Pipe, Breather 1
31	90467-22080-00	Clip




3VD1351-1090


Ref No	Part No	Description
01	3VD-14900-00-00	Carburetor Assy
02	3VD-14901-00-00	• Carburetor Assy 1
03	3VD-14902-00-00	• Carburetor Assy 2
04	3FV-14191-00-00	• Plug, Drain
05	98501-05012-00	• Screw, Pan Head
06	3GM-14985-00-00	• Float
07	53L-14186-00-00	• Pin, Float
08	3FV-14147-00-00	• O-ring
09	98506-05016-00	• Screw, Pan Head
10	92906-05100-00	• Washer, Spring
11	92906-05600-00	• Washer, Plate
12	98580-04008-00	• Screw, Pan Head
13	3GM-14940-00-00	• Diaphragm Assy
14	3VD-14933-00-00	• Spring, Diaphragm
15	1AE-14147-00-00	• O-ring
16	3LF-14147-00-00	• O-ring
17	3GM-14153-00-00	• Washer, Main Jet
18	1HX-14565-00-00	• Screw
19	3LD-14147-00-00	• O-ring
20	3GM-14997-00-00	• Seal
21	3GM-1411E-00-00	• Block, Jet
22	3LD-14945-00-00	• Jet
23	97601-04312-00	• Screw, Pan Head With Washer
24	3GM-14107-17-00	• Needle Valve Set
25	3EN-14147-00-00	• O-ring
26	3EN-1410A-00-00	• Starter Set
27	12R-14105-00-00	• Pilot Screw Set
28	3VD-1490J-00-00	• Needle Set
29	3LD-1490H-00-00	• Diaphragm Set 5
30	3VD-1411A-00-00	• Block Jet Assy
31	620-14231-15-00	• Jet, Main (= 70)
32	239-14172-14-00	• Pilot Jet, Air (1.4)
33	830-14231-14-00	• Jet, Main (= 70)
34	4G0-14142-37-A0	• Jet, Pilot (=37.5)
35	3GM-14141-94-00	• Nozzle, Main
36	3LD-14231-28-00	• Jet, Main (=142.5)
37	92901-05600-00	• Washer, Plate
38	95303-05600-00	• Nut
39	3LD-14986-00-00	• Lever, Starter
40	3LD-14919-00-00	• Clip
41	3EN-14261-00-00	• Holder
42	3GM-14974-00-00	• Lever, Connect
43	3LD-14988-00-00	• Pipe, Starter Connecting
44	95303-06600-00	• Nut
45	2LH-14197-00-00	• Pipe
46	8U9-14139-00-00	• Clip, Pipe
47	3EN-14988-00-00	• Pipe, Starter Connecting
48	1KT-14994-00-00	• Net, Filter
49	3EN-14997-00-00	• Seal
50	822-14147-00-00	• O-ring
51	3VD-14987-00-00	• Hose
52	3LD-14139-00-00	• Clip, Pipe
53	3JE-14197-00-00	• Pipe

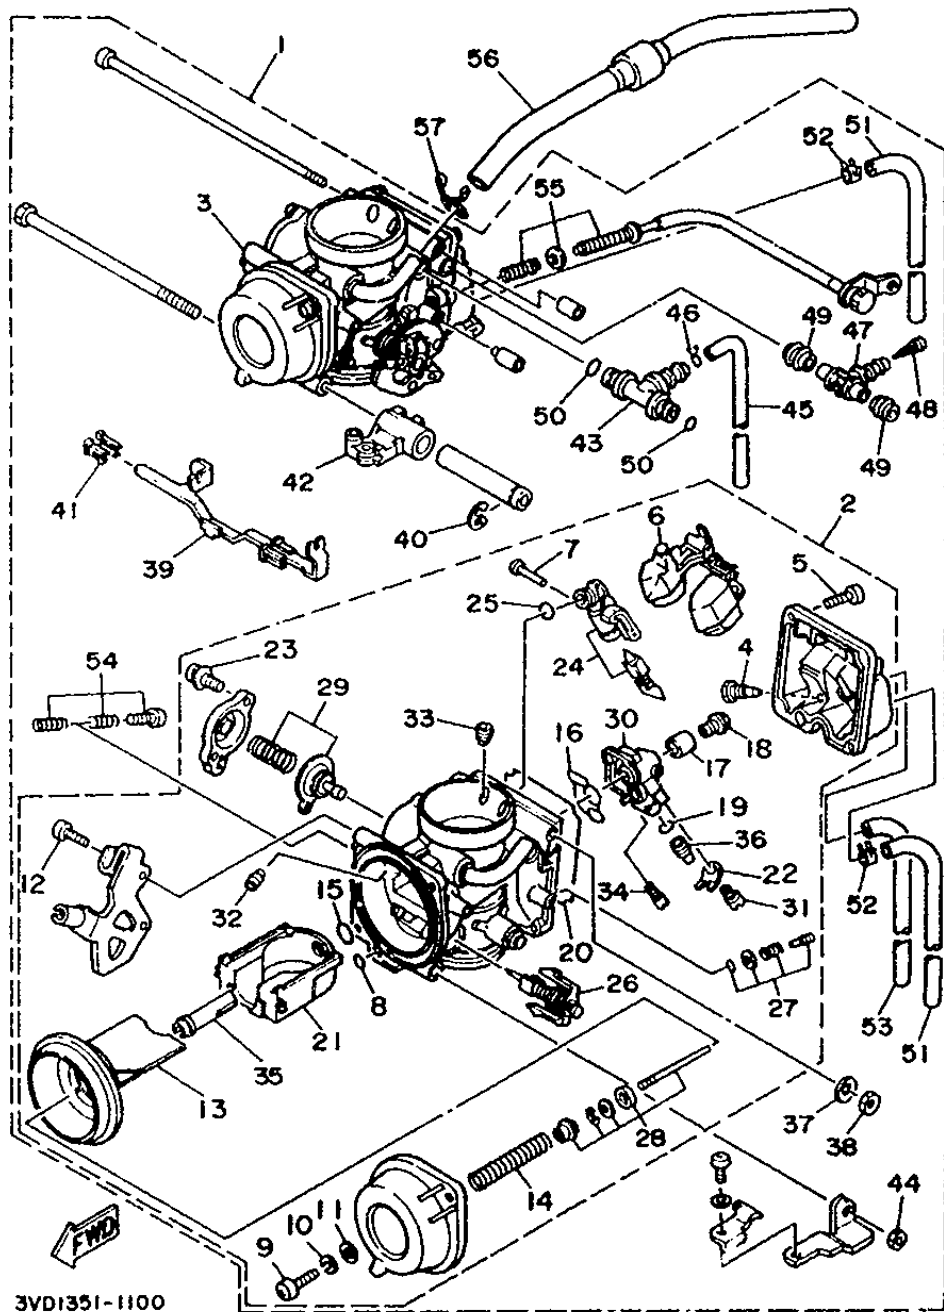


Ref No	Part No	Description
54	3EN-1490K-00-00	• . Stop Screw Set
55	3VD-14103-00-00	• . Throttle Screw Set
56	3VD-14148-01-00	Pipe
57	90467-12052-00	Clip

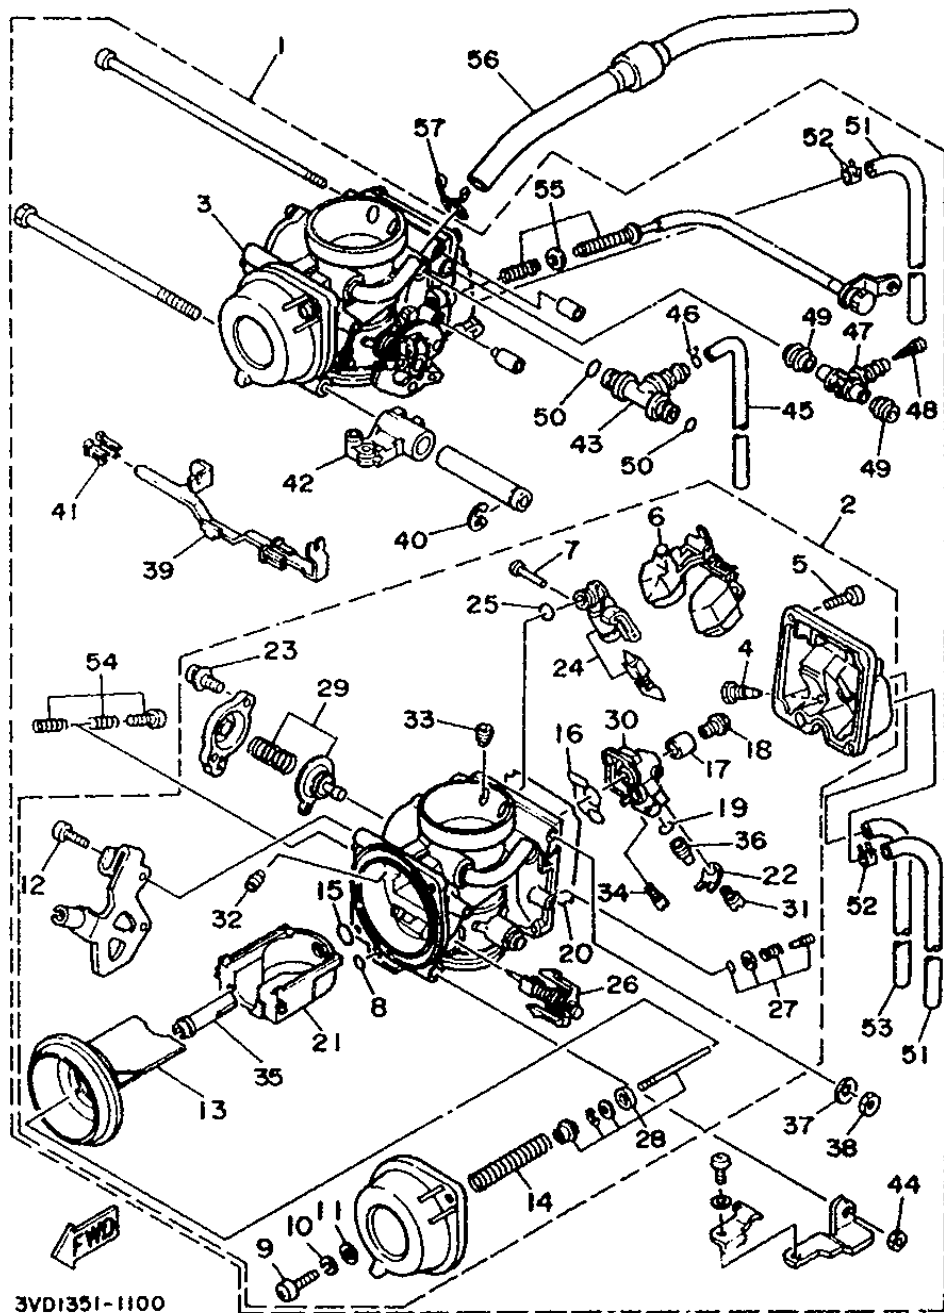

Ref No	Part No	Description
01	3VD-14602-00-00	Exhaust Pipe Comp.
02	92906-06600-00	• . Washer, Plate
03	90101-06576-00	• . Bolt
04	3VD-14613-00-00	Gasket, Exhaust Pipe
05	90179-08345-00	Nut
06	3VD-14710-01-00	Muffler Assy 1
07	3VD-14755-00-00	• . Gasket, Silencer
08	99999-01790-00	• . Bolt, Frange
09	90201-081H4-00	Washer, Plate
10	91316-08110-00	Bolt
11	90105-10316-00	Bolt, Washer Based
12	95701-10500-00	Nut, Flange

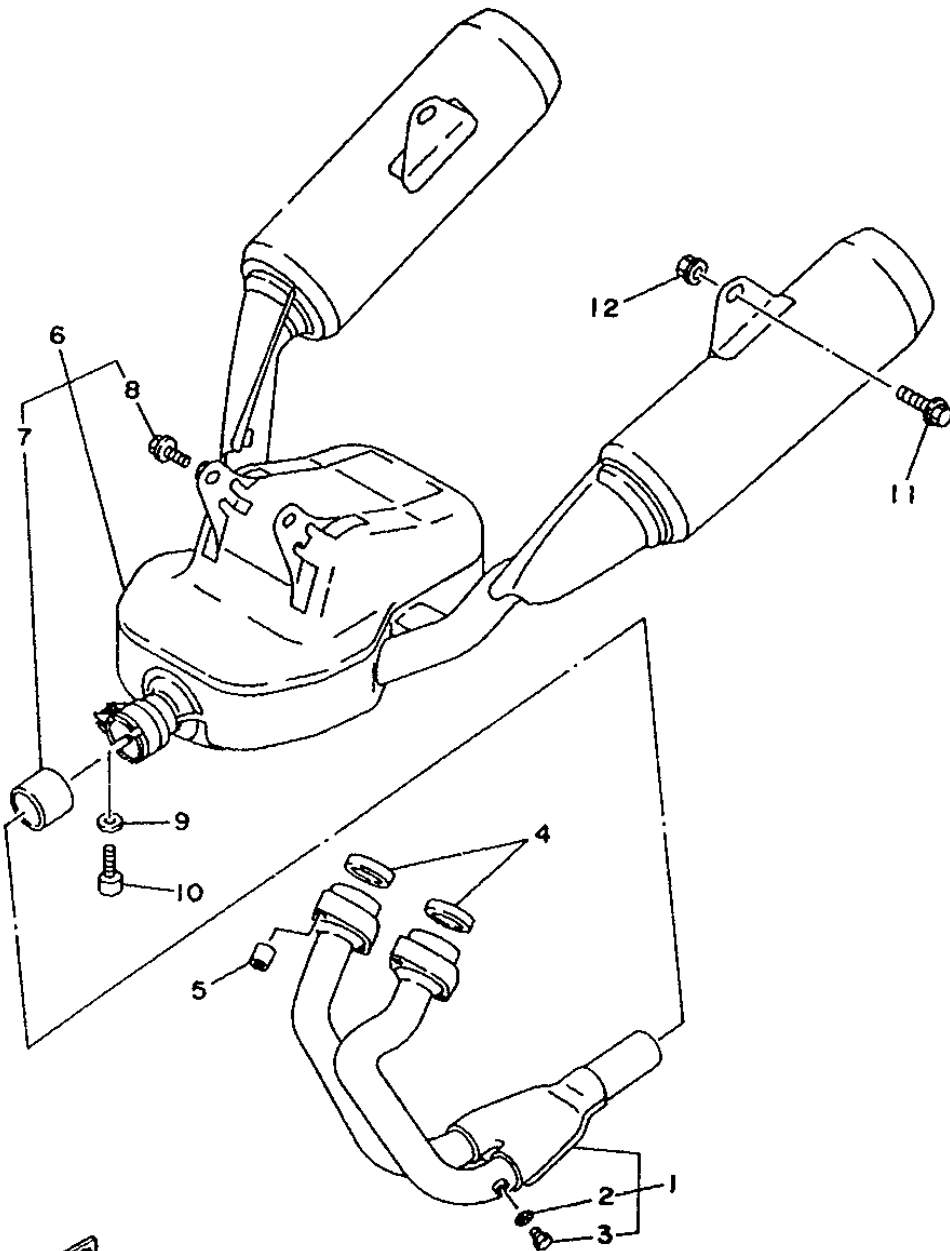


3VD1351-1110

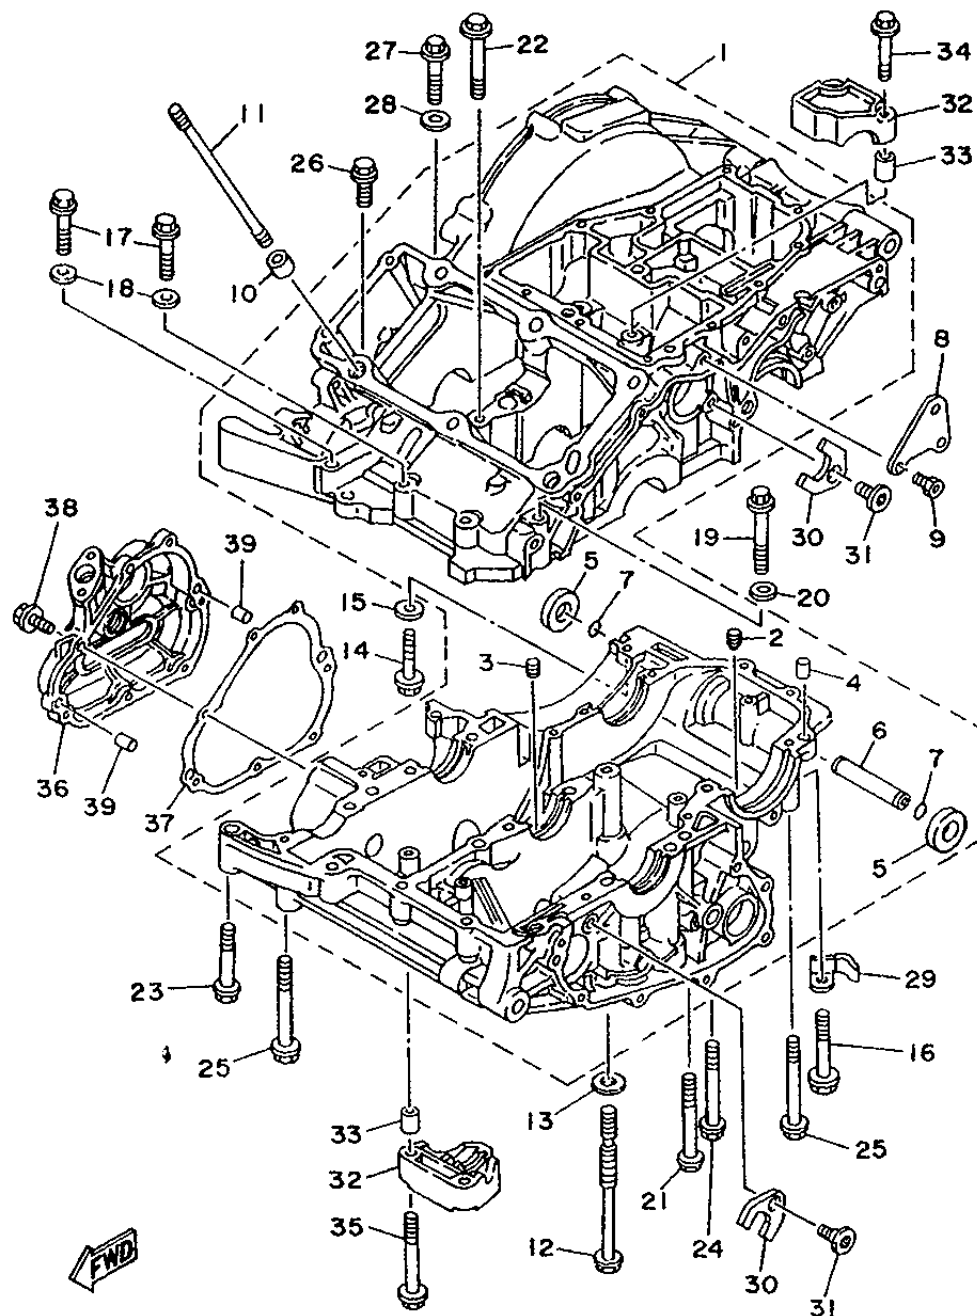


3VD135I-1120

Ref No	Part No	Description
01	3VD-15100-00-00	Crankcase Assy
02	4H7-15138-00-00	. . Nozzle 1
03	4G0-15138-00-00	. . Nozzle 1
04	99530-10014-00	. . Pin, Dowel
05	3VD-15316-00-00	. . Damper, Engine Mount 1
06	3VD-15317-00-00	. . Spacer, Engine Mount
07	93210-12154-00	. . O-ring
08	3VD-15199-00-00	Bracket
09	91316-08016-00	Bolt
10	99530-14016-00	Pin, Dowel
11	3LD-11361-00-00	Bolt, Cylinder Holding 1
12	90105-10560-00	Bolt, Washer Based
13	90201-10131-00	Washer, Plate
14	95816-06040-00	Bolt, Flange
15	90201-066F0-00	Washer, Plate
16	95816-06055-00	Bolt, Flange
17	95816-08050-00	Bolt, Flange
18	90201-08087-00	Washer, Plate
19	95816-08060-00	Bolt, Flange
20	90201-08087-00	Washer, Plate
21	95816-06070-00	Bolt, Flange
22	95816-08065-00	Bolt, Flange
23	95816-08050-00	Bolt, Flange
24	95816-08070-00	Bolt, Flange
25	95816-08075-00	Bolt, Flange
26	95816-06025-00	Bolt, Flange
27	95816-06040-00	Bolt, Flange
28	90201-066F0-00	Washer, Plate
29	90465-08341-00	Clamp
30	3LD-15191-00-00	Plate
31	90149-06285-00	Screw
32	3LD-15118-00-00	Holder
33	99510-08016-00	Pin, Dowel
34	95816-06045-00	Bolt, Flange
35	95816-06070-00	Bolt, Flange
36	3VD-15416-00-00	Cover, Oil Pump
37	3VD-15456-00-00	Gasket, Oil Pump Cover 1
38	95026-06020-00	Bolt, Flange
39	99510-08012-00	Pin, Dowel

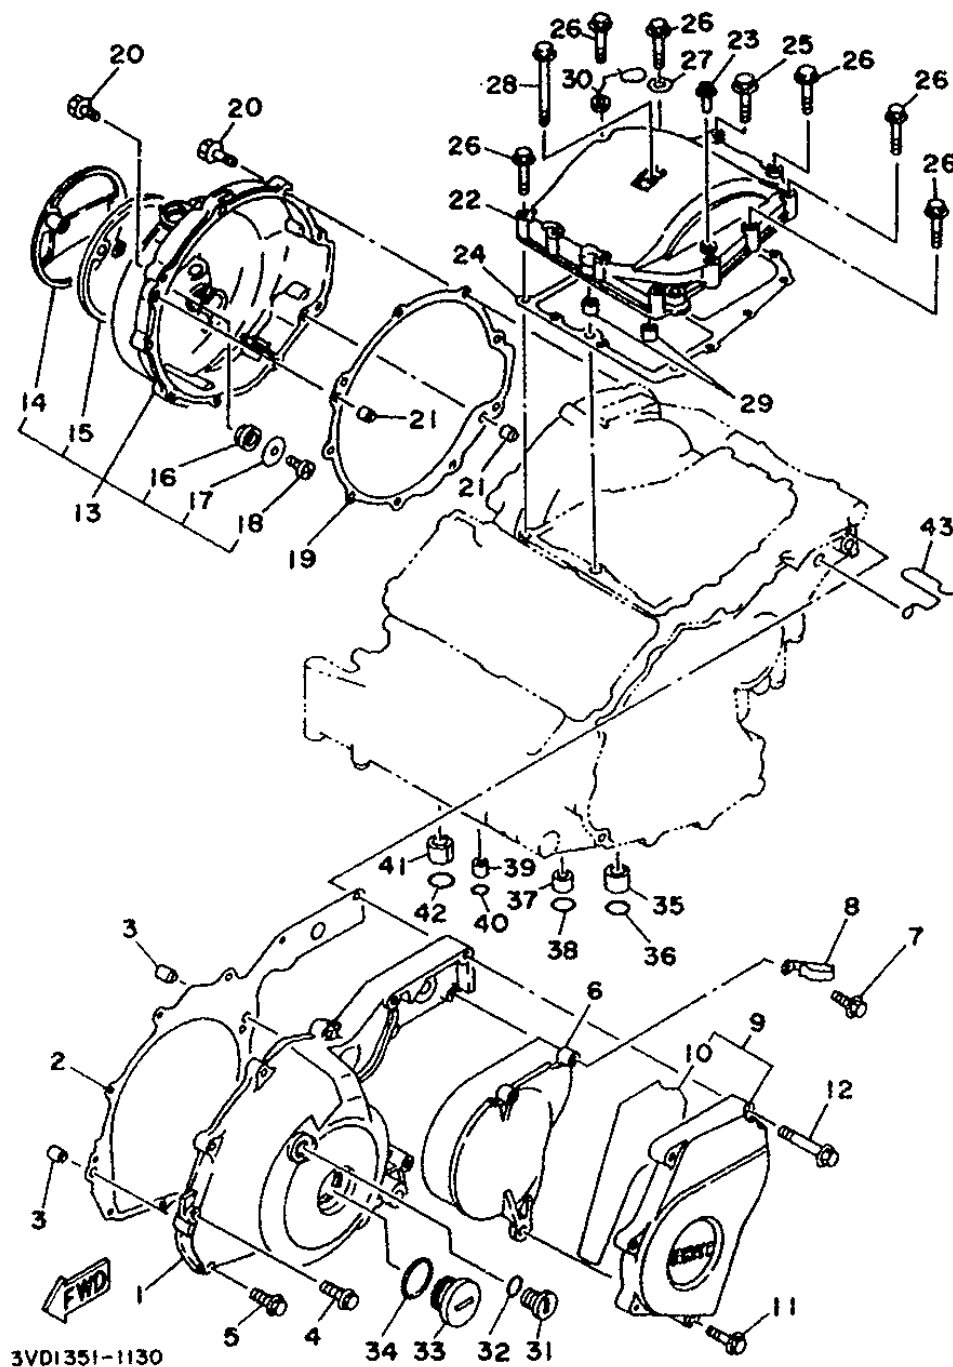


Ref No	Part No	Description
01	3VD-15411-00-00	Cover, Crankcase 1
02	3VD-15451-00-00	Gasket, Crankcase Cover 1
03	99510-08012-00	Pin, Dowel
04	95026-06025-00	Bolt, Flange
05	90105-06456-00	Bolt, Washer Based
06	3LD-15418-00-00	Cover, Chain Case
07	95026-06025-00	Bolt, Flange
08	90465-08277-00	Clamp
09	3VD-15420-00-00	Crankcase Cover Assy 2
10	3VD-15326-00-00	• . Damper, Engine Mount 2
11	95026-06030-00	Bolt, Flange
12	95026-06055-00	Bolt, Flange
13	3VD-15430-00-00	Crankcase Cover Assy 3
14	3VD-15417-00-00	• . Cover, Cap
15	3LD-15449-00-00	• . Ring, Rubber
16	1JK-15486-00-00	• . Grommet
17	90209-05279-00	• . Washer
18	98501-05010-00	• . Screw, Pan Head
19	3VD-15462-00-00	Gasket, Crankcase Cover 3
20	95026-06025-00	Bolt, Flange
21	99510-08012-00	Pin, Dowel
22	3VD-15425-00-00	Cover, Generator 2
23	583-11126-00-00	Pipe, Breather 3
24	3VD-15463-00-00	Gasket, Carburetor Cover 2
25	95023-06035-00	Bolt
26	95026-06035-00	Bolt, Flange
27	90201-066F0-00	Washer, Plate
28	95026-06070-00	Bolt, Flange
29	99530-10014-00	Pin, Dowel
30	90465-26349-00	Clamp
31	90340-14138-00	Plug, Straight Screw
32	93210-14369-00	O-ring
33	90340-32137-00	Plug, Straight Screw
34	93210-32172-00	O-ring
35	90387-086W7-00	Collar
36	93210-10096-00	O-ring
37	90387-106W6-00	Collar
38	93210-12790-00	O-ring
39	90387-06761-00	Collar
40	93210-07438-00	O-ring
41	90387-130W6-00	Collar
42	93210-15566-00	O-ring
43	90465-20342-00	Clamp

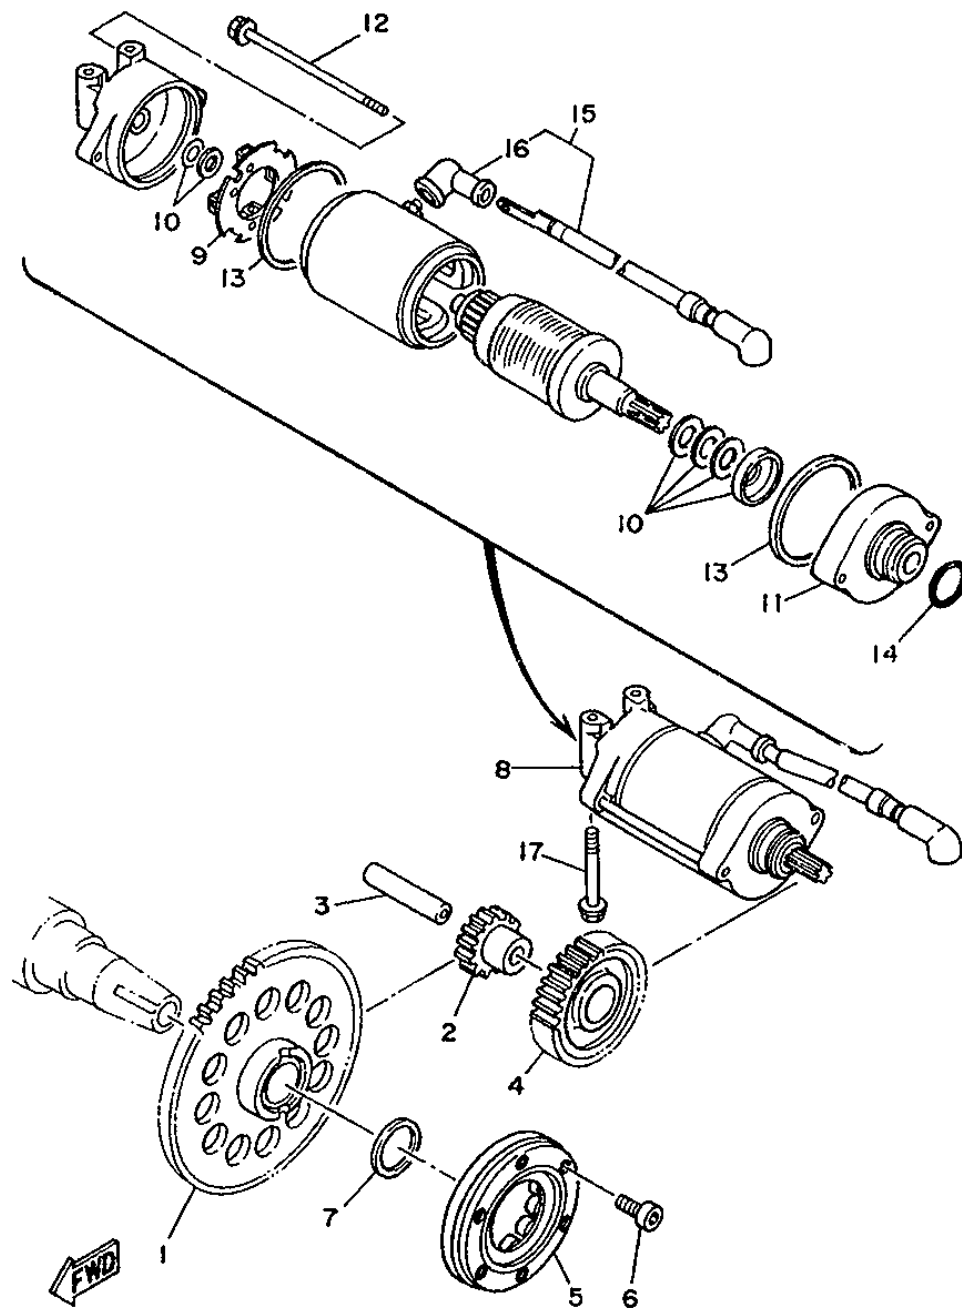


3LD1351-9140

Ref No	Part No	Description
01	3LD-15515-00-00	Gear 3
02	3LD-15517-00-00	Gear, Idler 2
03	26H-15521-00-00	Shaft 1
04	3LD-15512-00-00	Gear, Idler 1
05	3LD-15590-00-00	Starter One-way Assy
06	91316-06018-00	Bolt
07	90201-301P3-00	Washer, Plate
08	3LD-81800-00-00	Starting Motor Assy
09	3AJ-81801-00-00	• Brush Set
10	3AJ-81809-00-00	• Washer Kit
11	3AJ-81830-00-00	• Front Bracket Assy
12	3AJ-81826-00-00	• Bolt
13	11H-81844-00-00	• Gasket
14	26H-81847-00-00	• O-ring
15	3LD-81815-00-00	• Cord, Starter Motor
16	4G0-81871-00-00	• Cap
17	95811-06050-00	Bolt, Flange

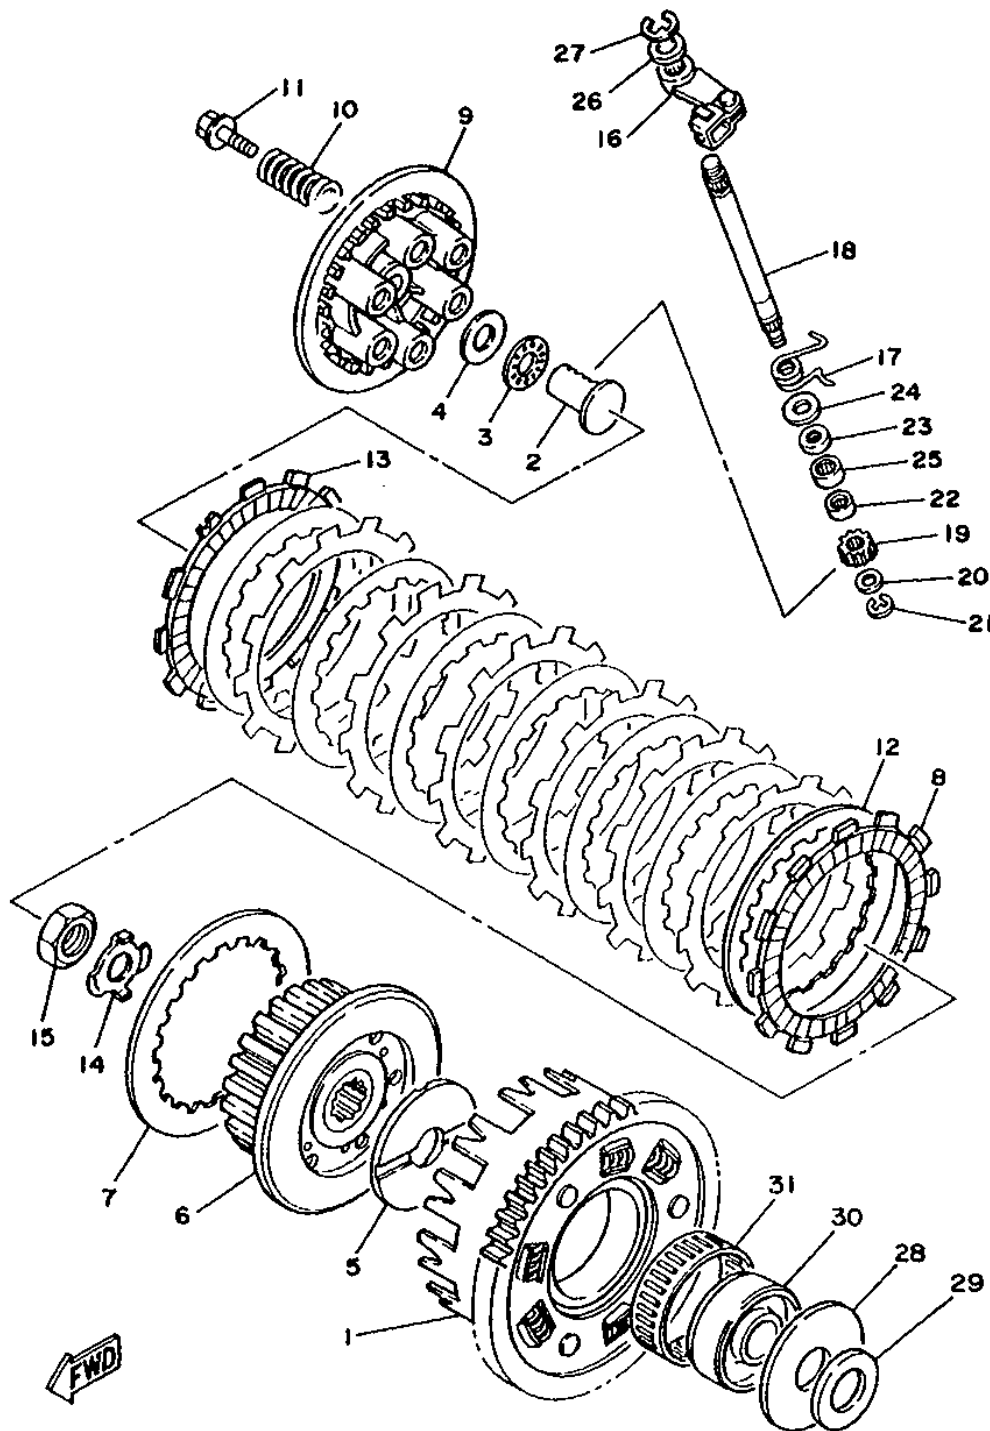


3VD1351-1150

Ref No	Part No	Description
01	3VD-16150-00-00	Primary Driven Gear Comp.
02	3LD-1637A-00-00	Rod Push Assy
03	93340-21505-00	Bearing, Thrust
04	90201-150H2-00	Washer, Plate
05	4H7-16154-00-00	Plate, Thrust 1
06	3VD-16371-01-00	Boss, Clutch
07	167-16324-00-00	Plate, Clutch 1
08	4H7-16321-00-00	Plate, Friction
09	3LD-16351-00-00	Plate, Pressure 1
10	90501-225A9-00	Spring, Compression
11	90159-06023-00	Screw, With Washer
12	31A-16325-00-00	Plate, Clutch 2
13	31A-16321-00-00	Plate, Friction
14	90215-20231-00	Washer, Lock
15	90170-20327-00	Nut
16	3VD-16340-00-00	Push Lever Assy
17	90508-161A4-00	Spring, Torsion
18	3LD-16382-00-00	Axle, Push Lever
19	3LD-16398-00-00	Pinion, Releas
20	92901-08600-00	Washer, Plate
21	99080-07600-00	Circlip
22	93317-11020-00	Bearing, Cylindrical
23	93102-12224-00	Oil Seal
24	90201-12M34-00	Washer, Plate
25	93315-11206-00	Bearing, Cylindrical
26	90201-10119-00	Washer, Plate
27	99009-10400-00	Circlip
28	3VD-16164-00-00	Plate, Thrust 2
29	3VD-16154-00-00	Plate, Thrust 1
30	3LD-16181-00-00	Spacer 1
31	93310-36588-00	Bearing, Cylindrical

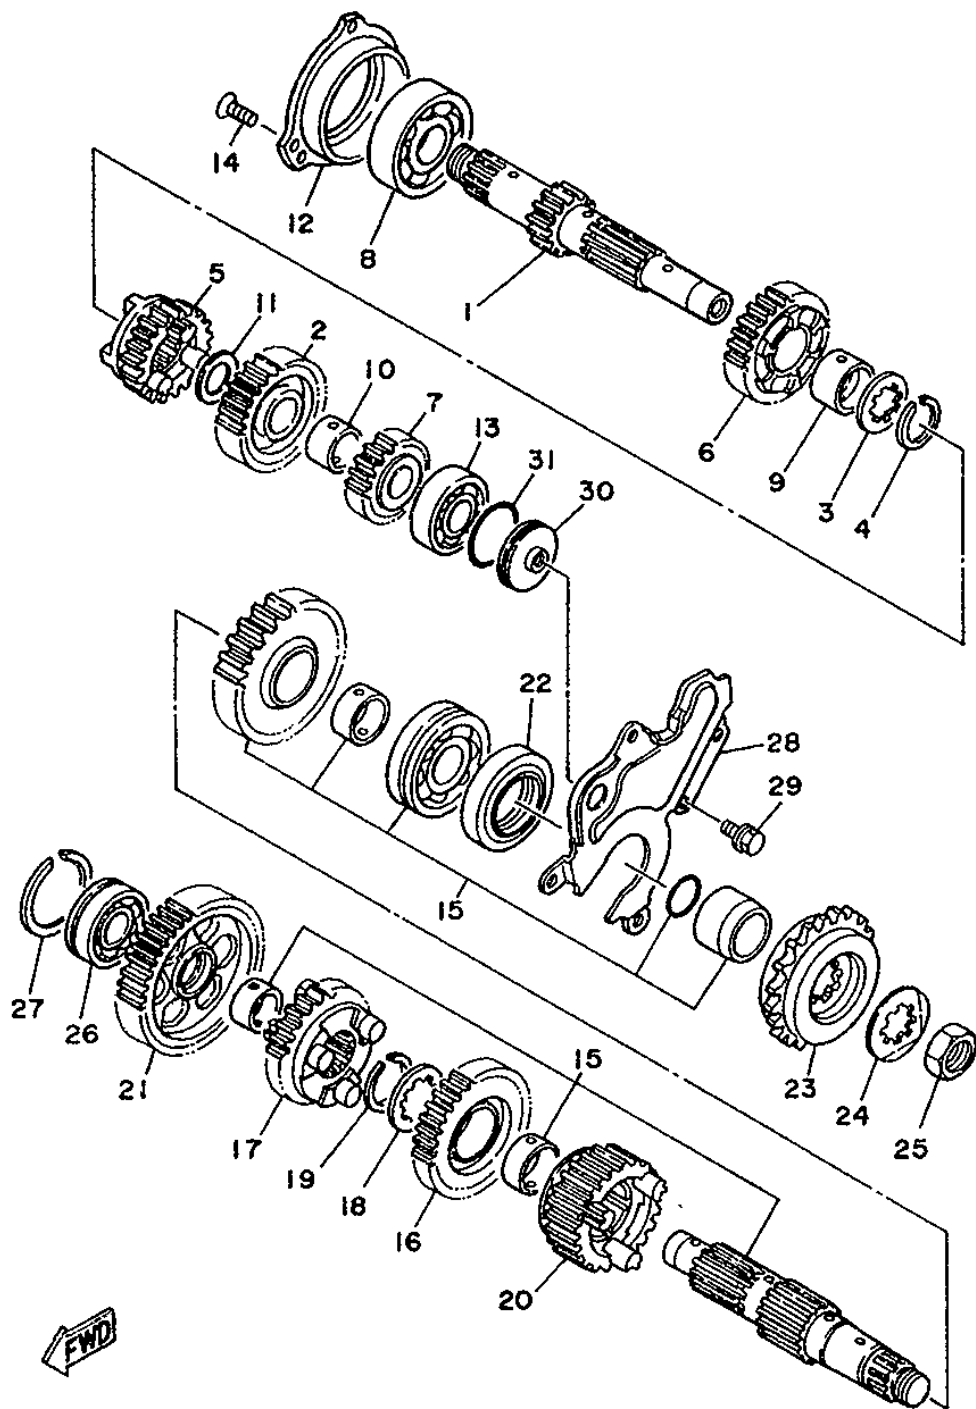

3LD3351-0160

Ref No	Part No	Description
01	3LD-17411-00-00	Axle, Main (13t)
02	3VD-17151-00-00	Gear, 5th Pinion (30t)
03	90209-22191-00	Washer
04	93440-25084-00	Circlip
05	3VD-17131-00-00	Gear, 3rd Pinion (22t)
06	3VD-17141-00-00	Gear, 4th Pinion (27t)
07	3LD-17121-00-00	Gear, 2nd Pinion (21t)
08	93306-30525-00	Bearing (b6305)
09	90387-253M6-00	Collar
10	90387-203M7-00	Collar
11	90201-200K3-00	Washer, Plate
12	3LD-15163-10-00	Housing, Bearing 1
13	93306-20464-00	Bearing
14	90149-06286-00	Screw
15	3LD-17402-00-00	Drive Axle Assy
16	3VD-17231-00-00	Gear, 3rd Wheel (29t)
17	3VD-17241-00-00	Gear, 4th Wheel (29t)
18	90209-25196-00	Washer
19	93440-28062-00	Circlip
20	3VD-17251-00-00	Gear, 5th Wheel (27t)
21	3LD-17211-00-00	Gear, 1st Wheel (37t)
22	93102-35381-00	Seal Oil (sd6-35-62-5-1l-hs)
23	3VD-17460-00-00	Sprocket, Drive (16t)
24	90215-21022-00	Washer, Lock
25	90179-18020-00	Nut
26	93306-20455-00	Bearing
27	93440-45144-00	Circlip
28	3LD-17471-00-00	Plate, Cover
29	95811-06012-00	Bolt, Flg.
30	3LD-15414-00-00	Cover, Air Cleaner
31	93210-33133-00	O-ring

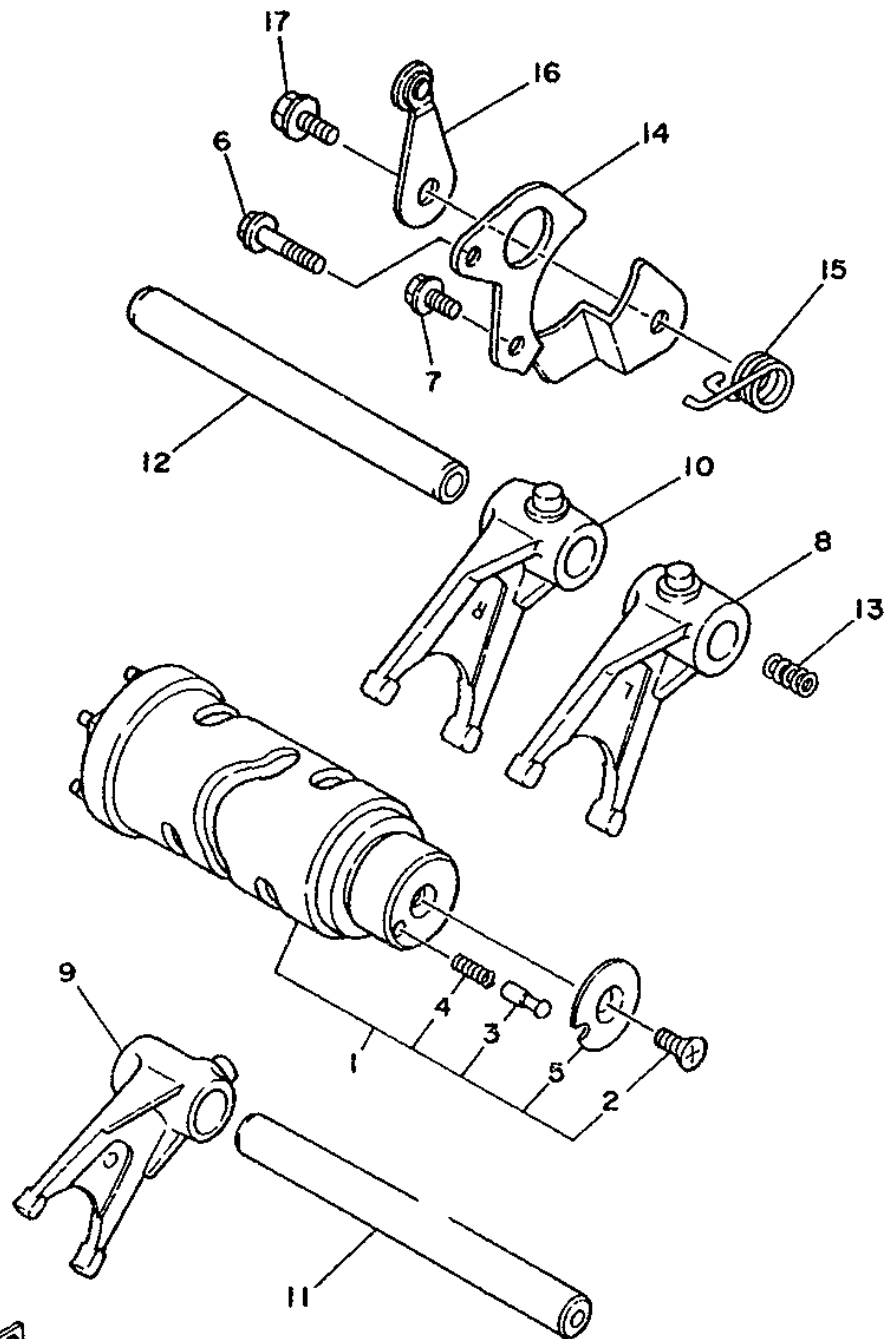


Ref No	Part No	Description
01	3VD-18540-00-00	Shift Cam Assy
02	98701-05012-00	• . Screw, Flat Head
03	278-18542-00-00	• . Point, Neutral
04	90501-06022-00	• . Spring, Compression
05	278-18566-00-00	• . Plate, Side 2
06	90105-06597-00	Bolt, Washer Based
07	90105-06397-00	Bolt, Washer Based
08	3LD-18511-00-00	Fork, Shift 1
09	3LD-18512-00-00	Fork, Shift 2
10	3LD-18513-00-00	Fork, Shift 3
11	3VD-18531-00-00	Bar, Shift Fork Guide 1
12	3VD-18535-00-00	Bar, Shift Fork Guide 2
13	90501-071F1-00	Spring, Compression
14	3LD-18536-00-00	Stopper, Shift Bar
15	90508-262A2-00	Spring, Torsion
16	36Y-18140-00-00	Stopper Lever Assy
17	90109-063F8-00	Bolt




3LD1351-9170


Ref No	Part No	Description
01	3LD-18101-01-00	Shift Shaft Assy
02	90508-32682-00	• . Spring, Torsion
03	90201-191J4-00	• . Washer, Plate
04	99009-19400-00	• . Circlip
05	90201-12575-00	Washer, Plate
06	99006-10600-00	Circlip
07	3LD-18130-00-00	Shift Shaft Assy
08	2H9-18154-00-00	• . Cover, Dust
09	95826-06020-00	Bolt, Flange
10	3VD-18115-00-00	Rod, Shift
11	90170-06228-00	Nut (counter Clockwise)
12	95303-06700-00	Nut
13	3VD-18110-00-00	Shift Pedal Assy
14	2H9-18154-00-00	• . Cover, Dust
15	132-18113-01-00	• . Cover, Shift Pedal
16	2YK-27434-01-00	Bolt
17	90206-12074-00	Washer, Wave
18	90201-081H4-00	Washer, Plate
19	4G0-18127-00-00	Stopper, Screw
20	93102-12106-00	Oil Seal (sd 12-22-5 Hs)

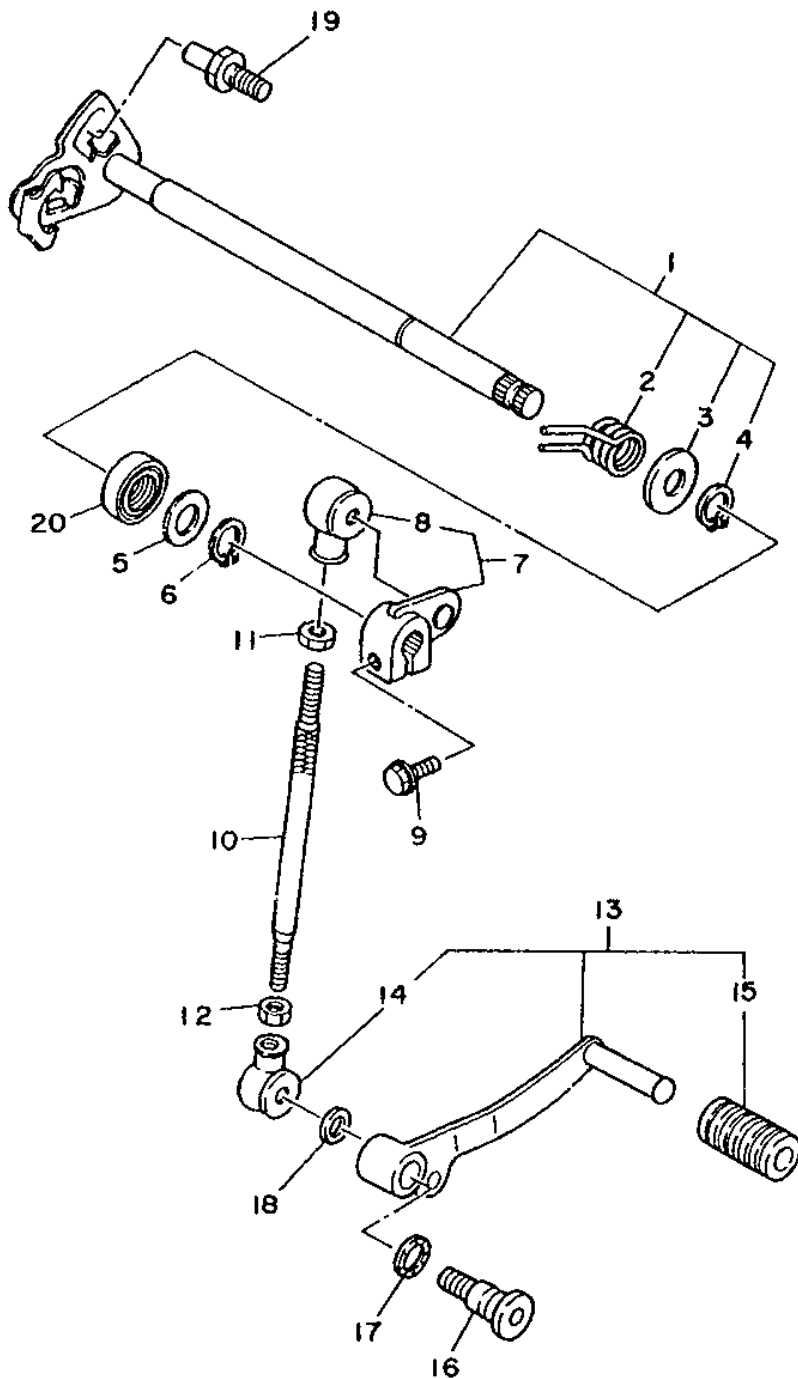


3VD1351-1180

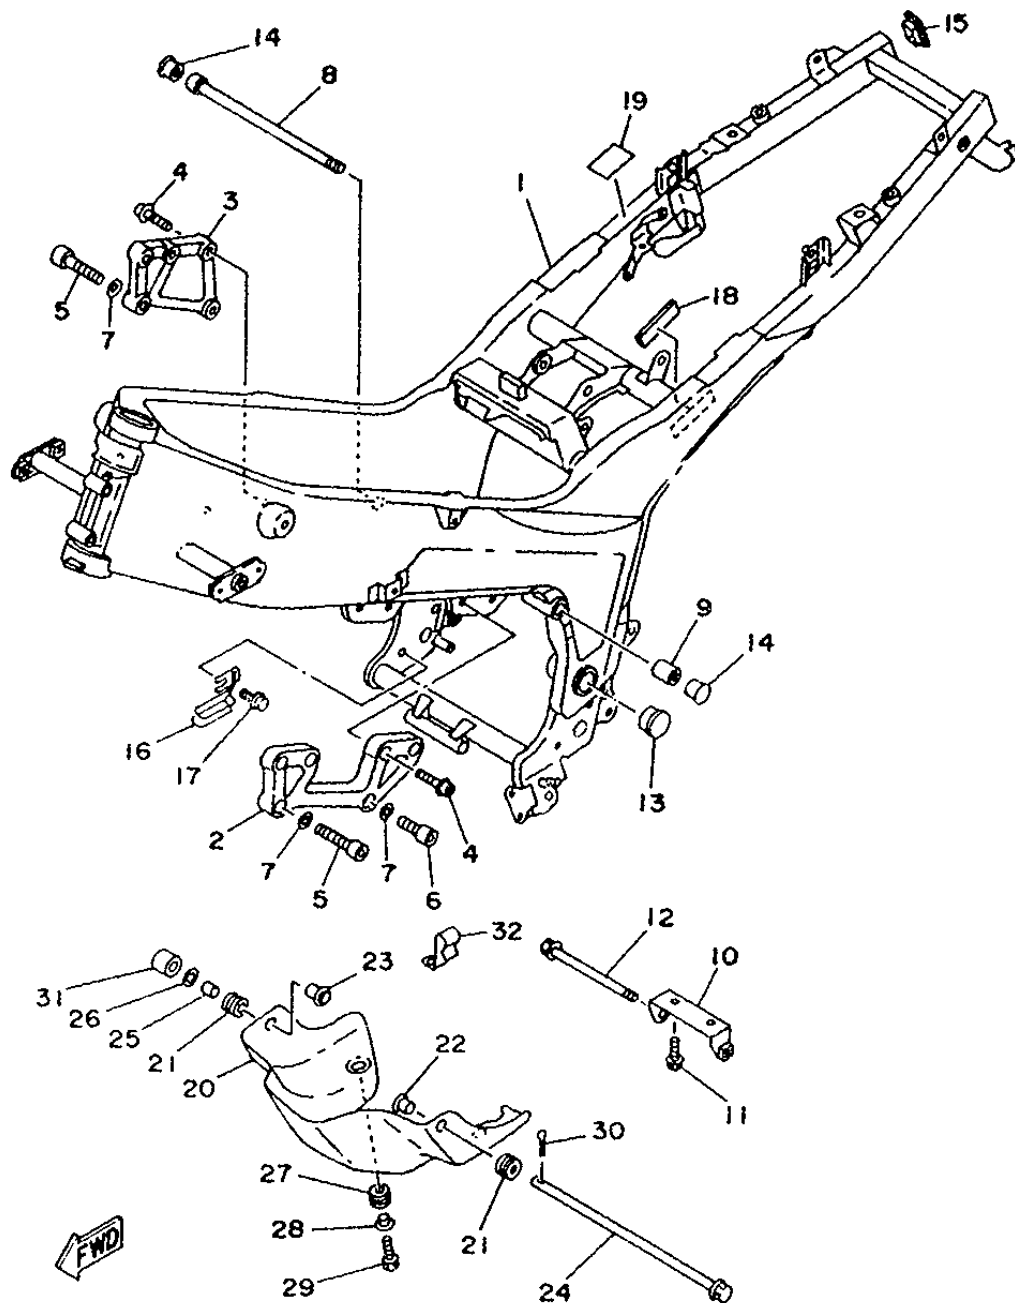

Ref No	Part No	Description
01	3VD-21110-00-LY	Frame Comp.
02	3VD-21411-00-00	Bracket, Engine 1
03	3VD-21419-00-00	Bracket, Engine 2
04	90109-085F7-00	Bolt
05	91316-10045-00	Bolt
06	91316-10030-00	Bolt
07	90201-100F7-00	Washer, Plate
08	90110-10175-00	Bolt, Hexagon Socket Head
09	90179-10377-00	Nut
10	3VD-21489-00-00	Bracket, Engine Lower
11	95821-08020-00	Bolt, Flange
12	90105-10328-00	Bolt, Washer Based
13	3SX-2135F-00-00	Cover
14	3LD-2143A-00-00	Cap
15	3VD-2143A-00-00	Cap
16	3VD-21164-00-00	Holder, Cable
17	95826-06010-00	Bolt
18	34M-21639-00-00	Damper 2
19	3YL-12232-00-00	Damper
20	3VD-15491-00-00	Protector
21	90480-15397-00	Grommet
22	3VD-15598-00-00	Collar
23	3VD-15764-00-00	Collar 1
24	3VD-15659-00-00	Shaft
25	3VD-15327-00-00	Spacer, Engine Mount
26	90201-08326-00	Washer, Plate
27	90480-14023-00	Grommet
28	90387-07391-00	Collar
29	97011-06025-00	Bolt
30	91401-25020-00	Pin, Cotter
31	10V-25188-00-00	Cap
32	90465-08252-00	Clamp

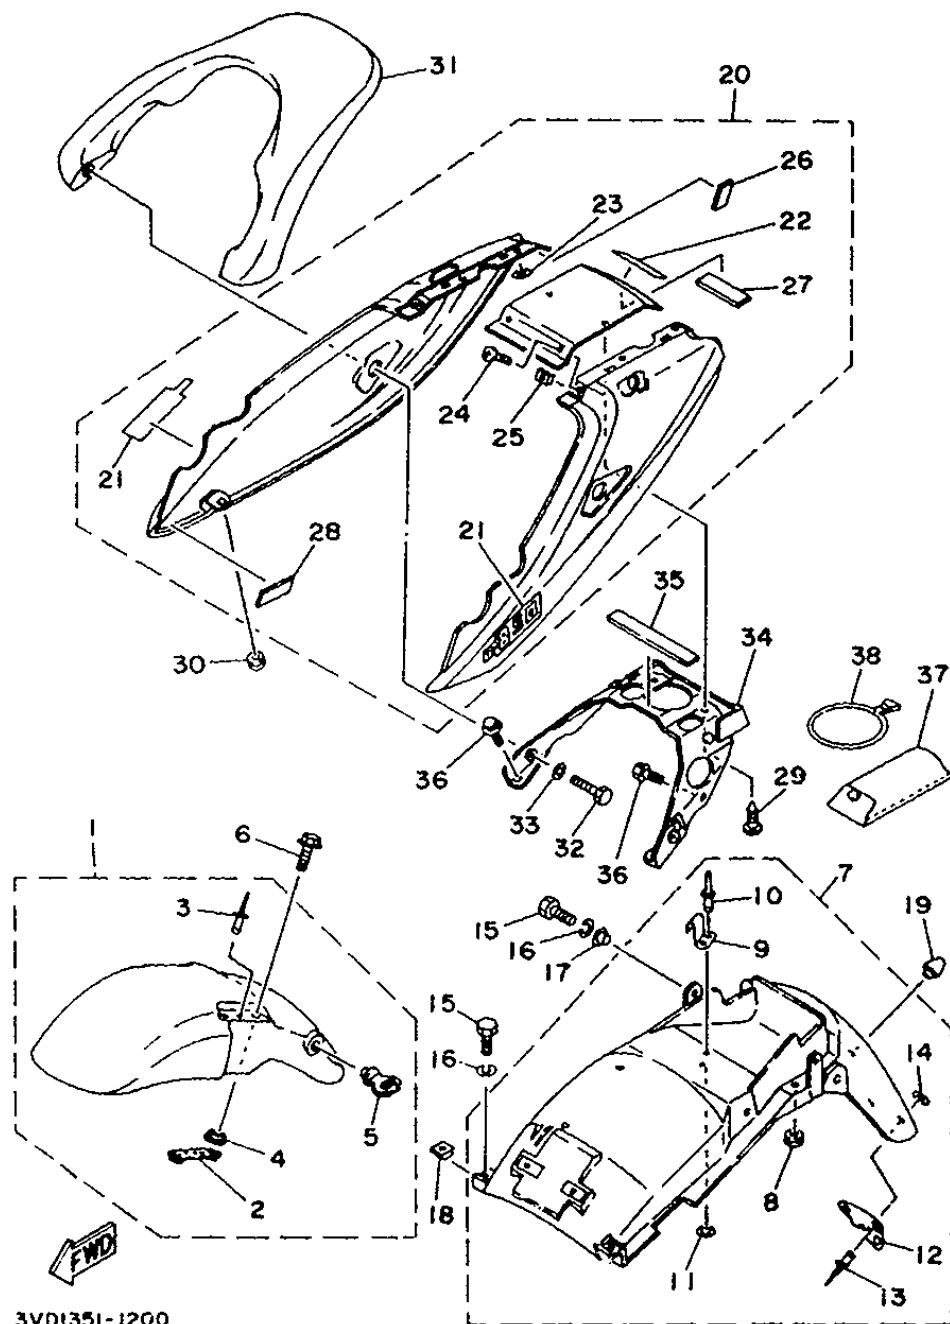


Ref No	Part No	Description
01	3VD-Y2151-00-P0	Front Fender Comp.
01	3VD-Y2151-00-4B	Front Fender Comp.
02	3GM-21512-00-00	. Bracket, Fender
03	90267-32071-00	. Rivet, Blind
04	90387-065T2-00	. Collar
05	1A8-21518-00-00	. Holder, Cable
06	90105-06605-00	Bolt, Washer Based
07	3VD-Y2161-00-00	Fender, Rear
08	90480-10258-00	. Grommet
09	3VD-21366-00-00	. Hook, Tool Band
10	90267-40073-00	. Rivet, Blind
11	92990-04200-00	. Washer, Plain
12	3HE-85132-00-00	. Bracket, Reflector 1
13	90267-40076-00	. Rivet, Blind
14	90201-044A2-00	. Washer, Plate
15	97011-06020-00	Bolt
16	92990-06100-00	Washer
17	90387-07717-00	Collar
18	90183-06023-00	Nut, Spring
19	4G0-21639-00-00	Damper 2
20	3VD-W247K-00-4B	Cover, Rear Fender
20	3VD-W247K-10-P0	Cover, Rear Fender
21	3VD-21737-00-00	. Emblem
21	3VD-21737-10-00	. Emblem
22	99236-00020-00	. Emblem, Yamaha
23	90183-08014-00	. Nut, Spring
24	98906-05012-00	. Screw, Bind
25	90183-05024-00	. Nut, Spring
26	5H0-8235Y-M0-00	. Damper
27	1AE-2837J-00-00	. Damper 5
28	1KT-21717-00-00	. Damper, Side Cover
29	97706-50012-00	Screw, Tapping
30	90480-12320-00	Grommet
31	3VD-21645-00-P0	Stay, Rear
31	3VD-21645-00-4B	Stay, Rear
32	97026-08035-00	Bolt
33	92906-08600-00	Washer, Plate
34	3VD-2117E-00-00	Bracket, Taillight
35	J44-78248-00-00	Seal 4
36	95816-08016-00	Bolt, Flange
37	3VD-28100-00-00	Tool Kit
38	3YX-21376-00-00	Band, Tool

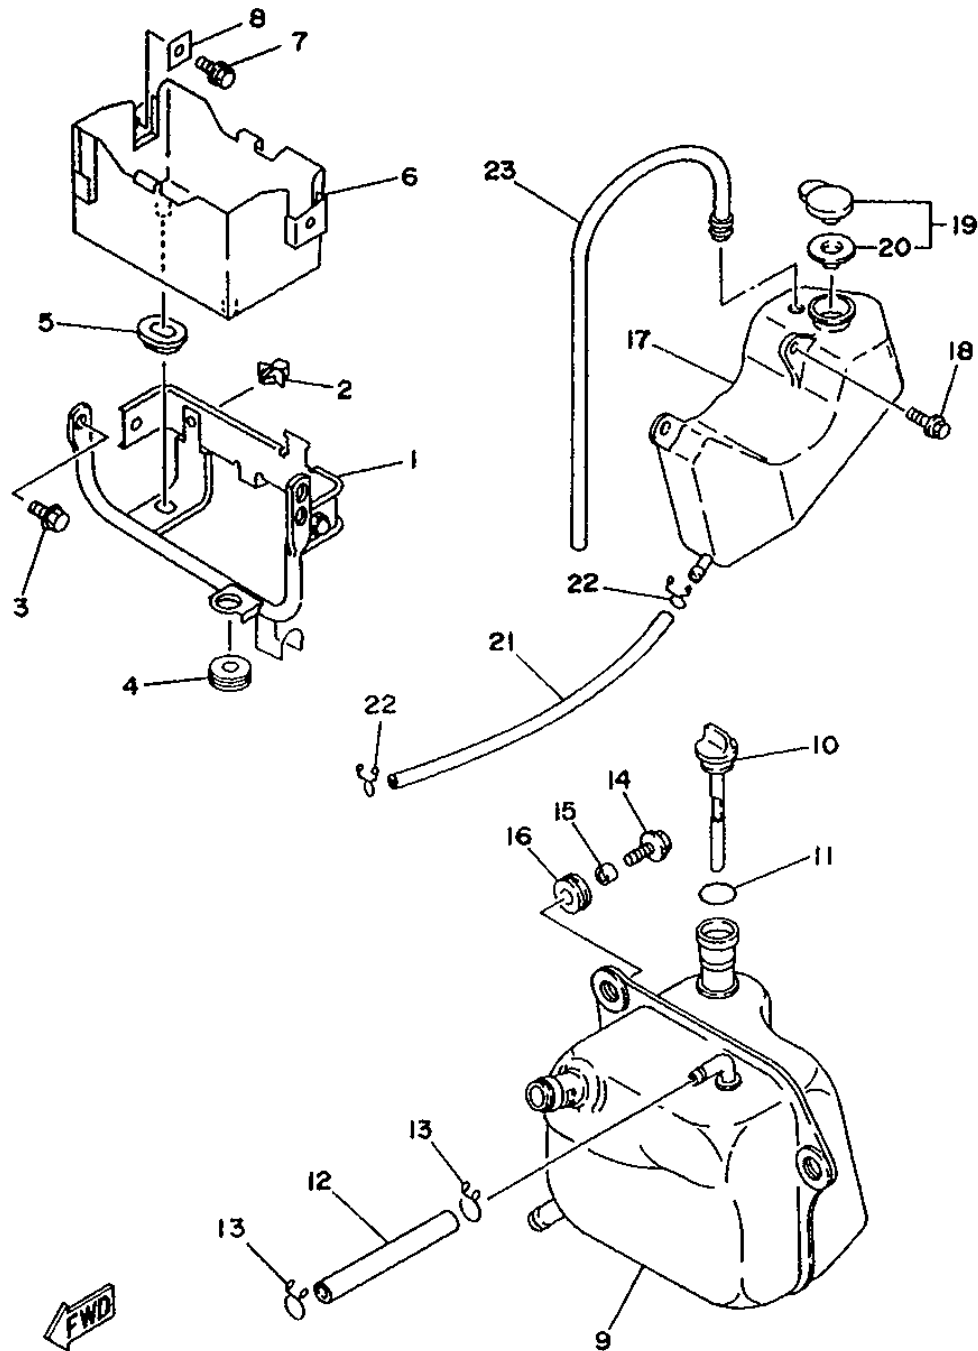


3VD1351-1210

Ref No	Part No	Description
01	3VD-22535-00-00	Stay, Battery 1
02	90464-11163-00	Clamp
03	95811-06012-00	Bolt, Flg.
04	90480-16233-00	Grommet
05	90480-01401-00	Grommet
06	3VD-2177G-00-00	Box, Battery
07	95811-06012-00	Bolt, Flg.
08	90209-07319-00	Washer
09	3VD-21750-00-00	Oil Tank Assy
10	3VD-21761-00-00	Gauge, Level
11	93210-21190-00	O-ring
12	90445-100H5-00	Hose
13	90467-10008-00	Clip
14	90119-06096-00	Bolt, With Washer
15	90387-060A7-00	Collar
16	90480-16233-00	Grommet
17	3VD-21871-00-00	Tank, Recovery
18	90119-06056-00	Bolt, With Washer
19	1AA-21815-00-00	Cap
20	1AA-21874-00-00	Gasket
21	90445-095E9-00	Hose
22	90467-08017-00	Clip
23	1KF-21816-00-00	Pipe 1

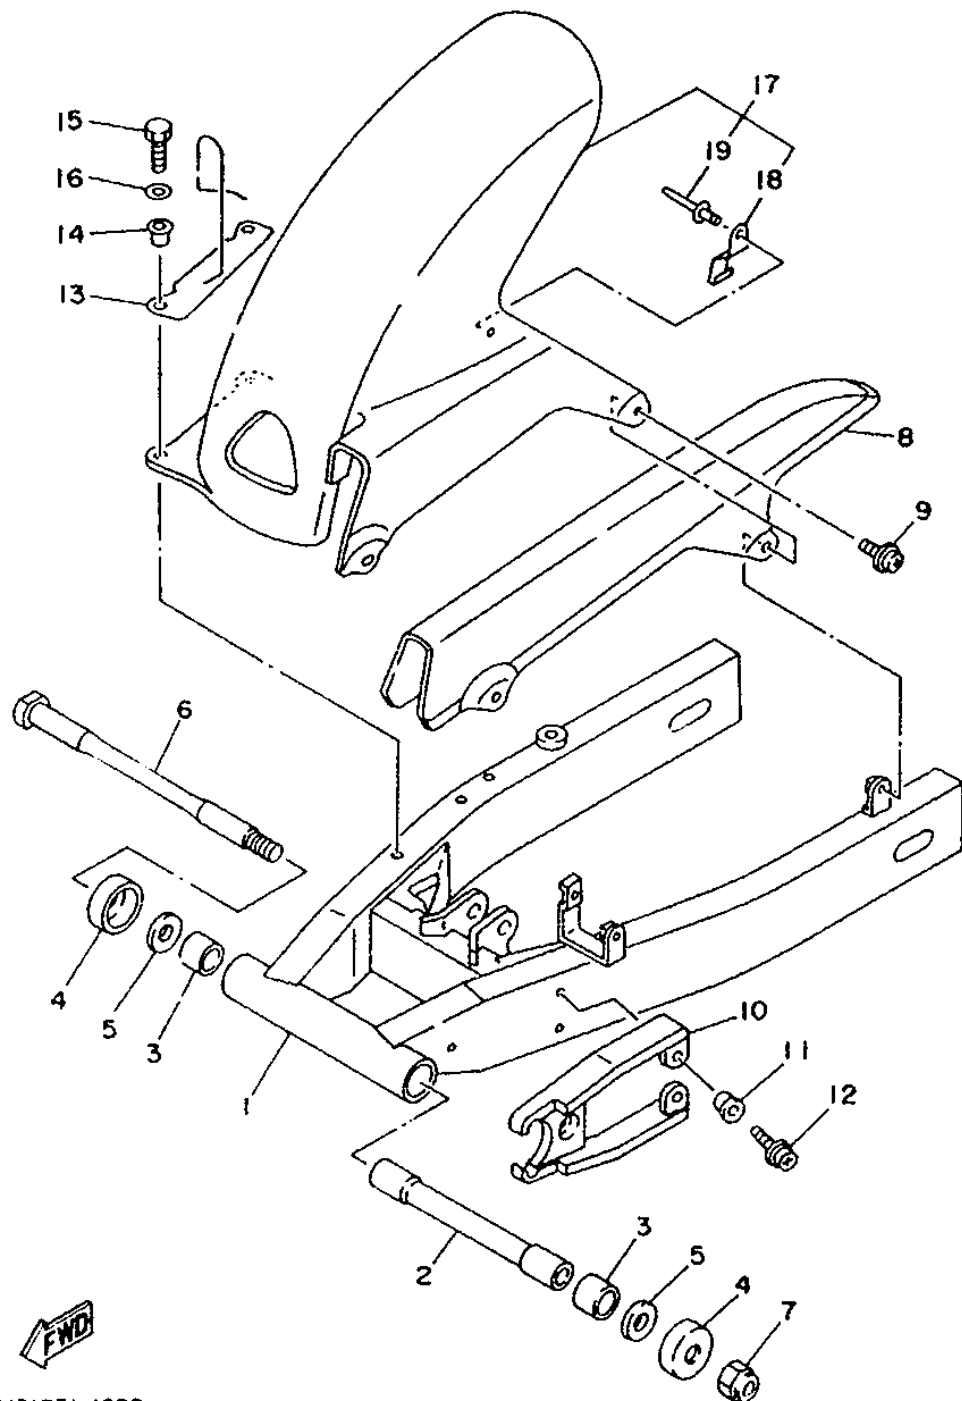

Ref No	Part No	Description
01	3VD-22110-00-00	Rear Arm Comp.
02	33M-22184-00-00	Bush
03	93320-32403-00	Bearing
04	4X7-22129-00-00	Cover, Thrust 2
05	90201-161J3-00	Washer, Plate
06	46X-22141-00-00	Shaft, Pivot
07	90185-14070-00	Nut, Self-locking
08	3VD-22311-00-00	Case, Chain
09	90159-06071-00	Screw, With Washer
10	3VD-22151-00-00	Seal, Guard
11	90387-06681-00	Collar
12	90159-06084-00	Screw, With Washer
13	3VD-25875-00-00	Holder, Brake Hose 1
14	90387-064J1-00	Collar
15	97011-06025-00	Bolt
16	92906-06600-00	Washer, Plate
17	3VD-W2165-00-00	Fender Comp, Rear Tire
18	3VD-2164F-00-00	• . Stay 1
19	90267-40110-00	• . Rivet, Blind


3VDI351-1220

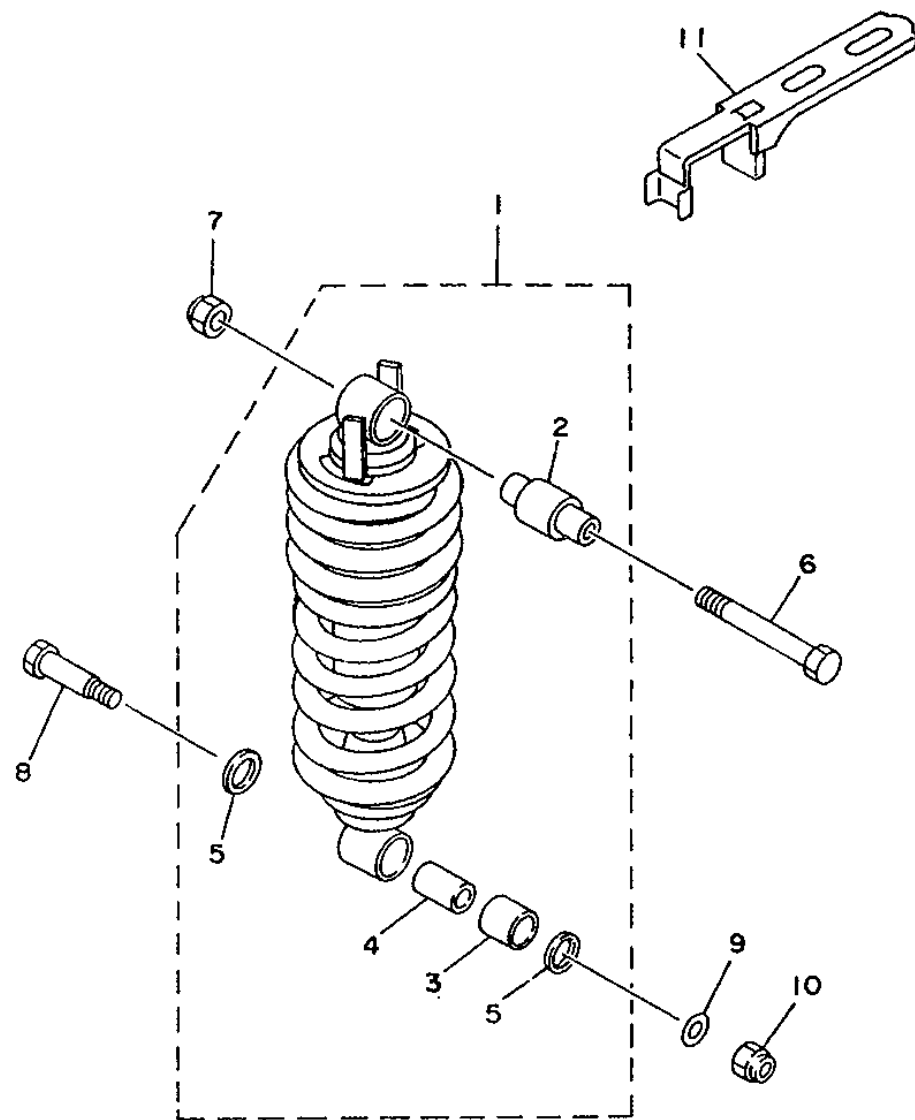


Ref No	Part No	Description
01	3VD-22210-00-00	Shock Absorber Assy, Rear
02	3VD-22216-00-00	• . Bush, Rear Shock Absorber
03	90384-18190-00	• . Bush, Bimetal Formed
04	90387-127X0-00	• . Collar
05	93109-18020-00	• . Oil Seal
06	90109-125F1-00	Bolt
07	95601-12100-00	Nut, U
08	90101-10659-00	Bolt
09	90201-124G9-00	Washer, Plate
10	95611-10100-00	Nut, U
11	3VD-22464-00-00	Knob, Control



3VD135I-1230

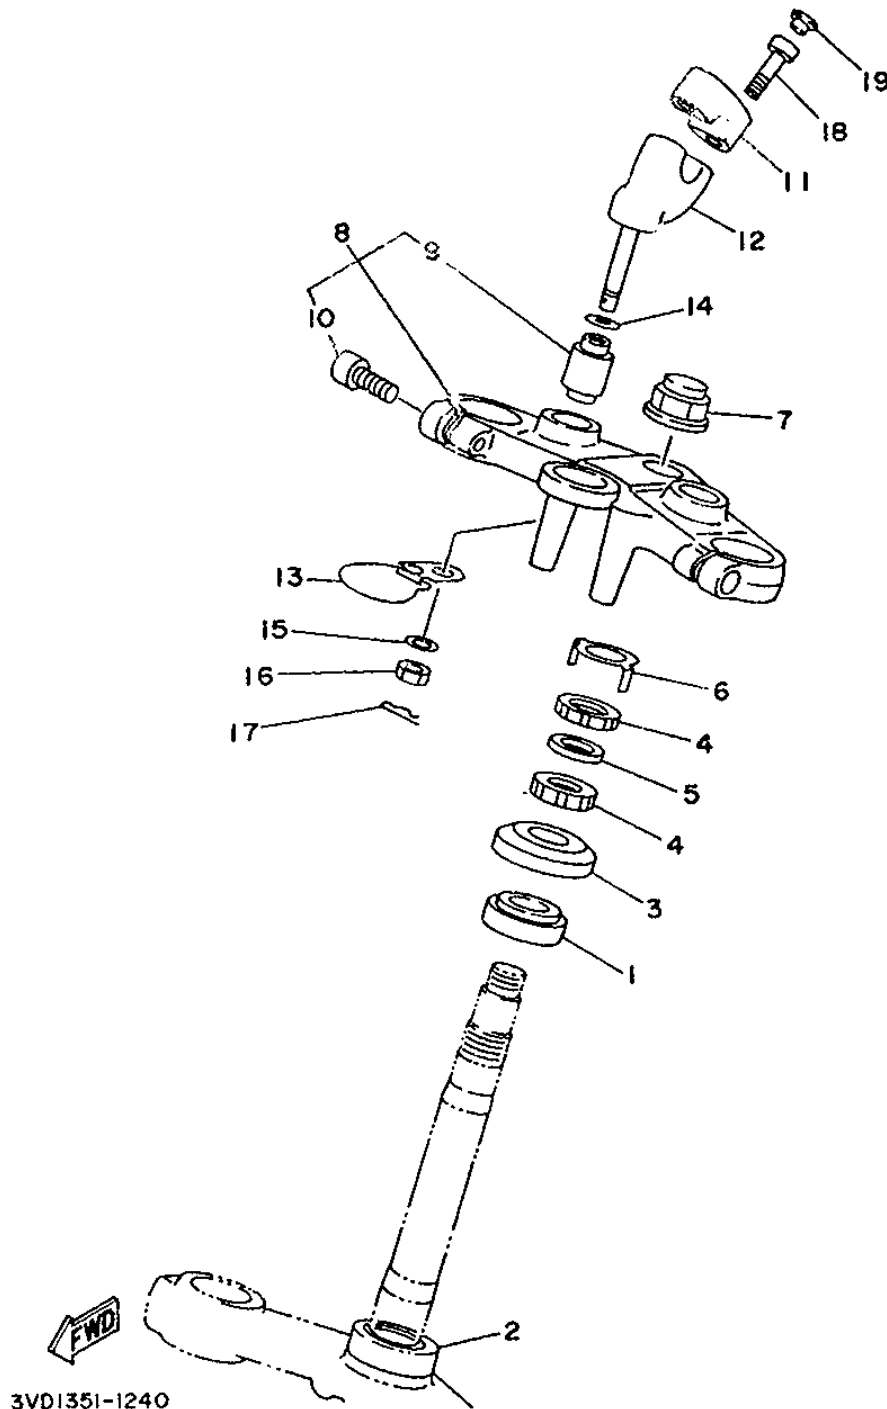



Ref No	Part No	Description
01	93332-00023-00	Bearing
02	93332-00008-00	Bearing
03	3HE-23416-00-00	Cover, Ball Race 2
04	90179-25033-00	Nut, Pop
05	90202-26142-00	Washer, Plate
06	26H-23418-01-00	Washer, Special
07	90176-22050-00	Nut, Crown
08	3VD-Y2343-00-00	Crown, Handle
09	3VD-23434-00-00	• . Holder, Damper
10	91316-08030-00	• . Bolt
11	3VD-23441-00-00	Holder, Handle Upper
12	3VD-23442-00-00	Holder, Handle Lower
13	3VD-23389-00-00	Guide, Cable
14	90201-100A1-00	Washer, Plate
15	92901-10100-00	Washer, Spring
16	95303-10700-00	Nut
17	90468-12006-00	Clip
18	91316-08030-00	Bolt
19	341-23469-00-00	Cap, Bolt

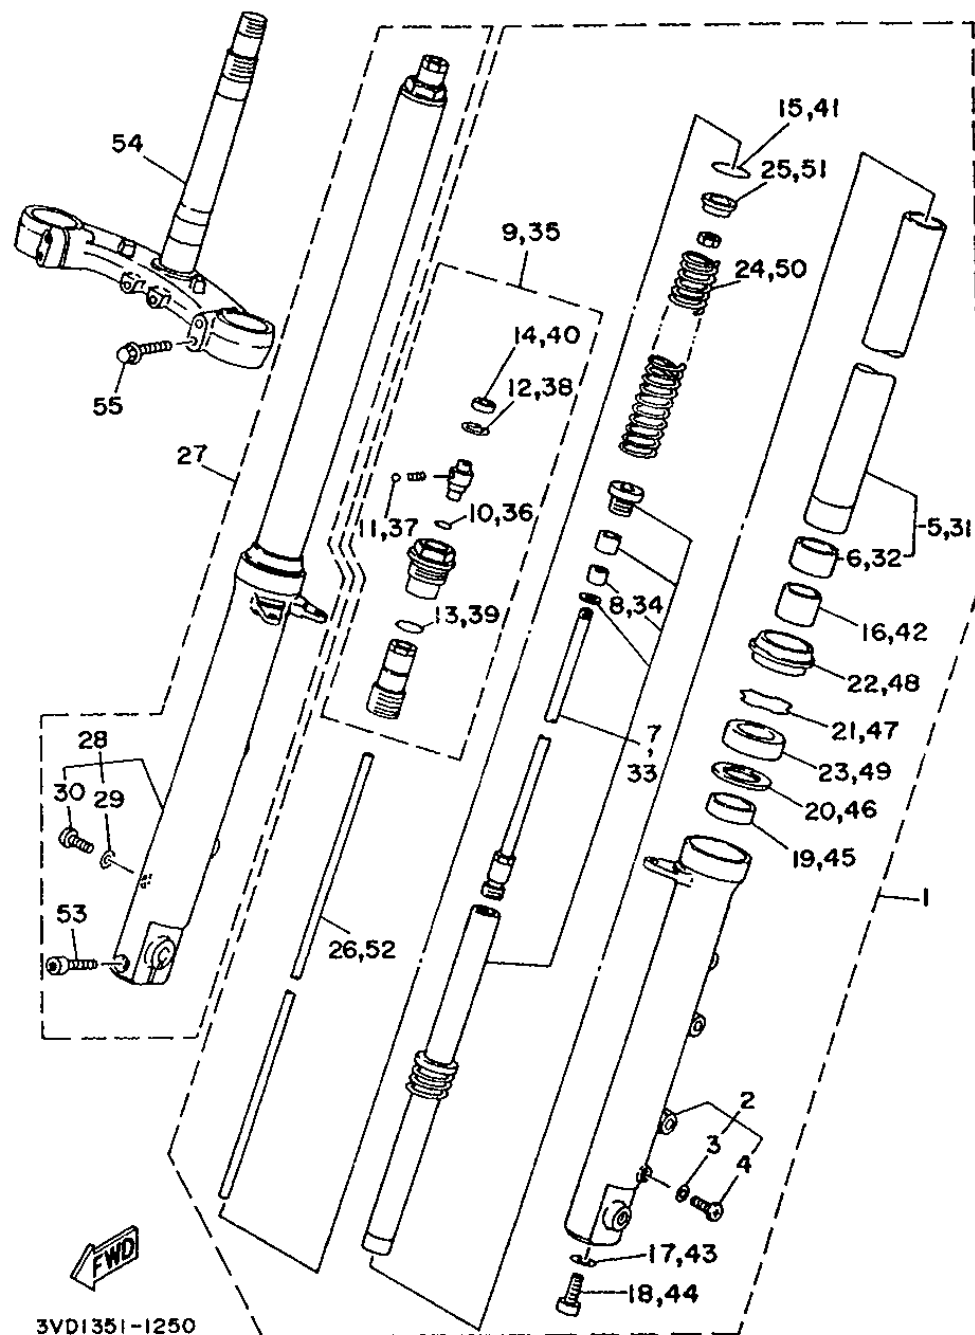


Ref No	Part No	Description
01	3VD-23102-00-00	Front Fork Assy (l.h)
02	3VD-23106-00-00	• . Outer Tube Comp. (l.h)
03	5U8-23129-00-00	•• .. Gasket, Drain Plug
04	98501-04006-00	•• .. Screw, Pan Head
05	3VD-23110-00-00	• . Inner Tube Comp.1
06	3VD-23135-00-00	•• .. Metal, Slide 2
07	3VD-2330E-00-00	• . Damper Assy
08	3VD-2312K-00-00	•• .. Piston, Front Fork
09	3VD-23111-00-00	• . Bolt, Cap
10	93210-09350-00	•• .. O-ring
11	93503-16010-00	•• .. Ball
12	3VD-23183-00-00	•• .. Circlip
13	93210-18N01-00	•• .. O-ring
14	3VD-2319U-00-00	•• .. Cap
15	93210-35N02-00	• . O-ring
16	3VD-23173-00-00	• . Spindle, Taper
17	90430-10171-00	• . Gasket
18	91311-10025-00	• . Bolt
19	3VD-23125-00-00	• . Metal, Slide 1
20	3VD-23115-00-00	• . Guide, Cover Upper
21	3VD-23156-00-00	• . Clip, Oil Seal
22	3VD-23144-00-00	• . Seal, Dust
23	3VD-23145-00-00	• . Oil Seal
24	3VD-23141-00-00	• . Spring, Front Fork
25	3VD-23142-00-00	• . Seat, Spring Upper
26	3VD-2318Y-00-00	• . Plunger
27	3VD-23103-00-00	Front Fork Assy (r.h)
28	3VD-23107-00-00	• . Outer Tube Comp. (r.h)
29	5U8-23129-00-00	•• .. Gasket, Drain Plug
30	98501-04006-00	•• .. Screw, Pan Head
31	3VD-23110-00-00	• . Inner Tube Comp.1
32	3VD-23135-00-00	•• .. Metal, Slide 2
33	3VD-2330E-00-00	• . Damper Assy
34	3VD-2312K-00-00	•• .. Piston, Front Fork
35	3VD-23111-00-00	• . Bolt, Cap
36	93210-09350-00	•• .. O-ring
37	93503-16010-00	•• .. Ball
38	3VD-23183-00-00	•• .. Circlip
39	93210-18N01-00	•• .. O-ring
40	3VD-2319U-00-00	•• .. Cap
41	93210-35N02-00	• . O-ring
42	3VD-23173-00-00	• . Spindle, Taper
43	90430-10171-00	• . Gasket
44	91311-10025-00	• . Bolt
45	3VD-23125-00-00	• . Metal, Slide 1
46	3VD-23115-00-00	• . Guide, Cover Upper
47	3VD-23156-00-00	• . Clip, Oil Seal
48	3VD-23144-00-00	• . Seal, Dust
49	3VD-23145-00-00	• . Oil Seal
50	3VD-23141-00-00	• . Spring, Front Fork
51	3VD-23142-00-00	• . Seat, Spring Upper
52	3VD-2318Y-00-00	• . Plunger
53	91311-08040-00	• . Bolt

Ref No	Part No	Description
54	3VD-23340-00-00	Under Bracket Comp.
55	95811-08035-00	Bolt, Flange

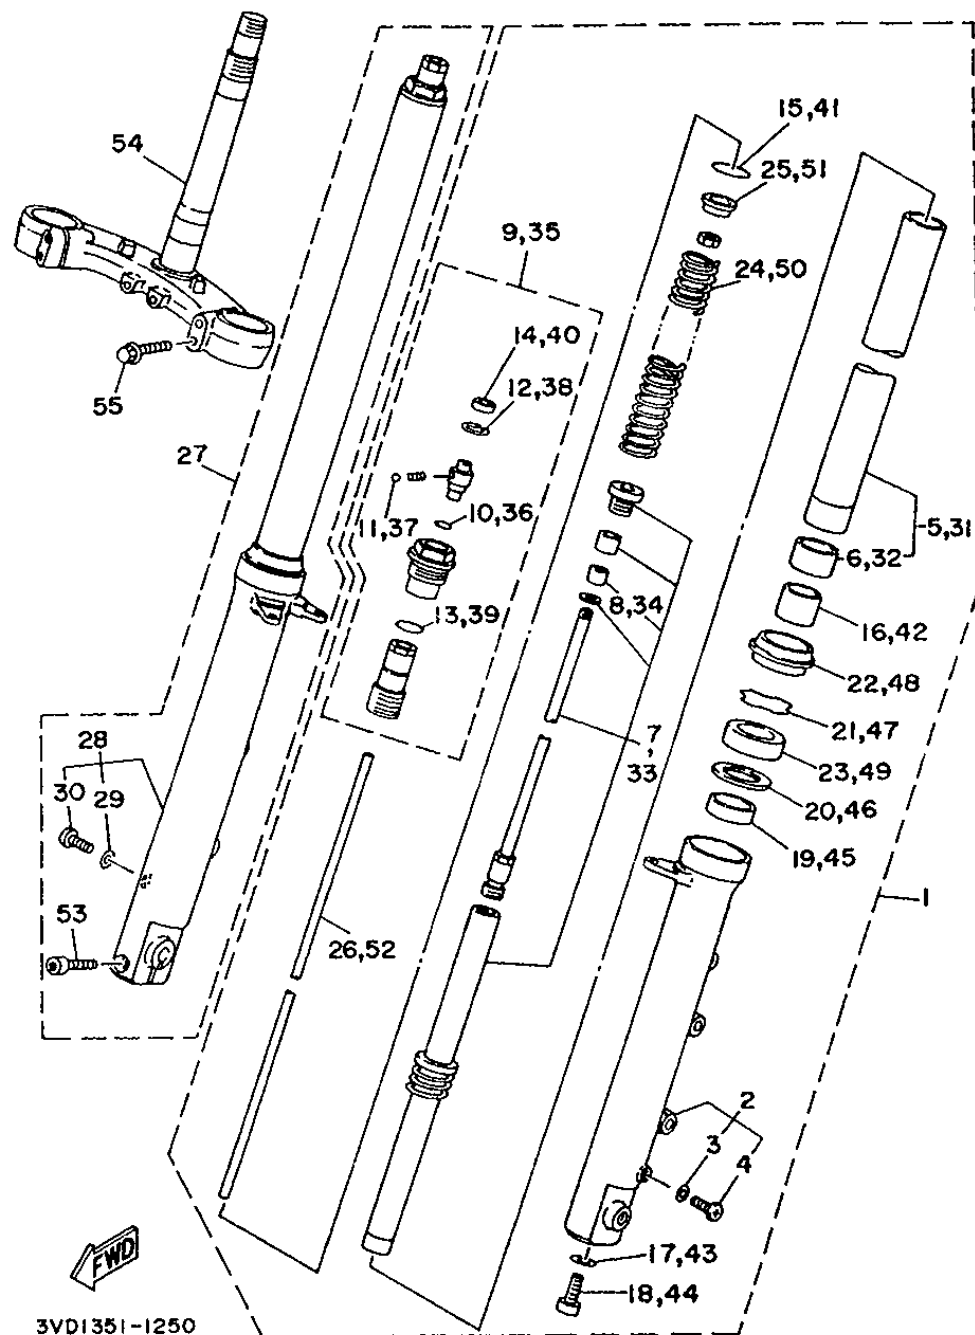

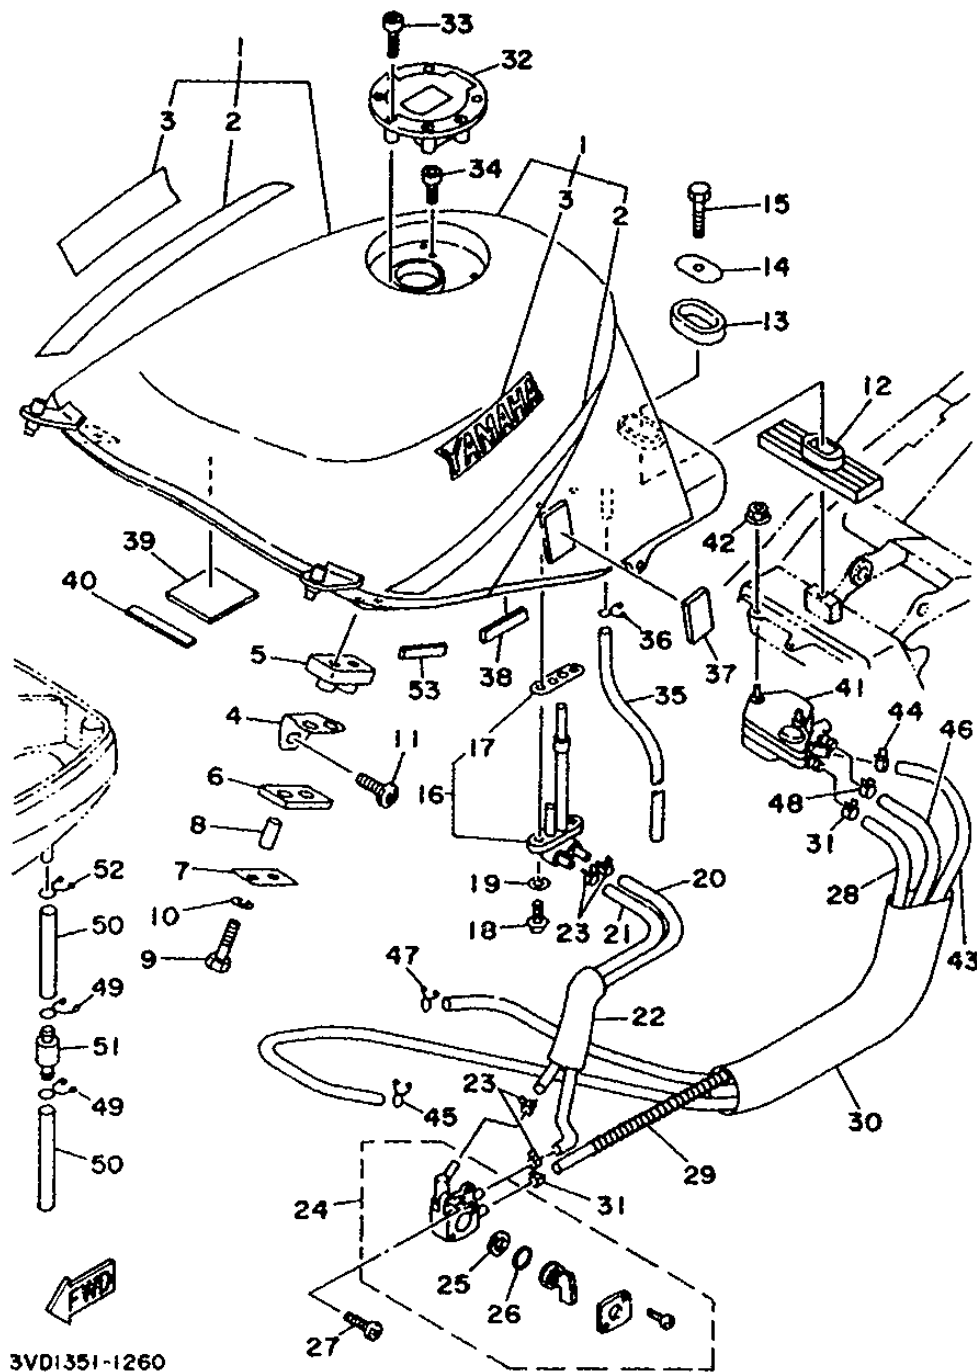


Ref No	Part No	Description
01	3VD-24110-00-01	Fuel Tank Comp.
01	3VD-24110-00-02	Fuel Tank Comp.
02	3VD-24240-00-00	• . Graphic Set
02	3VD-24240-10-00	• . Graphic Set
03	99226-00030-00	• . Emblem, Yamaha
04	3VD-24191-00-00	Bracket, Fuel Tank 1
05	3VD-24181-00-00	Damper, Locating 1
06	47X-24183-00-00	Damper, Locating 3
07	47X-24186-00-00	Washer, Special
08	90387-060N3-00	Collar
09	97001-06035-00	Bolt
10	92990-06100-00	Washer
11	90109-086A0-00	Bolt
12	2GH-24184-00-00	Damper, Locating 4
13	3Y6-24183-00-00	Damper, Locating 3
14	12R-24186-00-00	Washer, Special
15	97002-08030-00	Bolt
16	3VD-24560-00-00	Filter Assy
17	4X8-24512-00-00	• . O-ring
18	90149-06011-00	Screw
19	90202-05193-00	Washer, Plate
20	3VD-24311-00-00	Pipe, Fuel 1
21	3VD-24313-00-00	Pipe 3
22	3JK-24327-00-00	Protector, Pipe
23	90467-10091-00	Clip
24	3LN-24500-00-00	Fuel Cock Assy 1
25	3AJ-24523-00-00	• . Valve
26	3AJ-24534-00-00	• . Seal, Cock
27	95026-06010-00	Bolt, Flange
28	90445-112H2-00	Hose
29	90501-085G0-00	Spring, Compression
30	3VD-24327-00-00	Protector, Pipe
31	90467-10091-00	Clip
32	3XC-24602-00-00	Cap Assy
33	90110-05112-00	Bolt, Hexagon Socket Head
34	91311-05010-00	Bolt, Hex Socket Head
35	90445-102G9-00	Hose
36	90467-09006-00	Clip
37	3VD-2411H-00-00	Hook, Side Cover 2
38	1HX-24188-01-00	Mold, Fuel Tank
39	51L-28371-00-00	Damper
40	J44-78248-00-00	Seal 4
41	3LD-13910-00-00	Fuel Pump Assy
42	95706-05500-00	Nut, Flange
43	3VD-13929-00-00	Pipe, Impulse
44	90467-08017-00	Clip
45	90467-08021-00	Clip
46	3VD-14294-00-00	Hose
47	90467-11106-00	Clip
48	90467-10091-00	Clip
49	90467-10008-00	Clip
50	90445-11153-00	Hose
51	4X7-2149Y-00-00	Filter Assy

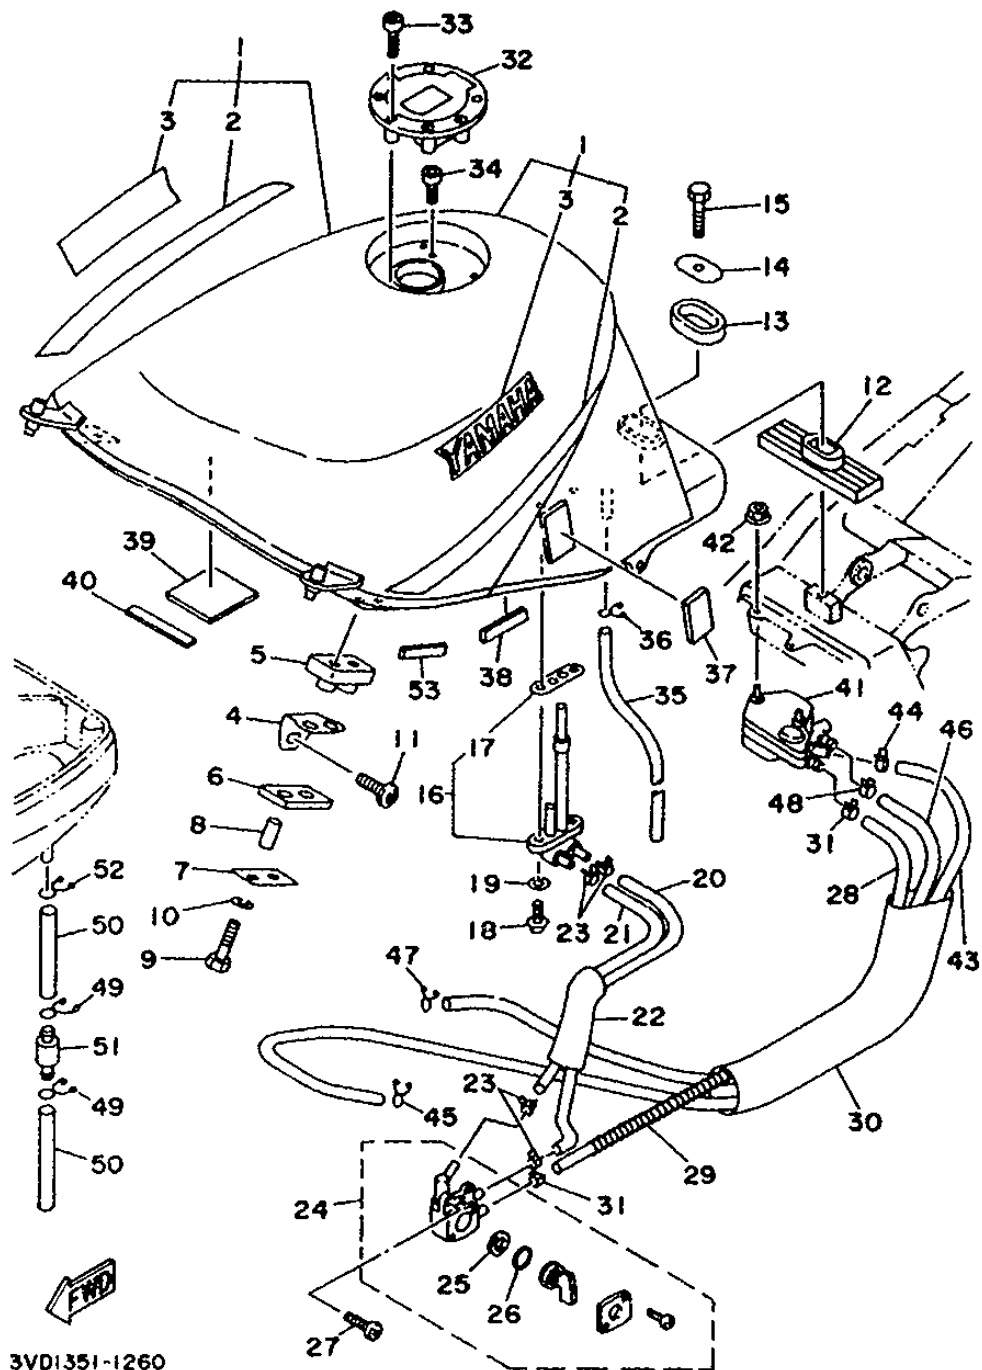

FUEL TANK


Ref No	Part No	Description
52	90467-11102-00	Clip
53	3VD-24188-00-00	Mold, Fuel Tank

Ref No	Part No	Description
01	3VD-24730-00-00	Double Seat Assy
02	3VD-2470F-00-00	• . Cover, Seat
03	3VD-24776-00-00	• . Lever, Seat
04	1JK-2478F-00-00	• . Rod, Connecting
05	3VD-24728-00-00	• . Bracket, Seat
06	3VD-24718-00-00	• . Bracket, Seat
07	95701-06500-00	• . Nut, flange
08	1T4-24741-00-00	• . Pad, Seat
09	1L9-24741-00-00	• . Pad, Seat
10	116-24741-00-00	• . Pad, Seat
11	22W-24741-00-00	• . Pad, Seat
12	51X-24705-00-00	Seat Lock Assy
13	95701-05500-00	Nut, Flange
14	1AE-24796-00-00	Cover

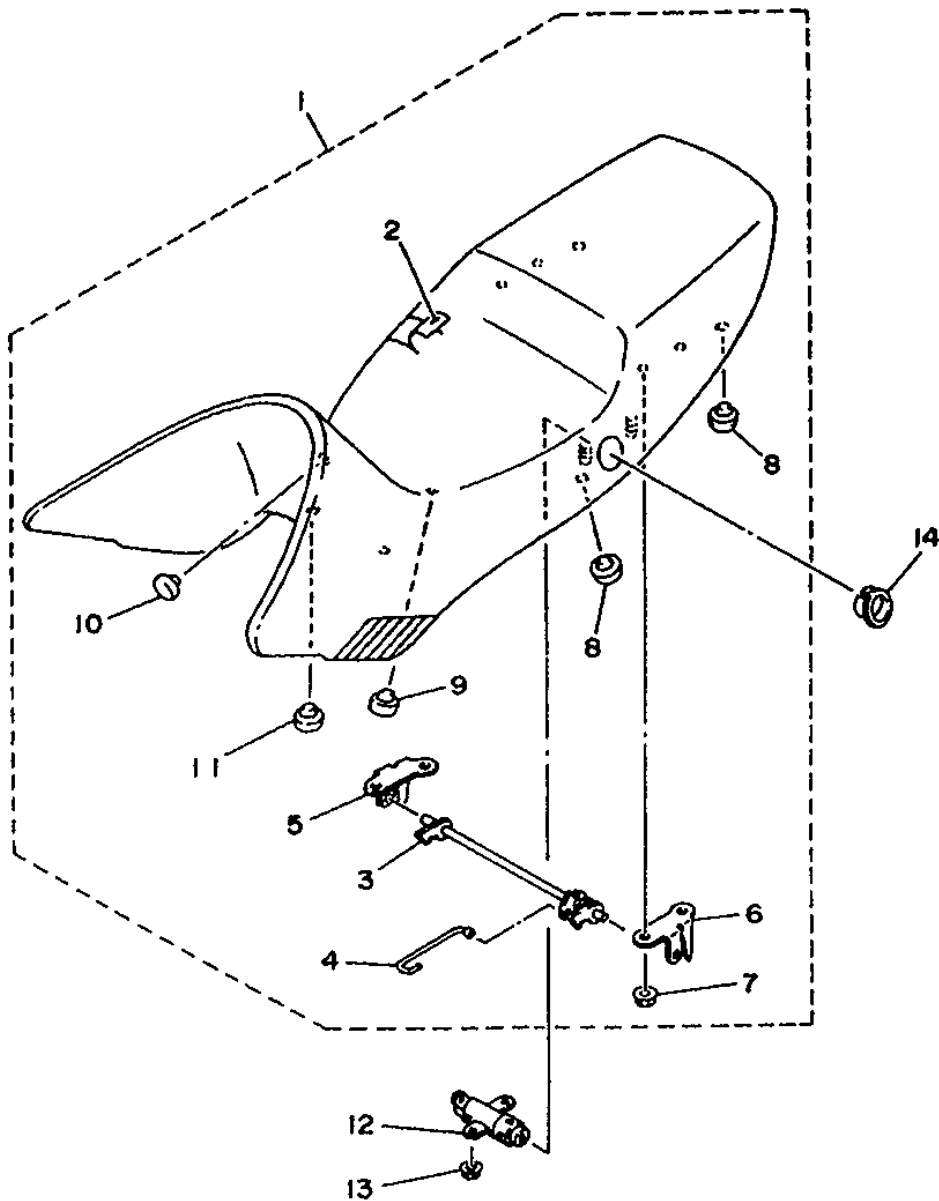


3VD1351-1270

Ref No	Part No	Description
01	3VD-25168-00-WN	Cast Wheel, Front
02	90560-17233-00	Spacer
03	93306-30309-00	Bearing (b6303zz)
04	93102-28022-00	Oil Seal
05	341-25149-00-00	Clutch, Meter
06	341-25846-00-00	Retainer, Clutch
07	93105-45017-00	Oil Seal
08	94111-186X9-00	Tire (mcs 110/80-18 58h G547p)
08	94111-187X0-00	Tire (110/80-17 58h K505f)
09	93900-00030-00	Valve, Rim
10	29L-25398-00-00	Balancer, Wheel (10g)
10	29L-25398-10-00	Balancer, Wheel (20g)
10	29L-25398-20-00	Balancer, Wheel (30g)
11	26H-25190-00-00	Gear Unit Assy
12	3GM-25181-00-00	Axle, Wheel
13	90387-177R1-00	Collar

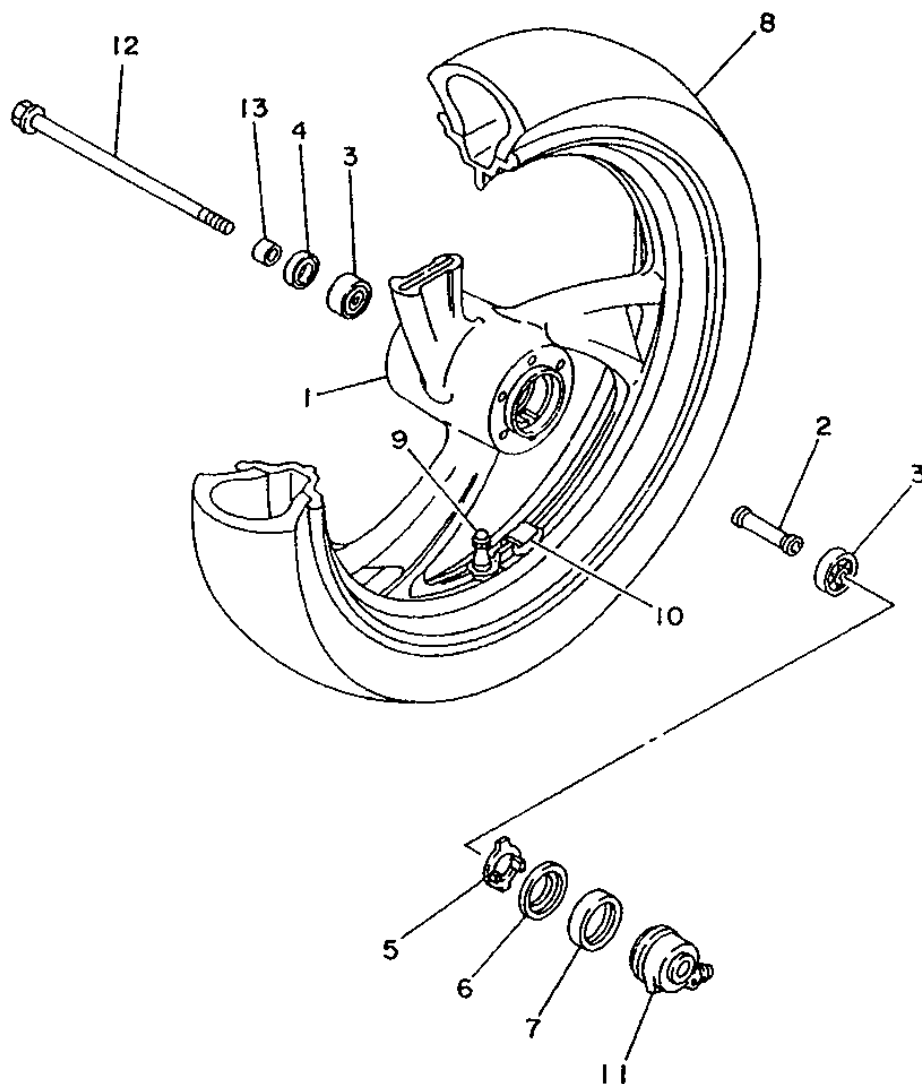


3VD1351-1280

Ref No	Part No	Description
01	3RG-2581T-00-00	Disc Brake Assy
02	90109-08718-00	Bolt
03	3XW-2580T-00-00	Caliper Assy (left)
04	1NL-W0057-00-00	• . Piston Assy, Caliper
05	1NL-W0047-00-00	•• .. Caliper Seal Kit
06	2GH-W0045-01-00	• . Brake Pad Kit
07	3HE-25924-00-00	• . Pin, Pad
08	3GM-25925-00-00	• . Clip
09	2GH-25919-00-00	• . Support, Pad
10	1J3-W0048-00-00	• . Breed Screw Kit
11	1KT-25836-00-00	• . Cover, Dust
12	3XW-2580U-00-00	Caliper Assy (right)
13	1NL-W0057-00-00	• . Piston Assy, Caliper
14	1NL-W0047-00-00	•• .. Caliper Seal Kit
15	2GH-W0045-01-00	• . Brake Pad Kit
16	3HE-25924-00-00	• . Pin, Pad
17	3GM-25925-00-00	• . Clip
18	2GH-25919-00-00	• . Support, Pad
19	1J3-W0048-00-00	• . Breed Screw Kit
20	1KT-25836-00-00	• . Cover, Dust
21	90105-10638-00	Bolt, Washer Based

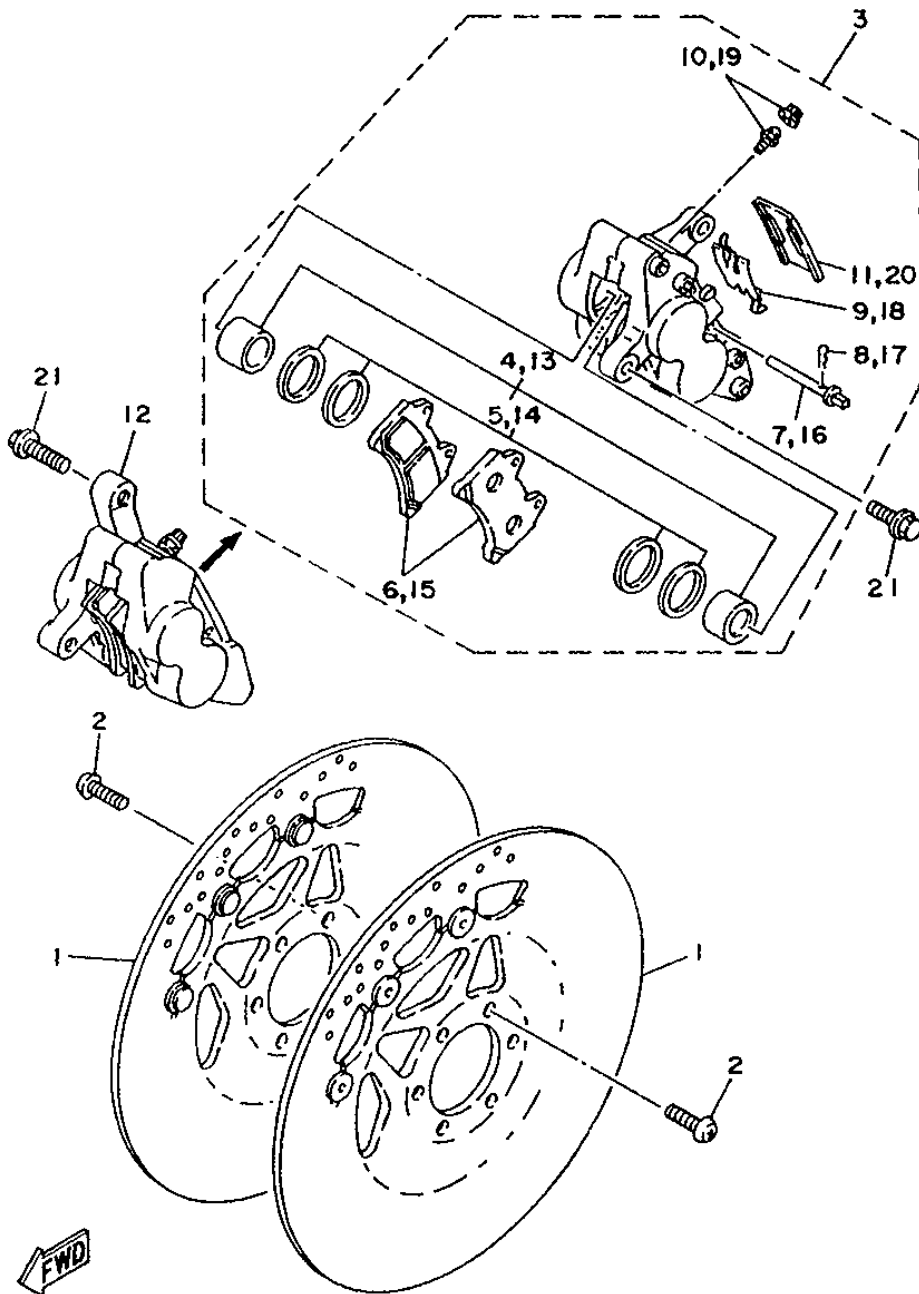


3VD1351-1290

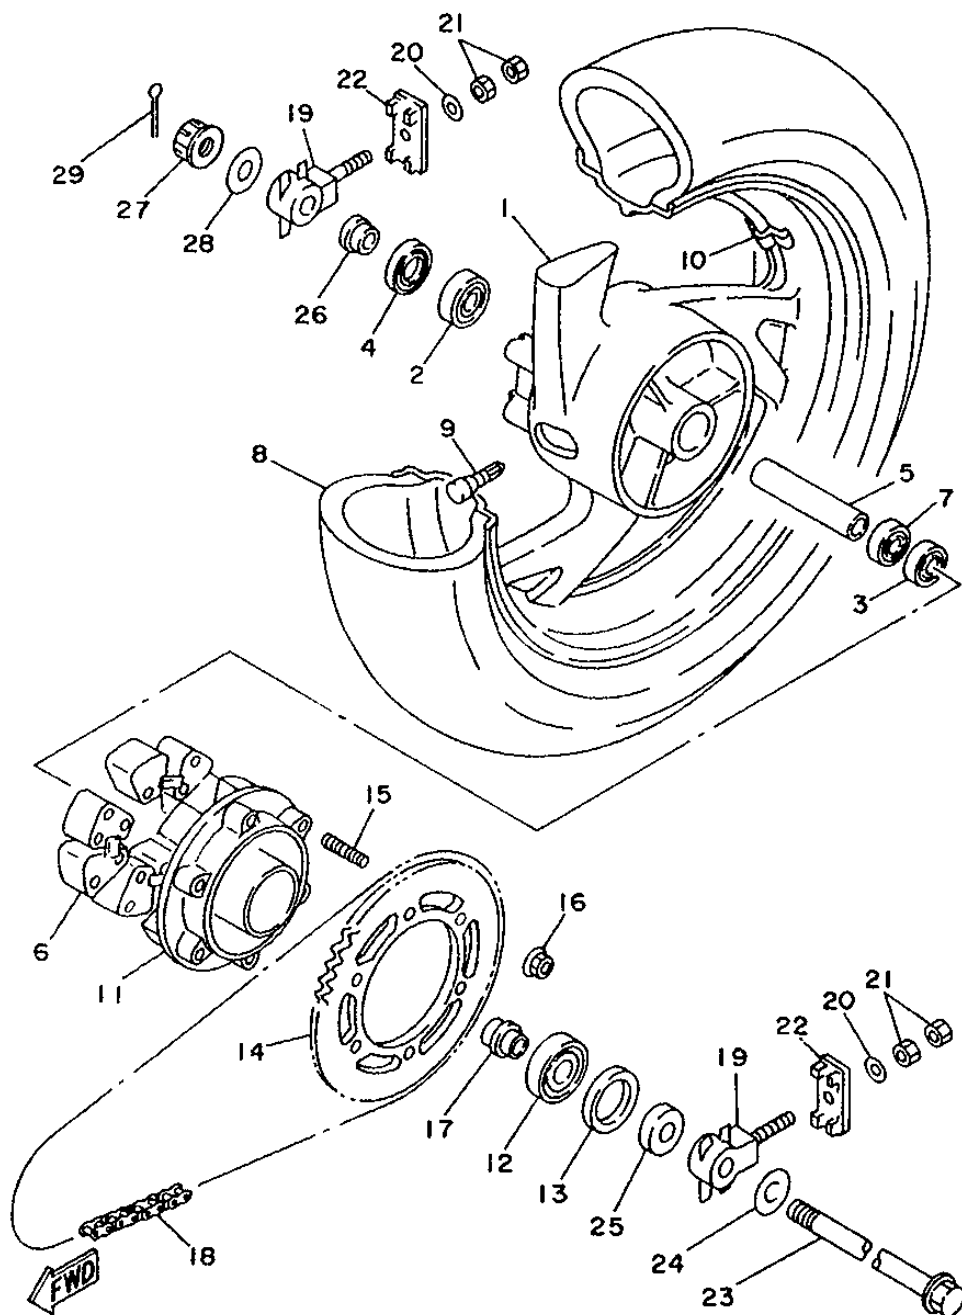

3VD1351-1300

Ref No	Part No	Description
01	3VD-25338-00-WN	Cast Wheel, Rear
02	93306-30309-00	Bearing (b6303zz)
03	93306-20314-00	Bearing (b6203du)
04	93102-25044-00	Oil Seal
05	90387-173M5-00	Collar
06	1UF-25364-00-00	Damper
07	93306-20314-00	Bearing (b6203du)
08	94115-176X7-00	Tire (mcs 150/70-17 69h G548)
08	94115-176X8-00	Tire (150/70-17 69h K505)
09	93900-00030-00	Valve, Rim
10	29L-25398-00-00	Balancer, Wheel (10g)
10	29L-25398-10-00	Balancer, Wheel (20g)
10	29L-25398-20-00	Balancer, Wheel (30g)
11	1UF-25366-00-00	Clutch, Hub
12	93306-37203-00	Bearing
13	93105-42024-00	Oil Seal
14	3VD-25444-20-00	Sprocket, Driven (44t)
15	90116-10485-00	Bolt, Stud
16	95601-10200-00	Nut, Self-locking
17	90387-177K0-00	Collar
18	94581-46114-00	Chain (d.i.d.525hv-1 4le)
19	3HE-25388-00-00	Puller, Chain 1
20	92901-08200-00	Washer, Plain
21	95303-08600-00	Nut
22	3HE-22174-00-00	End 1
23	1AE-25381-00-00	Axle, Wheel
24	90201-177K7-00	Washer, Plate
25	90387-174V9-00	Collar
26	90387-170J6-00	Collar
27	90171-16024-00	Nut, Castle
28	90201-165L8-00	Washer, Plate
29	91401-30030-00	Pin, Cotter

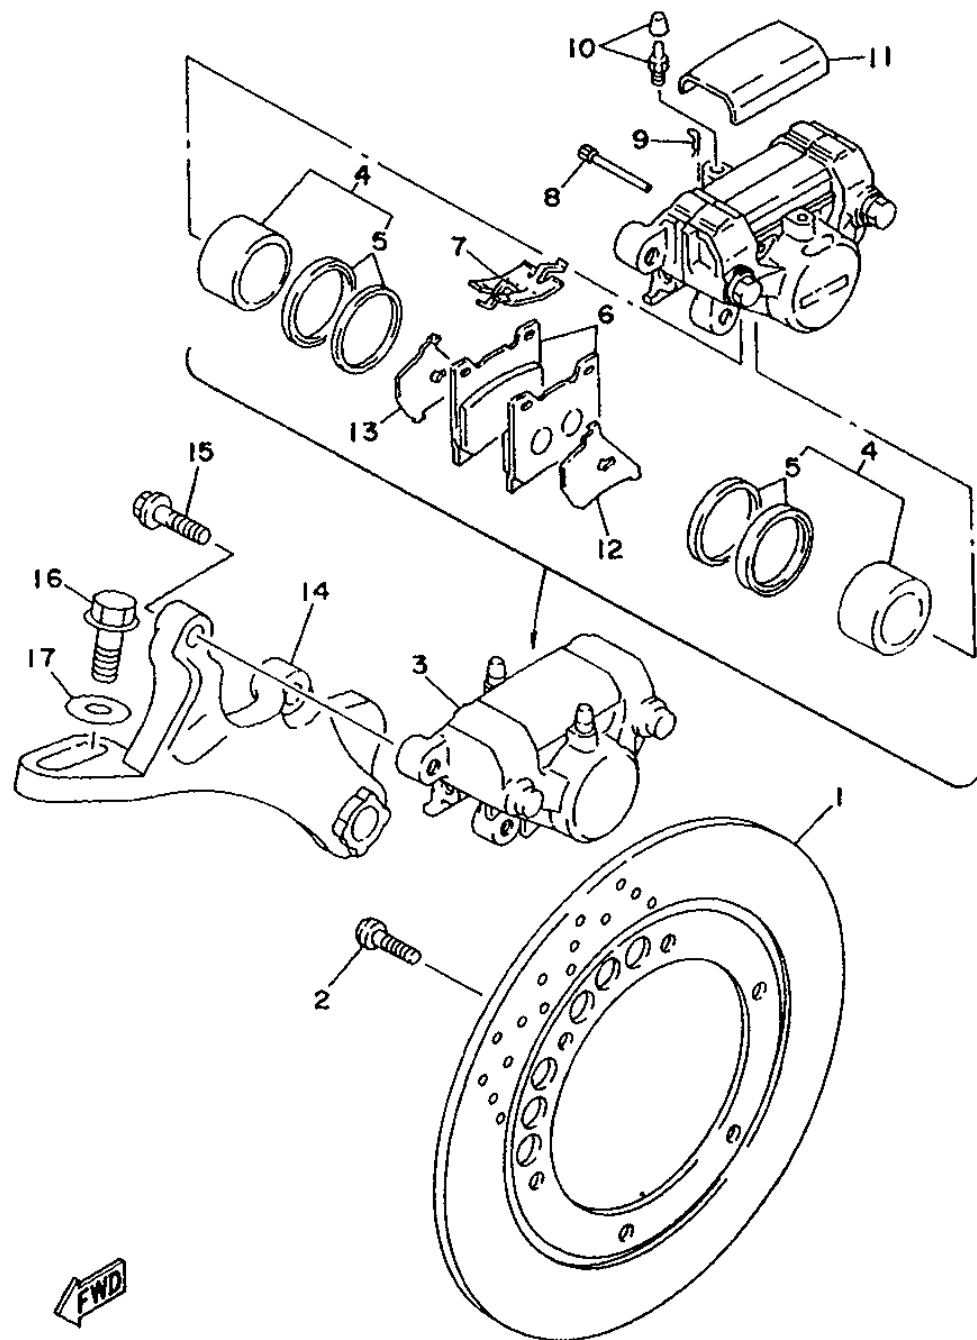


Ref No	Part No	Description
01	3VD-25831-00-00	Disc, Brake
02	90109-08718-00	Bolt
03	3HE-2580W-00-00	Caliper Assy, Rear 2
04	31A-W0057-00-00	• . Piston Assy, Caliper
05	31A-W0047-00-00	• . . Caliper Seal Kit
06	1FK-W0046-01-00	• . Brake Pad Kit, Rear
07	29L-25919-00-00	• . Support, Pad
08	3HE-25924-00-00	• . Pin, Pad
09	3HE-25925-00-00	• . Clip
10	1J3-W0048-00-00	• . Breed Screw Kit
11	51J-25836-00-00	• . Cover, Dust
12	1FK-25827-00-00	• . Shim, Caliper
13	1FK-25828-00-00	• . Shim, Caliper
14	3VD-25819-00-00	Bracket, Caliper
15	90105-10638-00	Bolt, Washer Based
16	95811-10030-00	Bolt, Flange
17	90201-10437-00	Washer, Plate




3VD1351-1310

Ref No	Part No	Description
01	3VD-26111-00-00	Handlebar
02	1KG-26241-00-00	Grip
03	3FH-26240-00-00	Grip Assy
04	51J-26246-00-00	End, Grip
05	90387-22660-00	Collar
06	3VD-26302-00-00	Throttle Cable Assy
07	3XW-26281-01-00	Cap, Grip Upper
08	3XW-26282-01-00	Cap, Grip Lower
09	98506-05035-00	Screw, Pan Head
10	3VD-26331-00-00	Cable, Starter 1
11	1VJ-26333-00-00	Nut
12	3VD-26335-00-00	Cable, Clutch
13	3VD-26292-00-00	Stay
14	95816-06012-00	Bolt, Flange
15	3VD-26280-00-00	Rear View Mirror Assy(left)
15	3VD-26280-10-00	Rear View Mirror Assy(left)
16	3VD-26290-00-00	Rear View Mirror Assy(right)
16	3VD-26290-10-00	Rear View Mirror Assy(right)

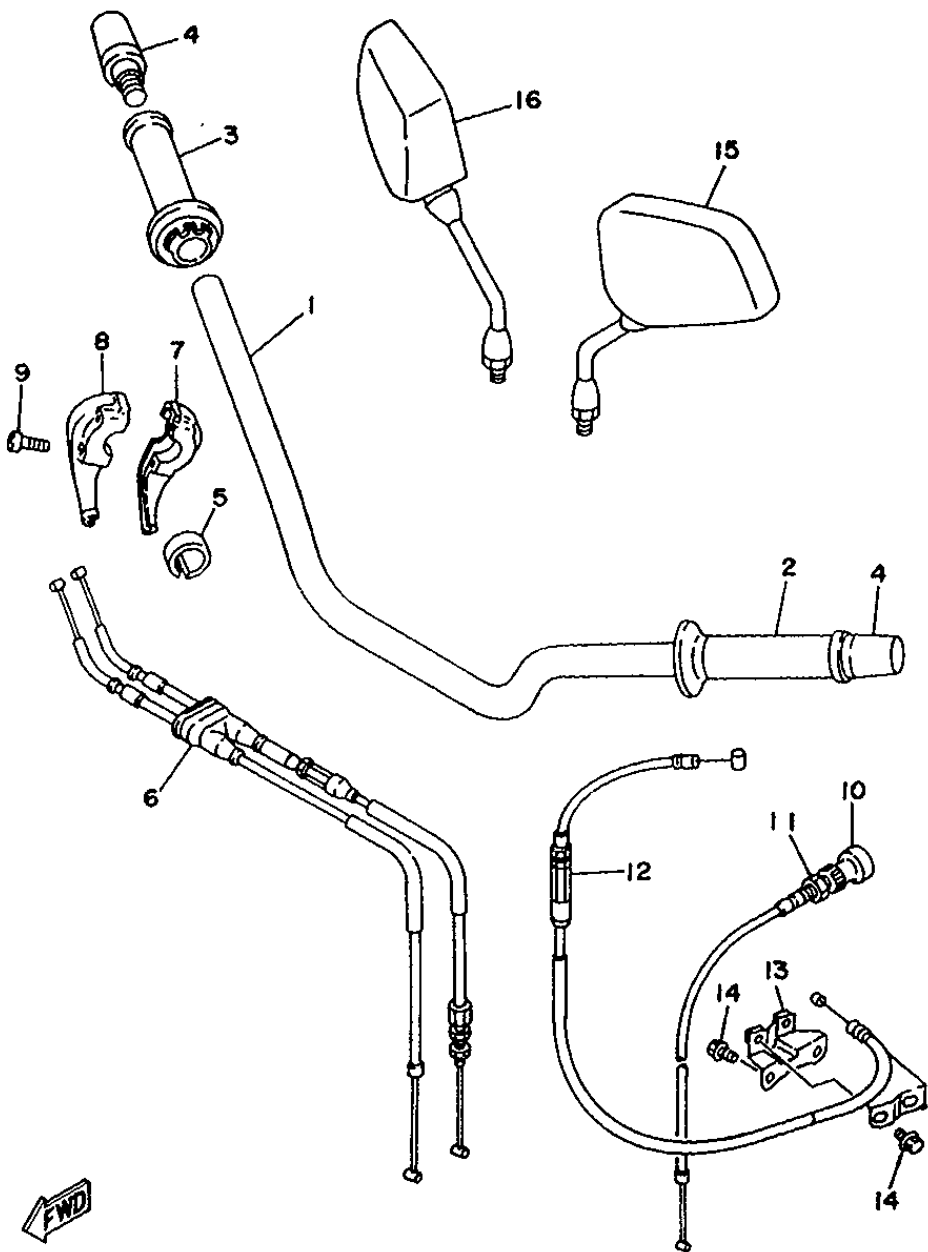


3VD1351-1320

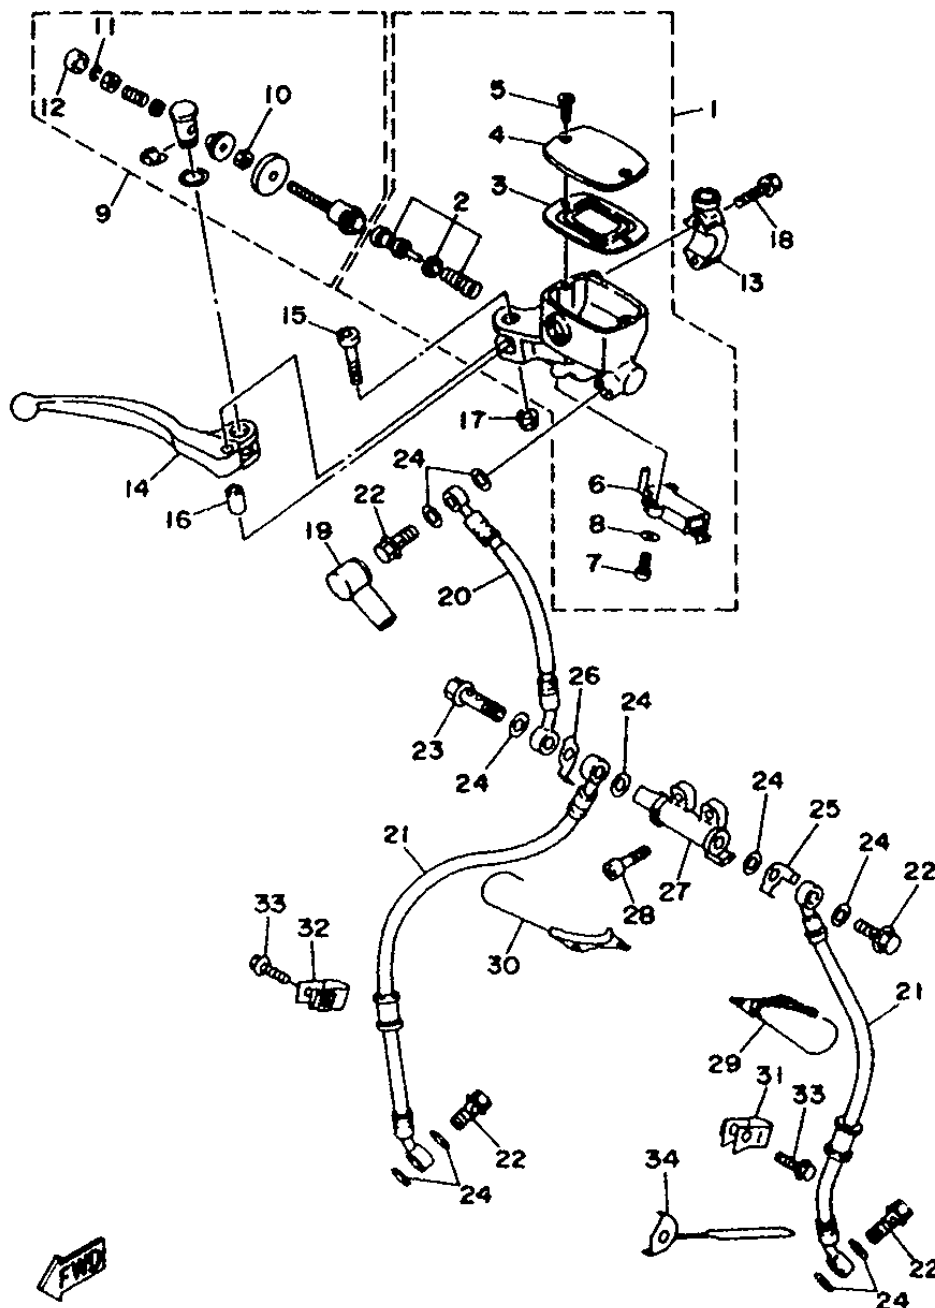

Ref No	Part No	Description
01	3VD-W2587-00-00	Master Cylinder Sub Assy
02	3VD-W0041-50-00	Cylinder Kit, Master
03	3YX-25854-00-00	• . Diaphragm, Reservoir
04	3YX-25852-00-00	• . Cap, Reservoir
05	98701-04012-00	• . Screw, Flat Head
06	3YX-83980-00-00	• . Front Stop Switch Assy
07	98506-04012-00	• . Screw, Pan Head
08	92906-04600-00	• . Washer, Plate
09	3YX-W0091-00-00	Screw Kit, Master Cylinder
10	95303-06600-00	• . Nut
11	3YX-25866-00-00	• . Circlip
12	3YX-2583H-00-00	• . Boot
13	3YX-25867-00-00	Bracket, Master Cylinder
14	3YX-83922-00-00	Lever 2
15	3YX-2589F-00-00	Bolt, Lever
16	3YX-25838-00-00	Sleeve, Caliper
17	95616-06100-00	Nut, U
18	95026-06030-00	Bolt, Flange
19	4L0-25862-00-00	Boot, Master Cylinder
20	3VD-25872-00-00	Hose, Brake 1
21	3VD-25874-00-00	Hose, Brake
22	90401-10096-00	Bolt, Union
23	90401-10095-00	Bolt, Union
24	90201-10118-00	Washer, Plate
25	3VD-25834-00-00	Washer, Lock
26	3VD-25844-00-00	Washer, Lock
27	42H-25885-00-00	Joint
28	91316-06025-00	Bolt
29	3VD-26131-00-00	Guide, Cable 1
30	3VD-26132-00-00	Guide, Cable 2
31	3EN-25875-00-00	Holder, Brake Hose 1
32	2R8-25876-00-00	Holder, Brake Hose 2
33	95023-06025-00	Bolt
34	3VD-23317-00-00	Holder, Cable




3VD1351-1330

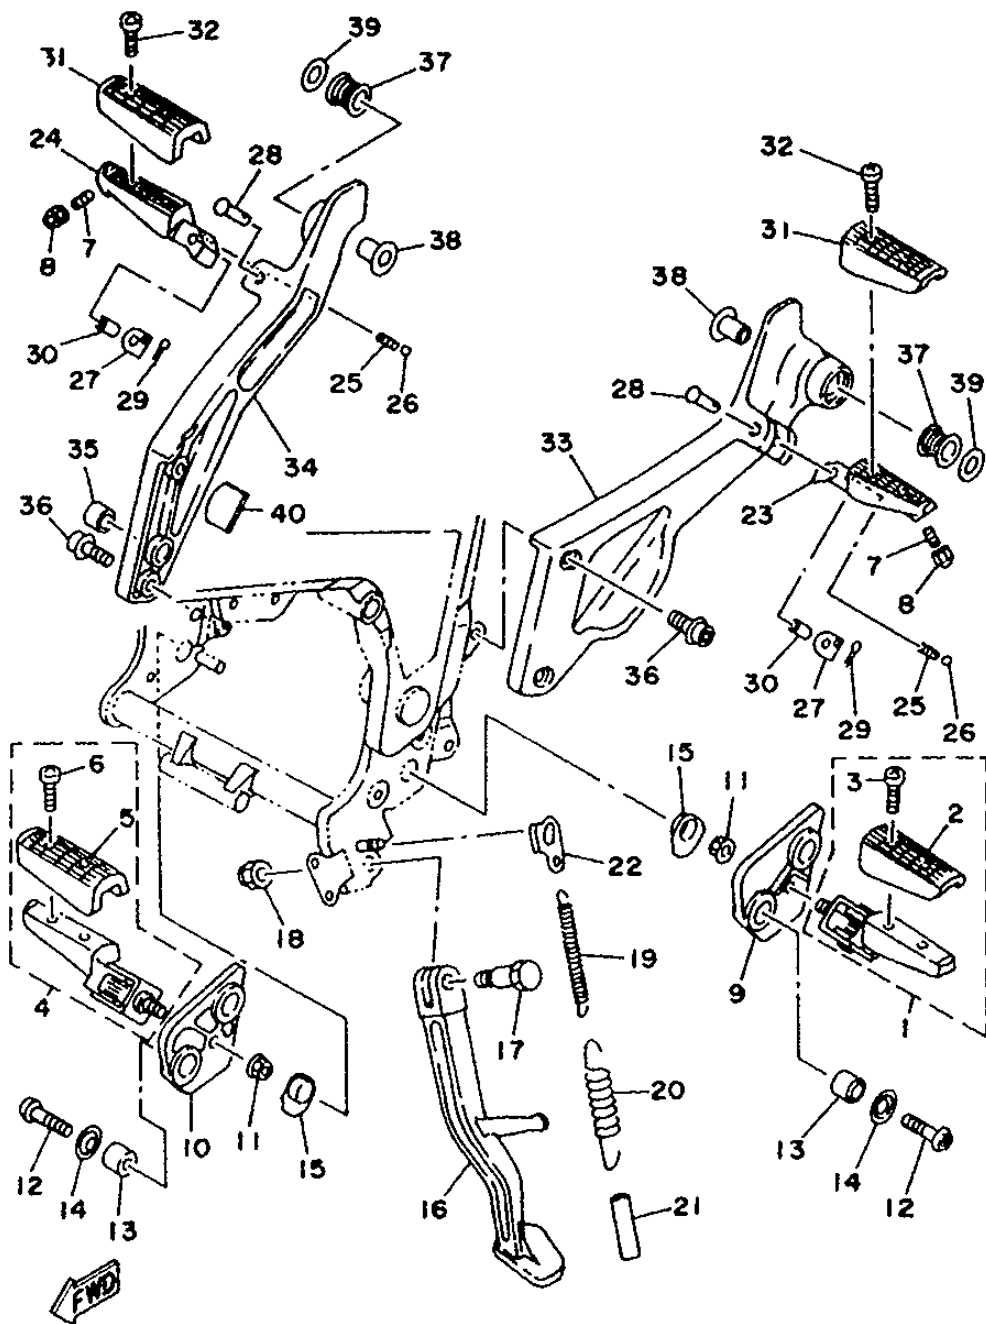


3VD1331-1340

Ref No	Part No	Description
01	1UA-27410-00-00	Front Footrest Assy (left)
02	2GH-27413-00-00	• . Cover, Footrest
03	90157-05079-00	• . Screw, Pan Head
04	1UA-27420-00-00	Front Footrest Assy (right)
05	2GH-27413-00-00	• . Cover, Footrest
06	90157-05079-00	• . Screw, Pan Head
07	90113-08038-00	Bolt, Set
08	95303-08800-00	Nut,crown
09	3VD-27442-00-00	Bracket 2
10	3VD-27443-00-00	Bracket 3
11	90179-10247-00	Nut
12	90110-08071-00	Bolt, Hexagon Socket Head
13	1NL-27424-00-00	Damper, Footrest 2
14	90209-08295-00	Washer
15	3VD-27414-00-00	Damper, Footrest
16	3VD-27311-00-00	Stand, Side
17	90109-106E6-00	Bolt
18	90185-10037-00	Nut, Self-locking
19	90506-18224-00	Spring, Tension
20	90506-26225-00	Spring, Tension
21	1TX-27351-00-00	Guide, Side Stand
22	3VD-27315-00-00	Link, Side Stand
23	2GH-27431-00-00	Footrest, Rear 1
24	2GH-27441-00-00	Footrest, Rear 2
25	90501-12743-00	Spring, Compression
26	93501-04011-00	Ball
27	1HX-27437-00-00	Washer, Special
28	91701-06040-00	Pin, Clevis
29	91401-20015-00	Pin, Cotter
30	90387-064H8-00	Collar
31	2GH-27413-00-00	Cover, Footrest
32	90157-05079-00	Screw, Pan Head
33	3VD-27412-00-00	Bracket, Footrest 1
34	3VD-27422-00-00	Bracket, Footrest 2
35	90380-20213-00	Bush, Solid
36	90110-08199-00	Bolt, Hexagon Socket Head
37	36Y-27424-00-00	Damper, Footrest 2
38	90387-104L8-00	Collar
39	90201-10669-00	Washer, Plate
40	3VD-2139X-00-00	Damper

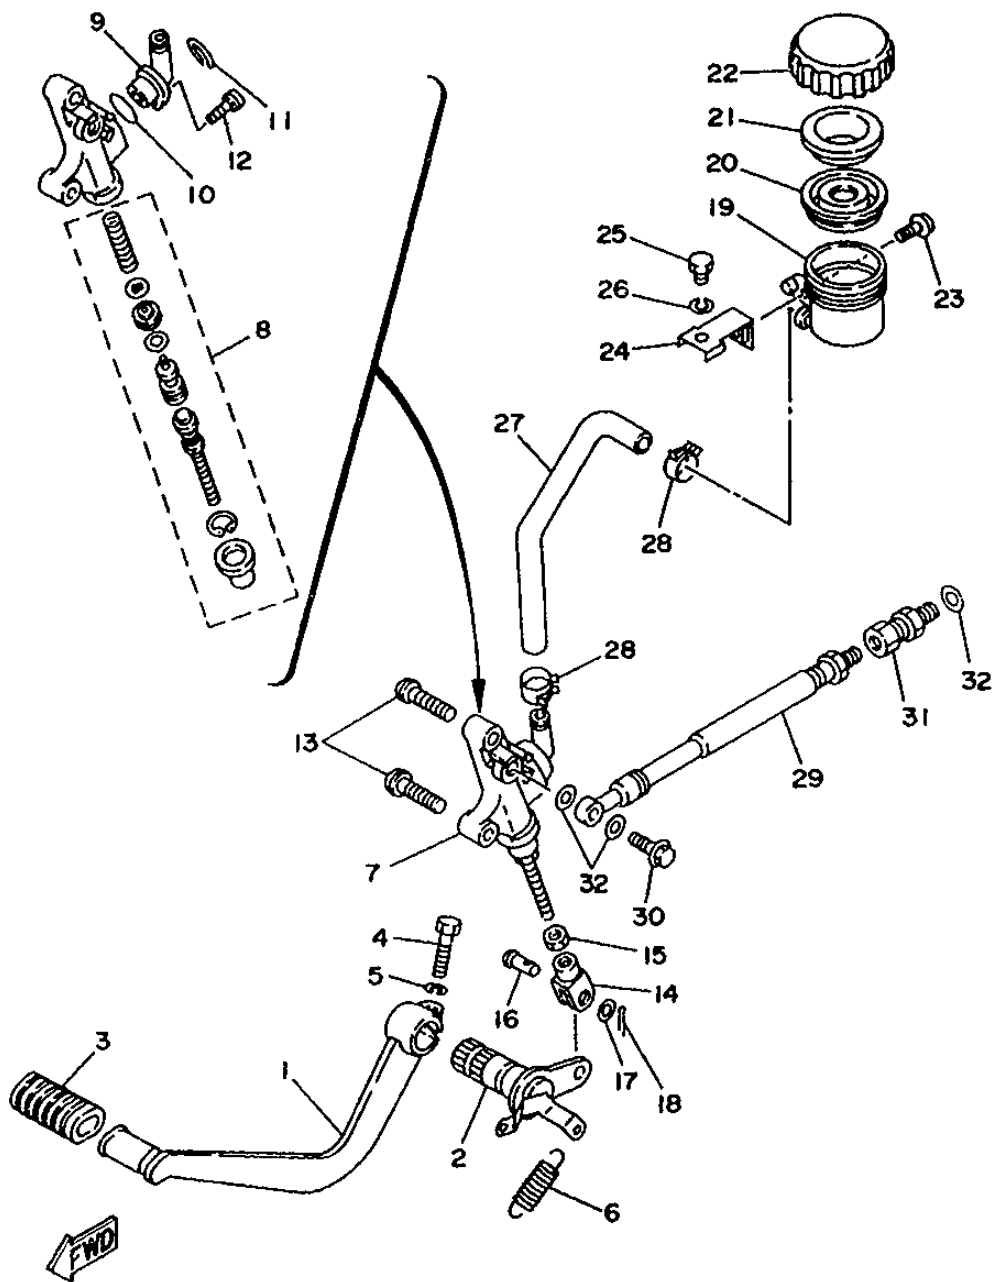

3VD1351-1350


Ref No	Part No	Description
01	3VD-27211-00-00	Pedal, Brake
02	3VD-27212-00-00	Shaft, Brake Pedal
03	3VD-18113-00-00	Cover, Shift Pedal
04	90101-06278-00	Bolt
05	92990-06100-00	Washer
06	90506-20192-00	Spring, Tension
07	3VD-2583V-00-00	Rr. Master Cylinder Assy.
08	3VD-W0042-50-00	• . Cylinder Kit, Master
09	3LN-2582A-00-00	• . Joint
10	3LN-2585F-00-00	• . O-ring
11	3LN-2585G-00-00	• . Circlip
12	3LN-2585H-00-00	• . Screw,set
13	92016-08030-00	Screw
14	47X-27222-00-00	Joint
15	95303-08700-00	Nut
16	90240-08013-00	Pin, Clevis
17	90201-08083-00	Washer, Plate
18	91401-20015-00	Pin, Cotter
19	47X-25894-00-00	Tank, Reserve
20	360-25854-00-00	Diapfragm, Reservoir
21	2GU-25855-00-00	Bush,diaphragm
22	2KF-25852-50-00	Cap, Reservoir
23	90159-06056-00	Screw, With Washer
24	3VD-2582E-00-00	Holder, Reserve Tank
25	97011-06010-00	Bolt
26	92901-06700-00	Washer, Wave
27	3VD-25895-00-00	Hose, Reservoir
28	90467-14057-00	Clip
29	3VD-25872-50-00	Hose, Brake 1
30	90401-10096-00	Bolt, Union
31	3LC-25885-00-00	Joint
32	90201-10118-00	Washer, Plate

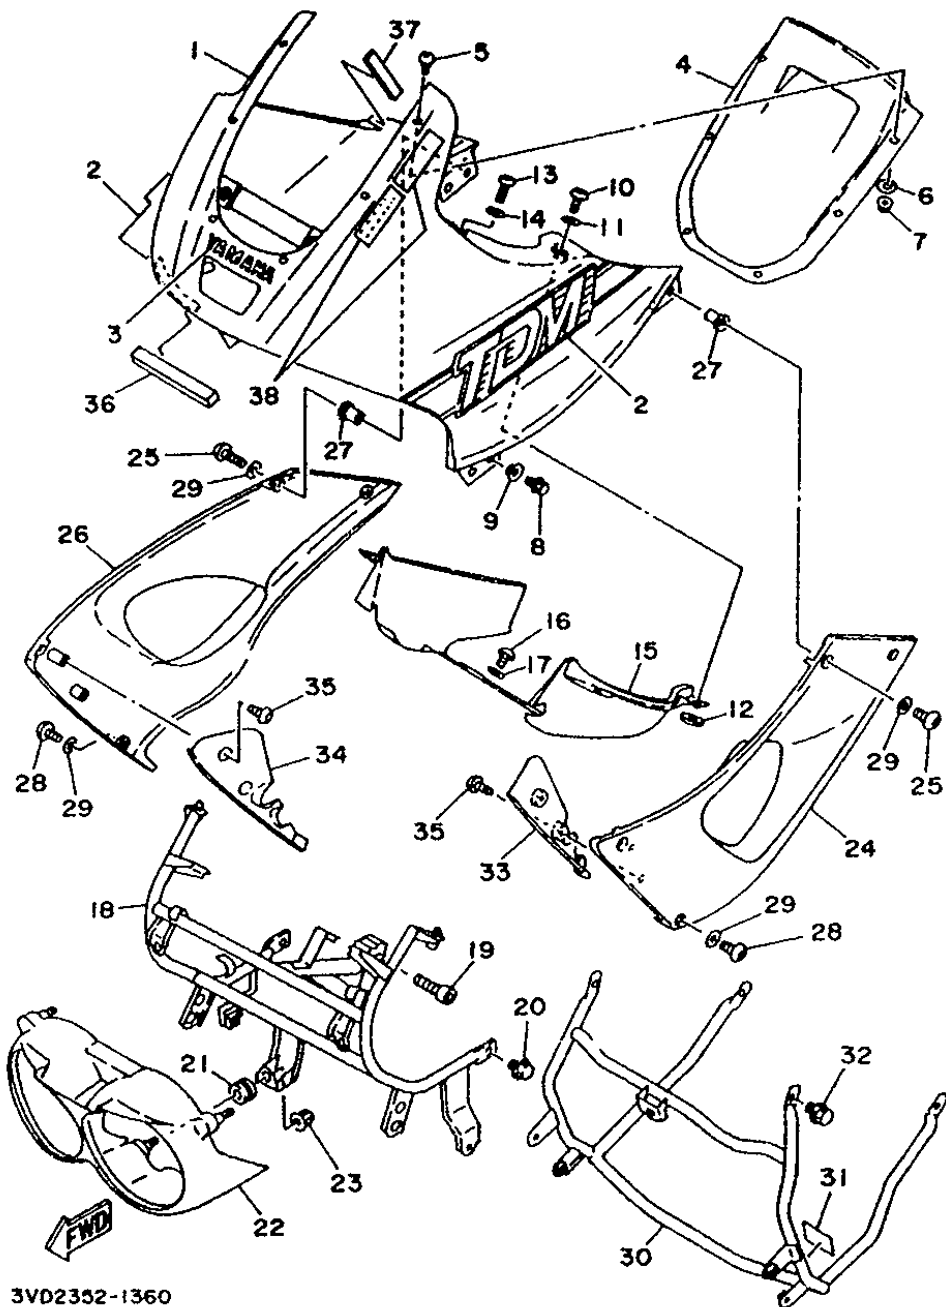




3VD2352-1360

Ref No	Part No	Description
01	3VD-28350-00-P0	Cowling Assy
01	3VD-28350-00-4B	Cowling Assy
02	3VD-28390-01-00	Graphic Set, Cowling
02	3VD-28390-11-00	Graphic Set, Cowling
03	99236-00025-00	Emblem, Yamaha
04	3VD-28381-00-00	Windshield
05	90149-05273-00	Screw
06	3HX-28215-00-00	Washer, Special
07	95706-05500-00	Nut, Flange
08	95811-06012-00	Bolt, Flg.
09	90387-072Y3-00	Collar
10	90110-05201-00	Bolt, Hexagon Socket Head
11	90202-05180-00	Washer
12	90202-08111-00	Washer, Plate
13	90149-05244-00	Screw
14	90201-05660-00	Washer, Plate
15	3VD-2837M-00-00	Panel, Console 2
16	90110-05201-00	Bolt, Hexagon Socket Head
17	90202-05180-00	Washer
18	3VD-28356-00-00	Stay 1
19	91316-08035-00	Bolt
20	95811-08012-00	Bolt, Flange
21	90480-14229-00	Grommet
22	3VD-28365-00-00	Cover
23	90179-06500-00	Nut
24	3VD-2835U-00-P0	Panel 1
24	3VD-2835U-00-4B	Panel 1
25	90149-05299-00	Screw
26	3VD-2835V-00-P0	Panel 2
26	3VD-2835V-00-4B	Panel 2
27	90179-05523-00	Nut
28	90149-05299-00	Screw
29	90202-05180-00	Washer
30	3VD-28322-00-00	Stay 2
31	3YL-12232-00-00	Damper
32	95811-08012-00	Bolt, Flange
33	3VD-2837N-00-00	Grill, Air Intake 1
34	3VD-2837R-00-00	Grill, Air Intake 2
35	97701-50012-00	Screw, Tapping
36	3VD-28371-00-00	Damper
37	2TV-21638-00-00	Damper
38	3JJ-2835Y-00-00	Label, Caution
38	3JJ-2835Y-10-00	Label, Caution


Ref No	Part No	Description
01	3LD-81410-00-00	Stator Assy
02	3VD-81450-00-00	Rotor Assy
03	98501-06030-00	Screw, Pan Head
04	92990-06100-00	Washer
05	98501-05016-00	Screw, Pan Head
06	92990-05100-00	Washer, Spring

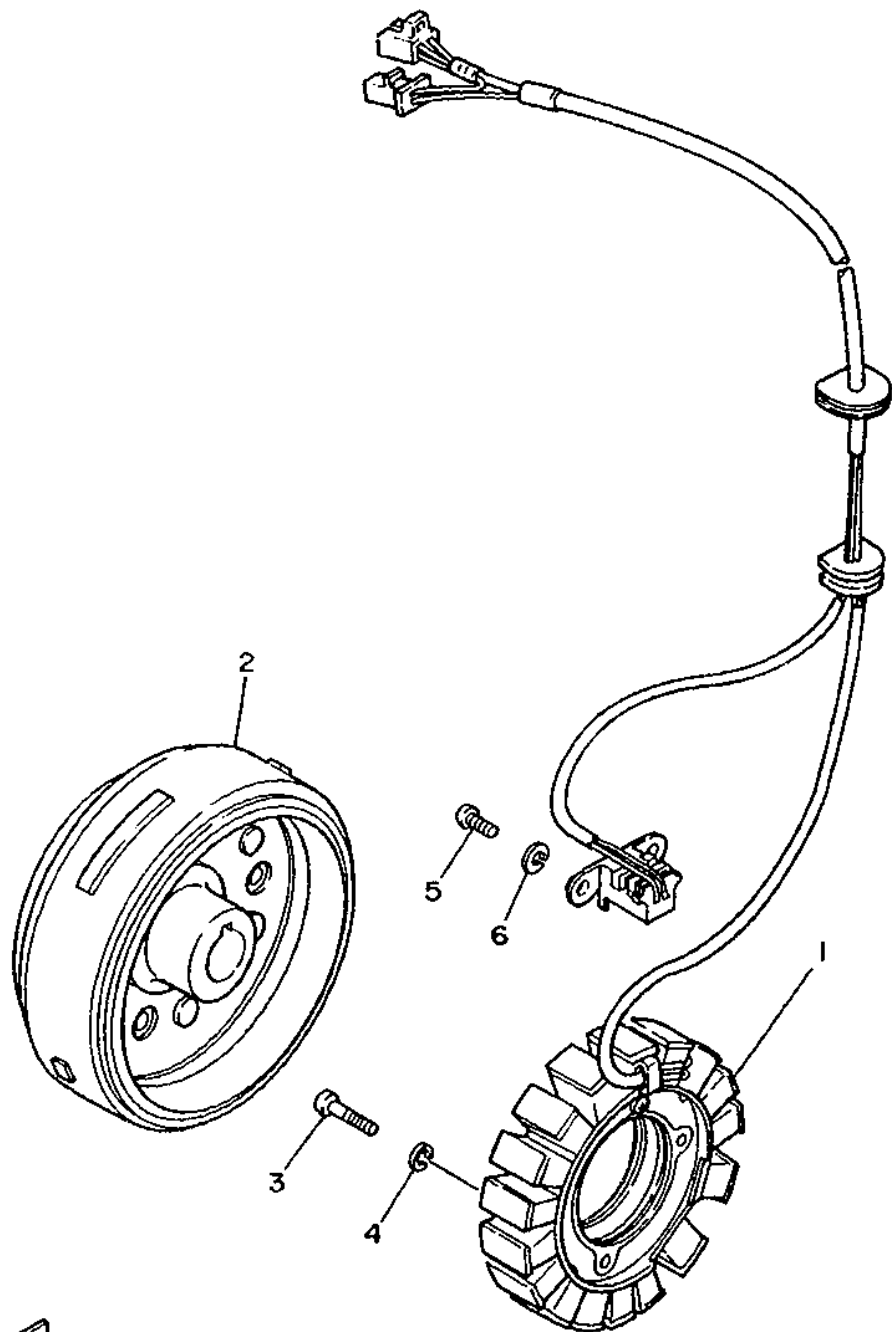

Ref No	Part No	Description
01	3GM-83310-00-00	Front Flasher Light Assy 1
02	306-83311-40-00	• . Bulb, Flasher (12v-21w)
03	51L-83332-01-00	• . Lens, Flasher
04	97706-40620-00	• . Screw, Tapping
05	3GM-83320-00-00	Front Flasher Light Assy 2
06	306-83311-40-00	• . Bulb, Flasher (12v-21w)
07	51L-83342-01-00	• . Lens, Flasher 2
08	97706-40620-00	• . Screw, Tapping
09	3VD-83330-00-00	Rear Flasher Light Assy 1
10	1VU-83332-00-00	• . Lens, Flasher
11	306-83311-40-00	• . Bulb, Flasher (12v-21w)
12	97706-40620-00	• . Screw, Tapping
13	3VD-83340-00-00	Rear Flasher Light Assy 2
14	1VU-83342-00-00	• . Lens, Flasher 2
15	306-83311-40-00	• . Bulb, Flasher (12v-21w)
16	97706-40620-00	• . Screw, Tapping
17	95306-12600-00	Nut
18	18G-83365-00-00	Cap

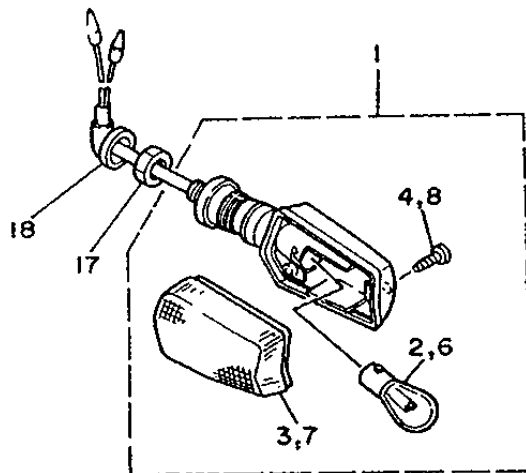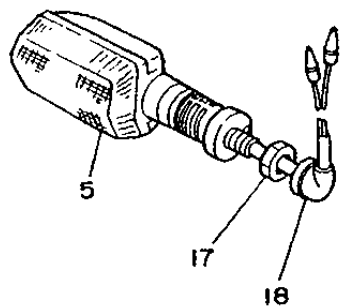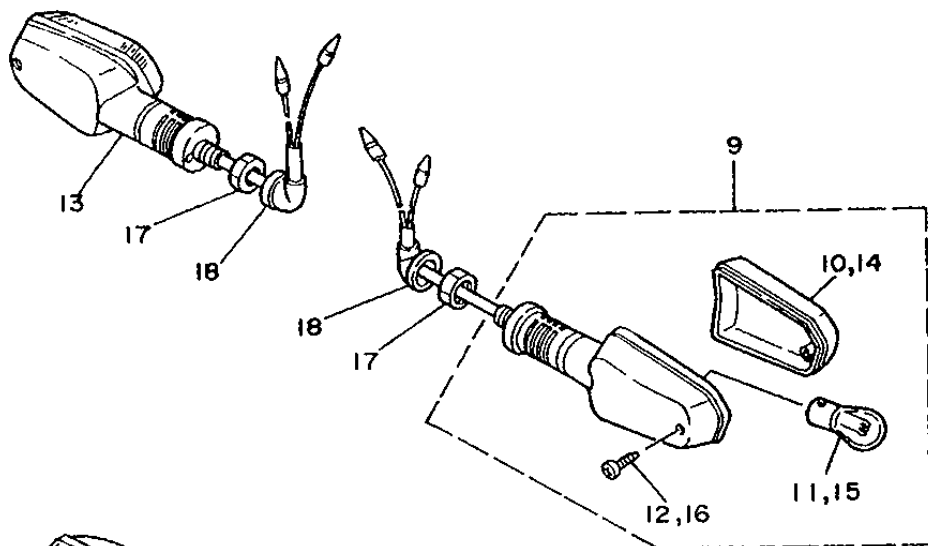


3VD1351-1380

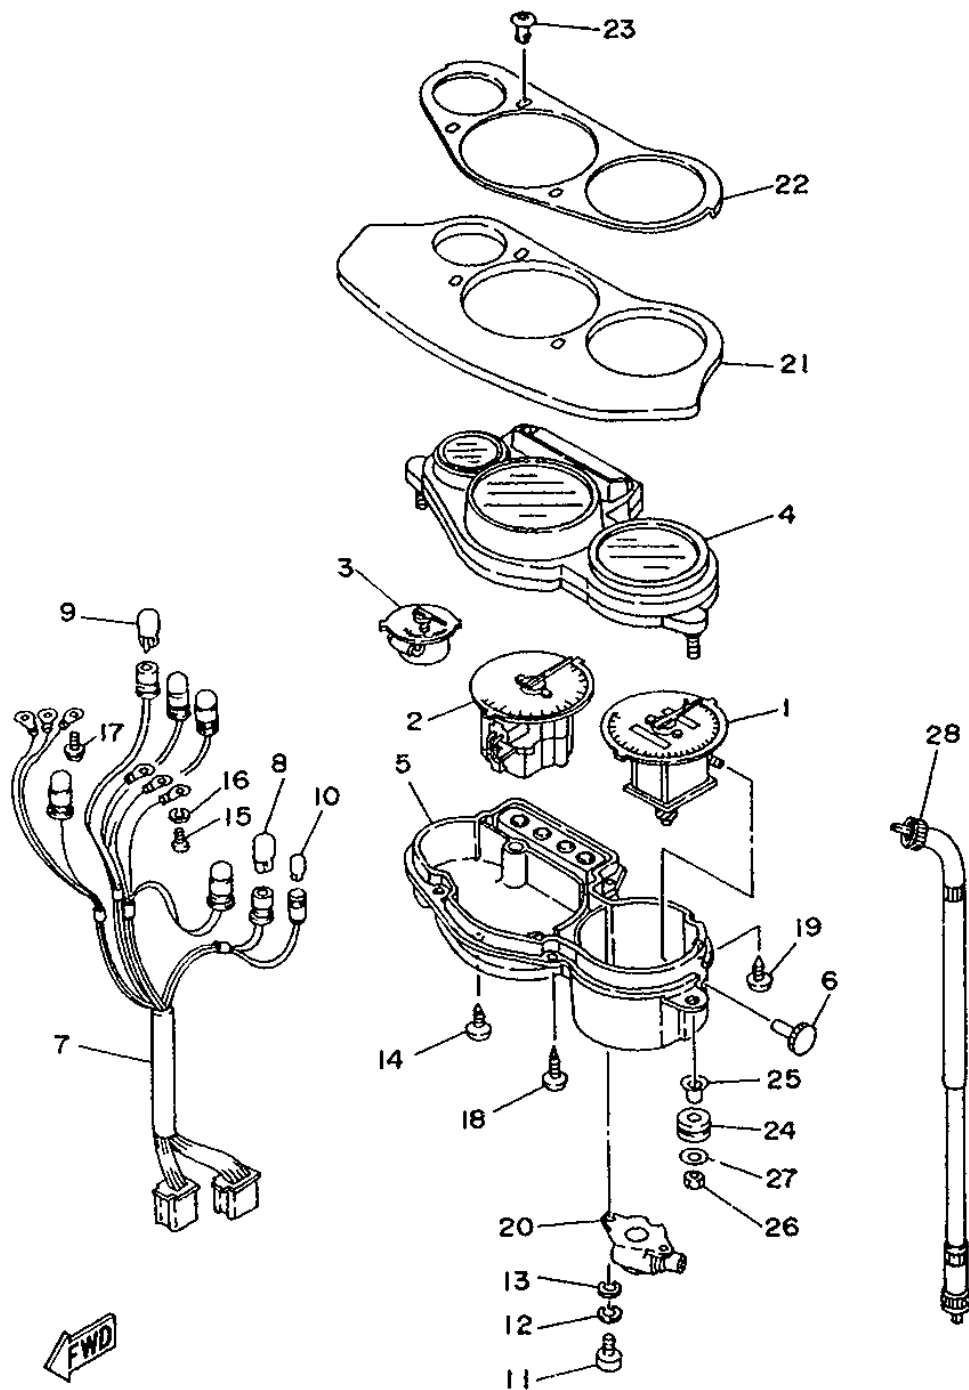


Ref No	Part No	Description
01	3VD-83570-00-00	Speedometer Assy
02	3VD-83540-00-00	Tachometer Assy
03	3GM-83590-00-00	Water Temperature Assy
04	3VD-83559-00-00	Cover, Meter
05	3VD-8353H-00-00	Case, Inner
06	2GH-83578-00-00	Knob, Trip Meter
07	3VD-83509-00-00	Socket Cord Assy
08	4G1-84744-00-00	Bulb (12v-3.4w)
09	4G1-84744-00-00	Bulb (12v-3.4w)
10	42X-83517-00-00	Null (12v-3w)
11	98580-04010-00	Screw, Pan Head
12	92902-04100-00	Washer, Spring
13	92901-04600-00	Washer, Plate
14	90167-04057-00	Screw, Tapping
15	98580-03010-00	Screw, Pan Head
16	92990-03100-00	Washer, Spring
17	90159-03102-00	Screw, With Washer
18	90164-04008-00	Screw, Tapping
19	90167-03058-00	Screw, Tapping
20	3GM-83520-00-00	Socket Cord Assy
21	3VD-83513-00-00	Damper
22	3VD-83611-00-00	Panel, Meter
23	3GM-83525-00-00	Clip
24	90480-14229-00	Grommet
25	90387-07391-00	Collar
26	95316-06600-00	Nut
27	90201-06059-00	Washer, Plate
28	1FK-83550-10-00	Speedometer Cable Assy



3VDI351-1390

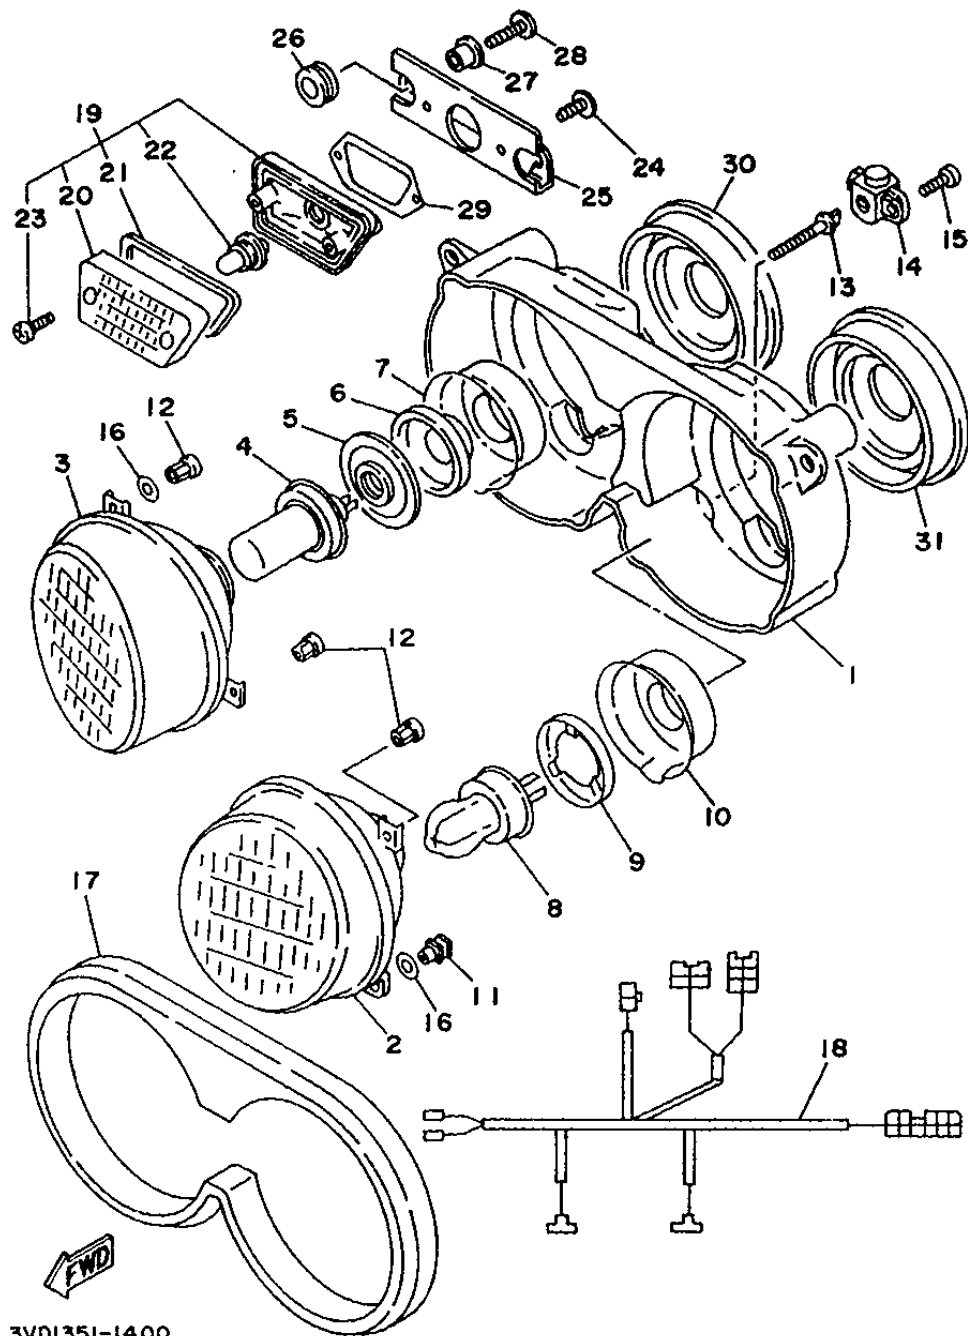

Ref No	Part No	Description
01	3VD-84330-00-00	Body Assy
02	3VD-84320-10-00	Lens Assy
03	3VD-8432A-00-00	Lens Assy
05	2LA-84375-00-00	Fitting Plate, Bulb
06	2LA-84393-00-00	Holder, Bulb
07	2GH-84397-00-00	Cover, Socket
09	2F9-84375-00-00	Setting Plate, Bulb
10	2F9-84397-01-00	Cover, Socket
11	3AJ-8431U-00-00	Holder
12	51L-84334-00-00	Nut, Adjusting
13	2AX-84331-00-00	Screw, Rim Adjusting
14	3MA-8430M-00-00	Gear Unit Assy
15	97706-40616-00	Screw, Tapping
16	3GM-84344-00-00	Washer, Plain
17	3HE-84366-00-00	Damper, Headlight 1
18	3VD-84359-00-00	Cord, Headlight
19	3GM-84301-00-00	Pilot Light Assy 1
20	3GM-84321-00-00	• . Lens Assy
21	3GM-84322-00-00	• . Gasket, Lens
22	2JE-84744-00-00	• . Bulb (12v-5w)
23	3GM-84192-00-00	• . Screw (m4,1 12)
24	90167-05041-00	Screw, Tapping
25	3GM-8431R-00-00	Stay, Setting
26	90480-10517-00	Grommet
27	90387-052U5-00	Collar
28	90167-05037-00	Screw, Tapping
29	3GM-84367-10-00	Damper, Headlight 2
30	2LA-84397-00-00	Cover, Socket
31	2LA-84397-10-00	Cover, Socket

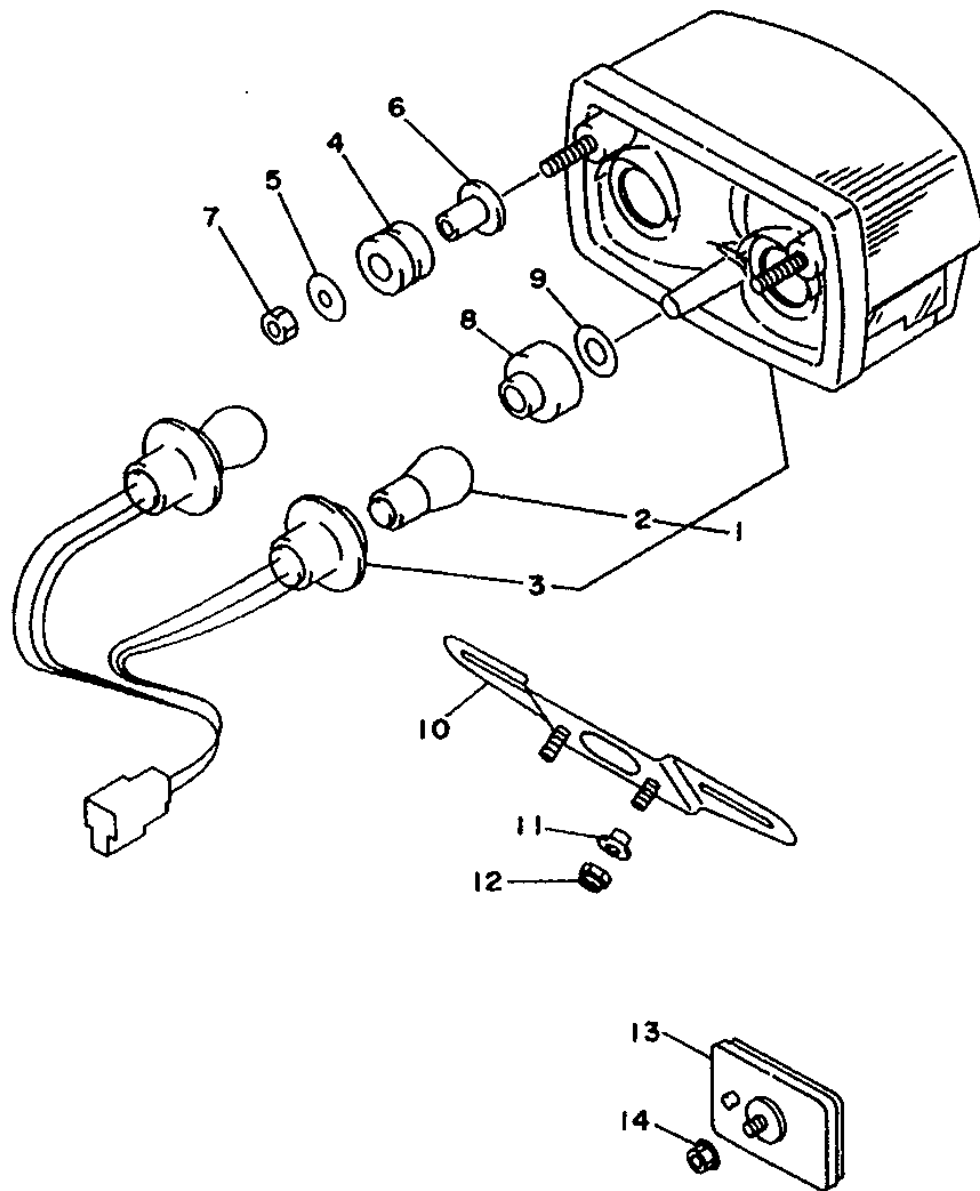


Ref No	Part No	Description
01	3GM-84710-20-00	Taillight Unit Assy
02	31L-84714-00-00	• Bulb, Taillight (12v-21/5w)
03	3LK-8473A-00-00	• Cord Assy
04	90480-18276-00	Grommet
05	90201-063J2-00	Washer, Plate
06	90387-062W4-00	Collar
07	95303-06600-00	Nut
08	90480-15259-00	Grommet
09	90201-105J4-00	Washer, Plate
10	1KH-84751-00-90	Bracket, License
11	90387-07717-00	Collar
12	95616-06100-00	Nut, U
13	3G1-85130-01-00	Rear Reflector Assy
14	95701-05500-00	Nut, Flange




3VDI35I-1410

Ref No	Part No	Description
01	3VD-83975-00-00	Switch, Handle 2
02	98506-05022-00	• . Screw Pan Head
03	3VD-83969-00-00	Switch, Handle 5
04	98506-05030-00	• . Screw Pan Head
05	98506-05040-00	• . Screw, Pan Head
06	437-83936-01-00	Band, Switch Cord
07	90465-13169-00	Clamp
08	3YX-82911-00-00	Holder, Lever 1
09	3YX-83912-00-00	Lever 1
10	3YX-82917-00-00	Switch
11	90123-08046-00	Bolt
12	90179-08316-00	Nut
13	3YX-83945-00-00	Bolt, Lever
14	95616-06100-00	Nut, U
15	341-83333-70-00	Screw, Lens Fitting
16	95026-06020-00	Bolt, Flange

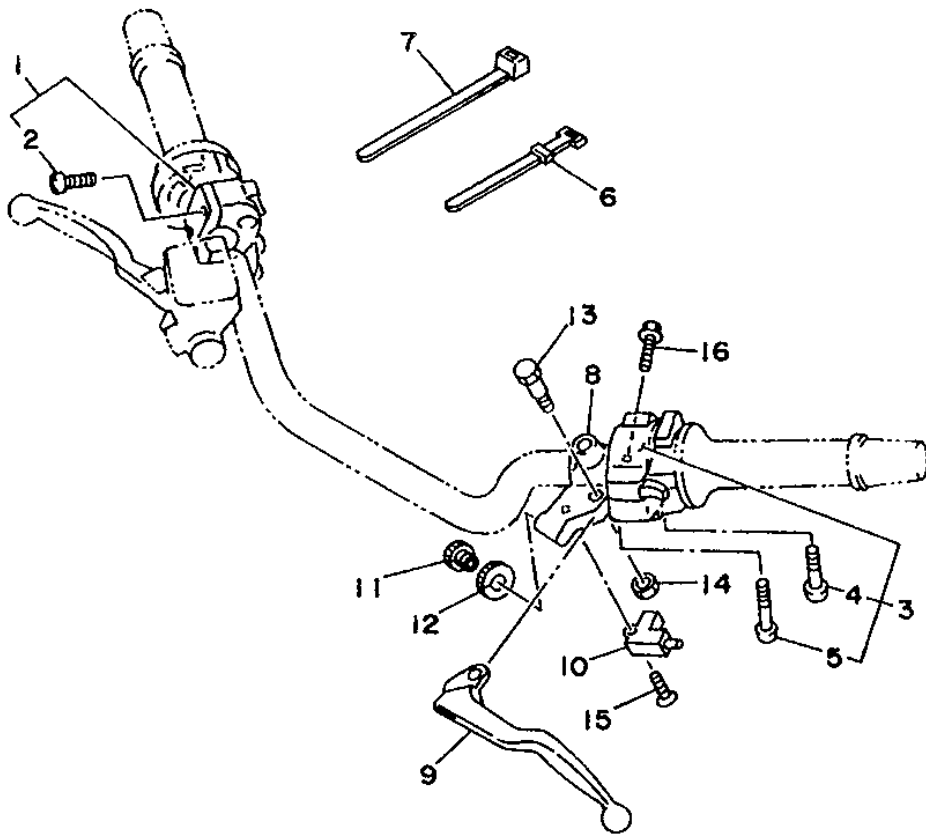


3VD1351-1420

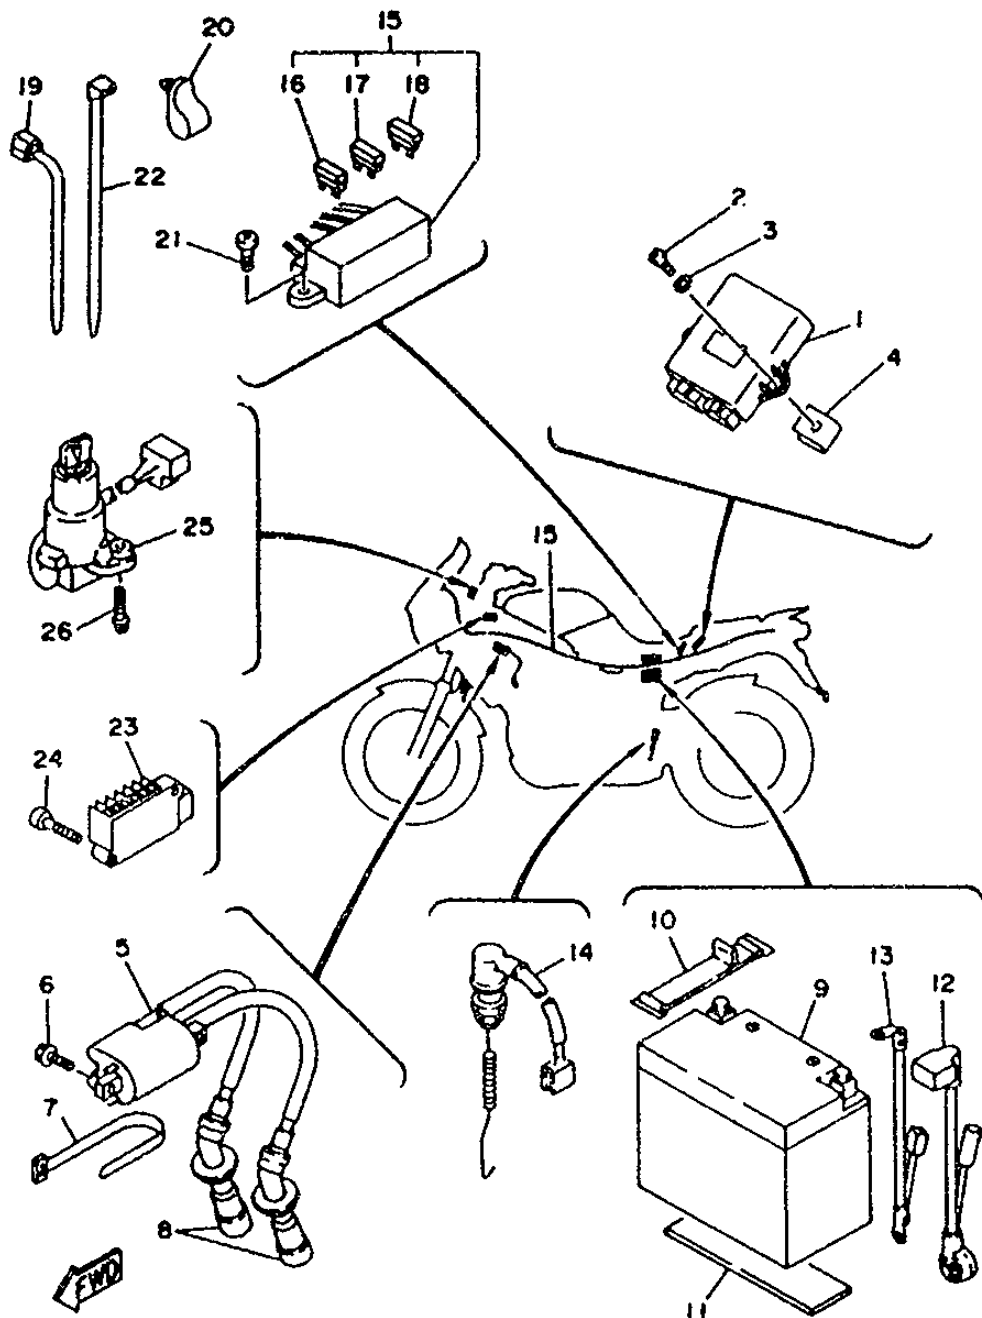


3VD1351-1430

Ref No	Part No	Description
01	3VD-82305-00-00	Ignitor Unit Assy
02	98506-06016-00	Screw, Pan Head
03	92906-06600-00	Washer, Plate
04	90183-06023-00	Nut, Spring
05	3VD-82310-00-00	Ignition Coil Assy
06	95811-06020-00	Bolt, Flange
07	25G-83936-01-00	Band, Switch Cord
08	3LD-82370-00-00	Plug Cap Assy
09	3VD-82100-00-00	Battery Assy (ytx12-bs)
10	3VD-82131-00-00	Band, Battery
11	5X2-24183-00-00	Damper, Locating 3
12	3VD-82115-00-00	Wire, Plus Lead
13	3VD-82116-00-00	Wire, Minus Lead
14	3VD-82530-00-00	Stop Switch Assy
15	3VD-82590-00-00	Wire Harness Assy
16	1AE-82151-00-00	• . Fuse (12v 30a)
17	2GH-82151-00-00	• . Fuse (20a)
18	42X-82151-00-00	• . Fuse (10a)
19	90464-13073-00	Clamp
20	90464-12027-00	Clamp
21	98906-06012-00	Screw, Bind
22	90465-13169-00	Clamp
23	3TJ-81960-00-00	Rectifier & Regulator Assy
24	91316-06025-00	Bolt
25	3VD-82501-00-00	Main Switch Steering Lock
26	90109-06614-00	Bolt

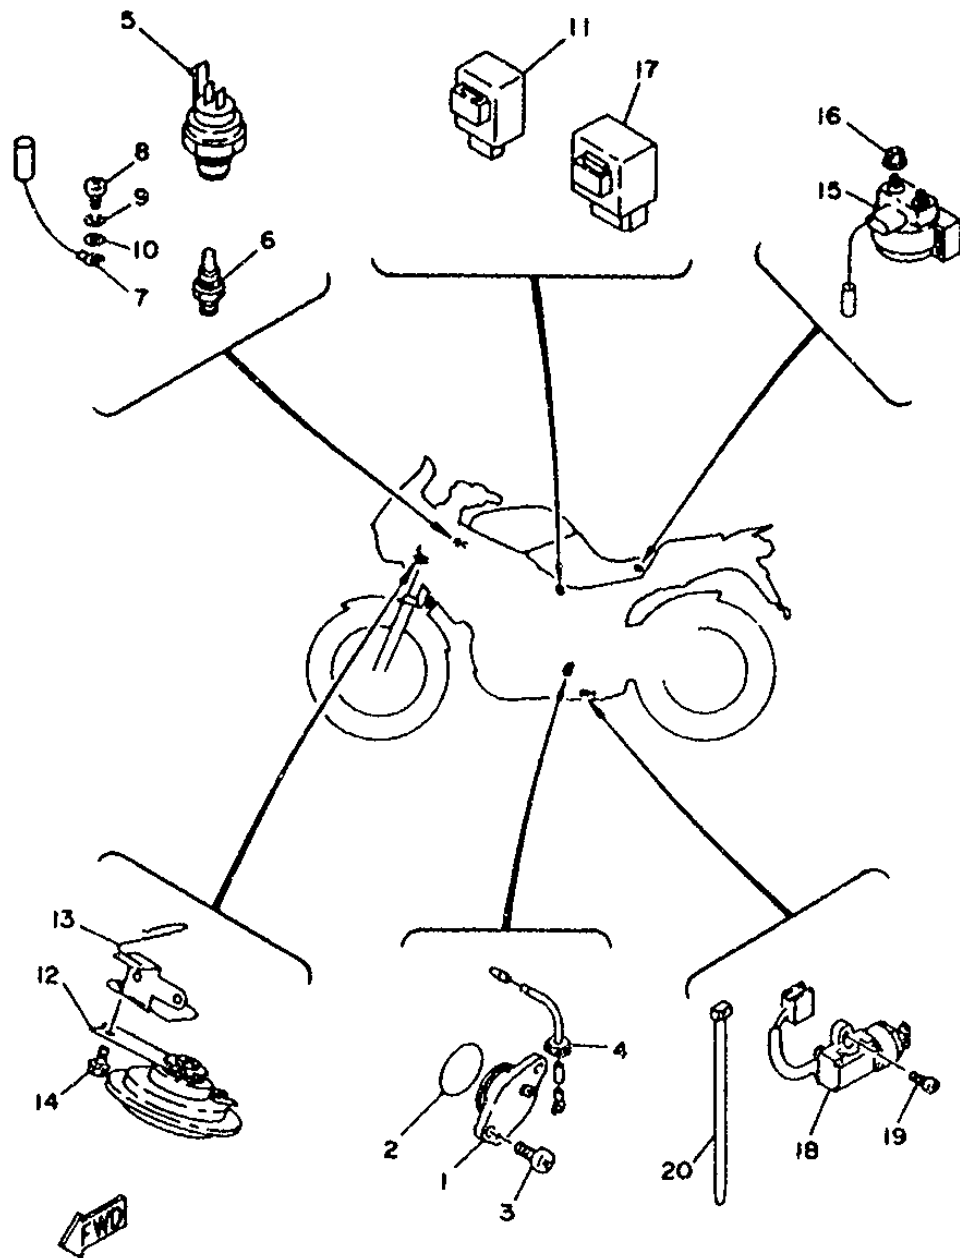


3VD1351-1440

Ref No	Part No	Description
01	1AE-82540-00-00	Neutral Switch Assy
02	93210-29196-00	O-ring
03	98502-06016-00	Screw, Pan Head
04	3LD-82541-00-00	Wire, Lead
05	2EL-82560-00-00	Thermo Switch Assy
06	11H-83591-00-00	Thermo Unit
07	26H-83354-00-00	Wire, Earth Lead 1
08	98580-04008-00	Screw, Pan Head
09	92902-04100-00	Washer, Spring
10	92901-04600-00	Washer, Plate
11	3YA-83350-00-00	Flasher Relay Assy
12	2TV-83371-00-00	Horn
13	3VD-2317E-00-00	Stay
14	91026-06010-00	Bolt
15	36Y-81940-00-00	Starter Relay Assy
16	95701-06500-00	Nut, flange
17	2UJ-81950-00-00	Relay Assy
18	3MD-82566-00-00	Switch Side Stand Relay
19	90157-05079-00	Screw, Pan Head
20	90465-13169-00	Clamp

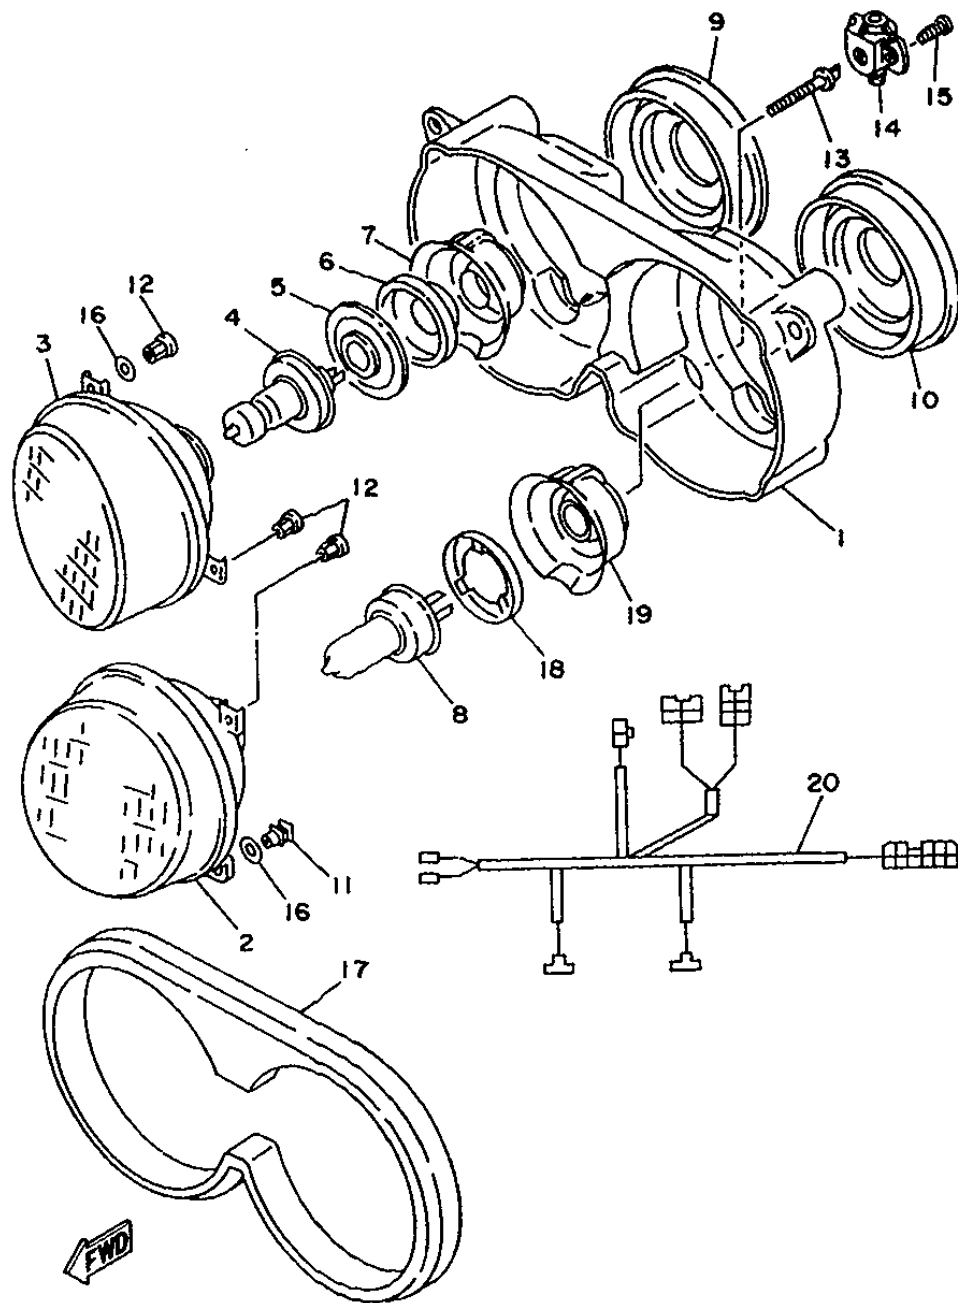


Ref No	Part No	Description
01	3VD-84330-00-00	Body Assy
02	3VD-84320-10-00	Lens Assy
03	3VD-8432A-10-00	Lens Assy
05	2LA-84375-00-00	Fitting Plate, Bulb
06	2LA-84393-00-00	Holder, Bulb
07	2GH-84397-00-00	Cover, Socket
08	2F9-84314-00-00	Bulb (12v-60/55w)
09	2LA-84397-00-00	Cover, Socket
10	2LA-84397-10-00	Cover, Socket
11	3AJ-8431U-00-00	Holder
12	51L-84334-00-00	Nut, Adjusting
13	2AX-84331-00-00	Screw, Rim Adjusting
14	3MA-8430M-00-00	Gear Unit Assy
15	97706-40616-00	Screw, Tapping
16	3GM-84344-00-00	Washer, Plain
17	3HE-84366-00-00	Damper, Headlight 1
18	2F9-84375-00-00	Setting Plate, Bulb
19	2F9-84397-01-00	Cover, Socket
20	3VD-84359-00-00	Cord, Headlight


3VD1300-1450

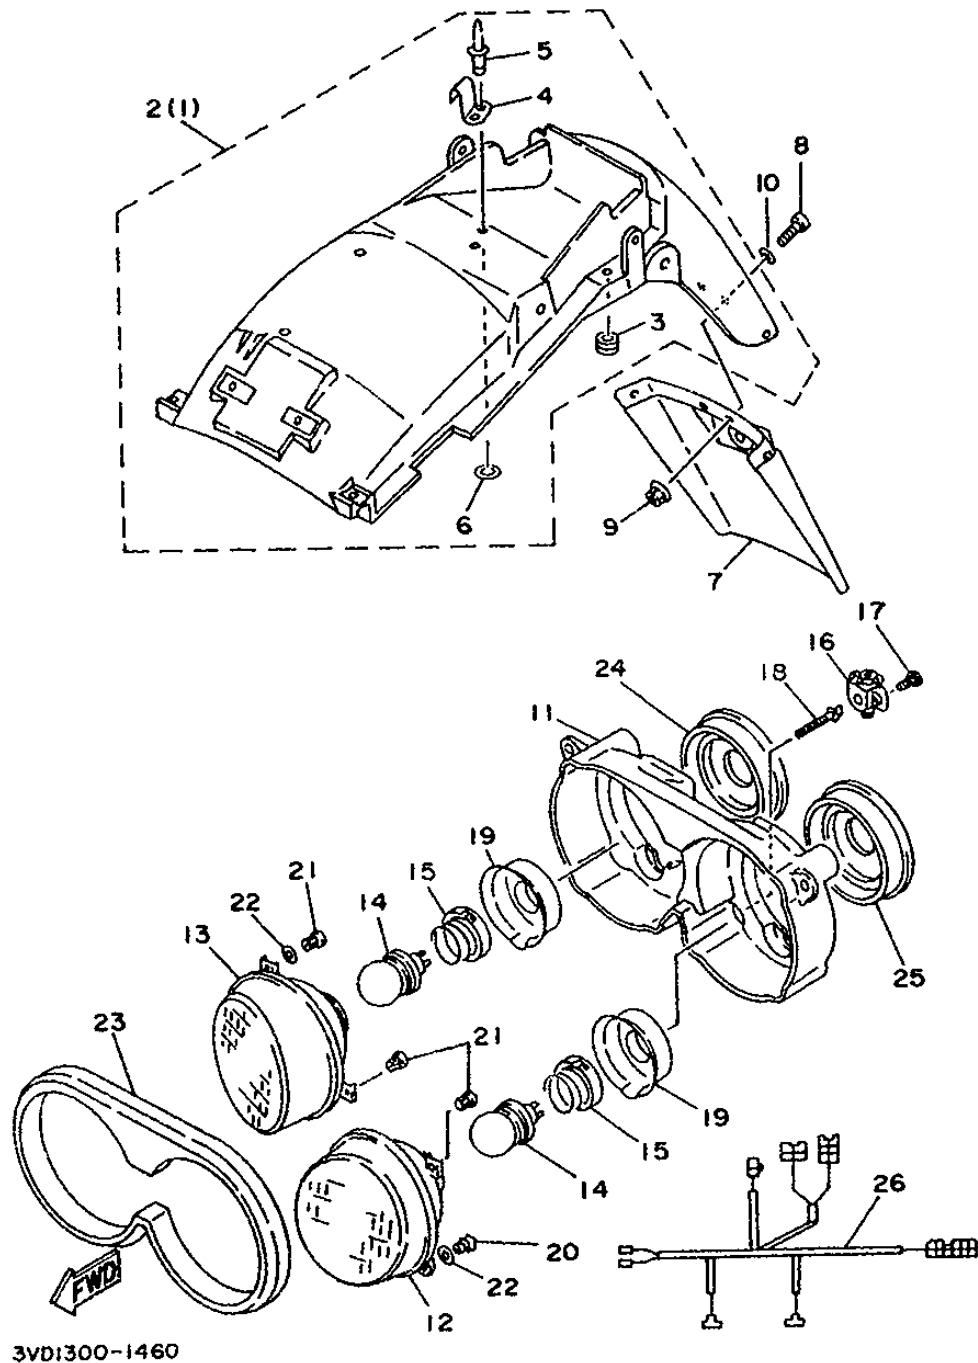


Ref No	Part No	Description
01	3VD-Y2161-00-00	Fender, Rear
02	3VD-Y2161-60-00	Rear Fender C0mp.
03	90480-10258-00	. . Grommet
04	3VD-21366-00-00	. . Hook, Tool Band
05	90267-40073-00	. . Rivet, Blind
06	92990-04200-00	. . Washer, Plain
07	3LD-21621-01-00	Flap
08	90149-04278-00	Screw
09	95606-04100-00	Nut, U
10	90201-047A2-00	Washer, Plate
11	3VD-84330-00-00	Body Assy
12	3VD-84320-20-00	Lens Assy
13	3VD-8432A-40-00	Lens Assy
15	341-84393-40-00	Holder, Bulb
16	3MA-8430M-00-00	Gear Unit Assy
17	97706-40616-00	Screw, Tapping
18	2AX-84331-00-00	Screw, Rim Adjusting
19	46X-84396-00-00	Cover
20	3AJ-8431U-00-00	Holder
21	51L-84334-00-00	Nut, Adjusting
22	3GM-84344-00-00	Washer, Plain
23	3HE-84366-00-00	Damper, Headlight 1
24	2LA-84397-00-00	Cover, Socket
25	2LA-84397-10-00	Cover, Socket
26	3VD-84359-00-00	Cord, Headlight

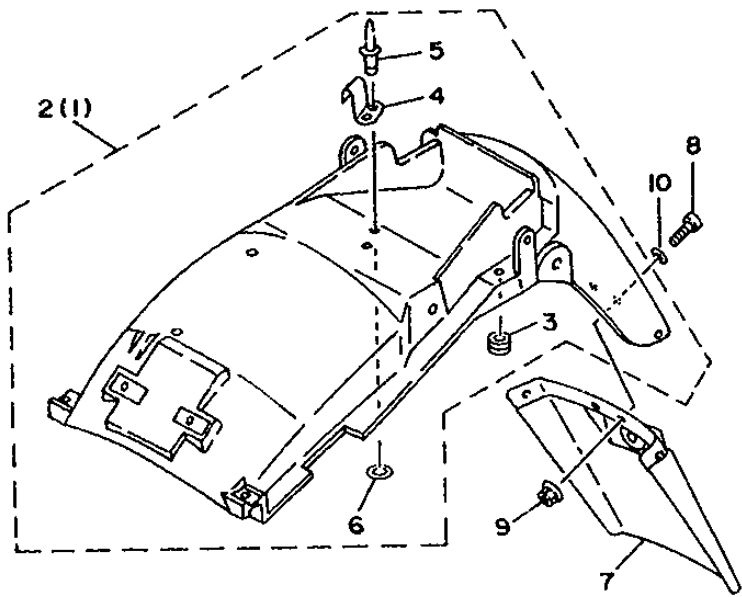

Ref No	Part No	Description
01	3VD-W2161-00-00	Rear Fender Comp.
02	3VD-Y2161-60-00	Rear Fender C0mp.
03	90480-10258-00	. . Grommet
04	3VD-21366-00-00	. . Hook, Tool Band
05	90267-40073-00	. . Rivet, Blind
06	92990-04200-00	. . Washer, Plain
07	3LD-21621-01-00	Flap
08	90149-04278-00	Screw
09	95606-04100-00	Nut, U
10	90201-047A2-00	Washer, Plate
11	3VD-84330-00-00	Body Assy
12	3VD-84320-20-00	Lens Assy
13	3VD-8432A-20-00	Lens Assy
15	341-84393-40-00	Holder, Bulb
16	3MA-8430M-00-00	Gear Unit Assy
17	97706-40616-00	Screw, Tapping
18	2AX-84331-00-00	Screw, Rim Adjusting
19	46X-84396-00-00	Cover
20	3AJ-8431U-00-00	Holder
21	51L-84334-00-00	Nut, Adjusting
22	3GM-84344-00-00	Washer, Plain
23	3HE-84366-00-00	Damper, Headlight 1
24	2LA-84397-00-00	Cover, Socket
25	2LA-84397-10-00	Cover, Socket
26	3VD-84359-10-00	Cord, Headlight

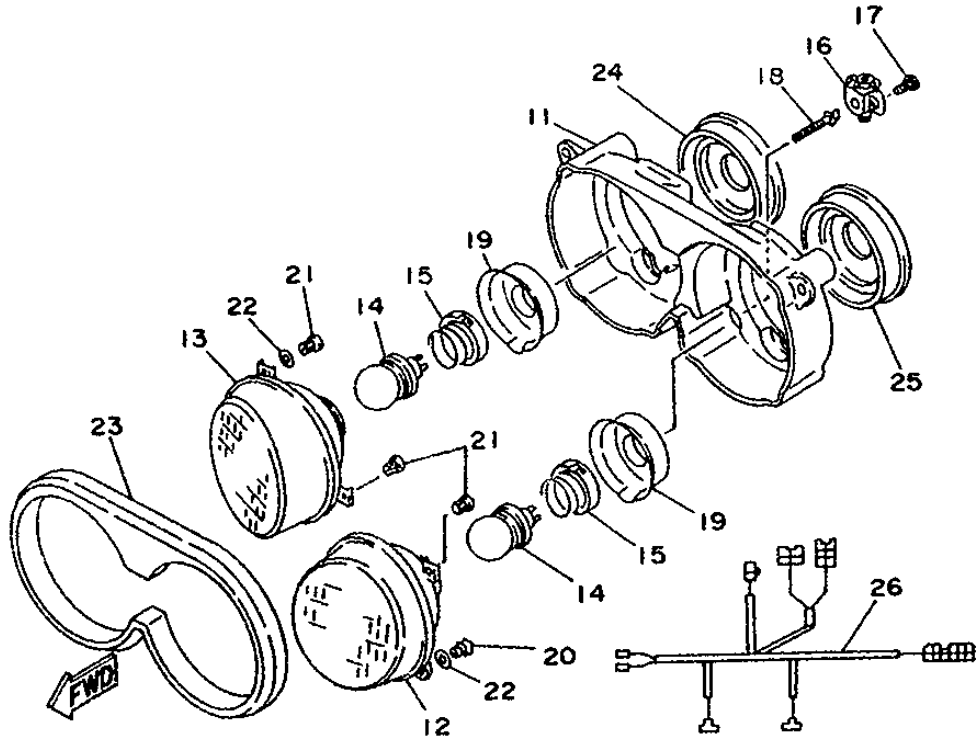


3VD1300-1460

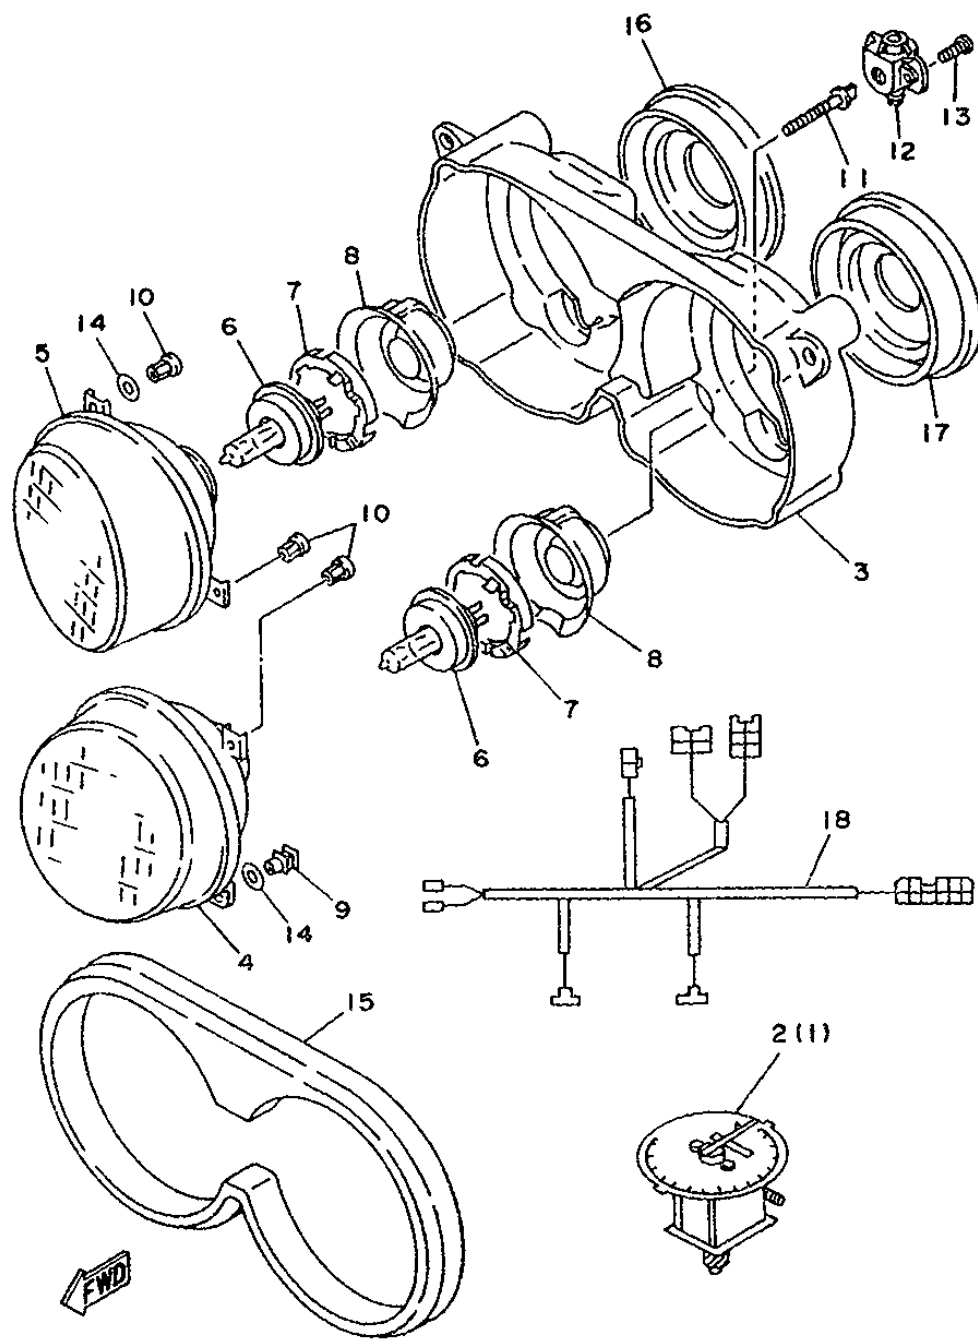


3VD1300-1480

Ref No	Part No	Description
01	3VD-83570-00-00	Speedometer Assy
02	3VD-83570-10-00	Speedometer Assy
03	3VD-84330-00-00	Body Assy
04	3VD-84320-50-00	Lens Assy
05	3VD-8432A-50-00	Lens Assy
06	1FM-84314-H0-00	Bulb (12v-35/35w)
07	2F9-84375-00-00	Setting Plate, Bulb
08	2F9-84397-01-00	Cover, Socket
09	3AJ-8431U-00-00	Holder
10	51L-84334-00-00	Nut, Adjusting
11	2AX-84331-00-00	Screw, Rim Adjusting
12	3MA-8430M-00-00	Gear Unit Assy
13	97706-40616-00	Screw, Tapping
14	3GM-84344-00-00	Washer, Plain
15	3HE-84366-00-00	Damper, Headlight 1
16	2LA-84397-00-00	Cover, Socket
17	2LA-84397-10-00	Cover, Socket
18	3VD-84359-10-00	Cord, Headlight

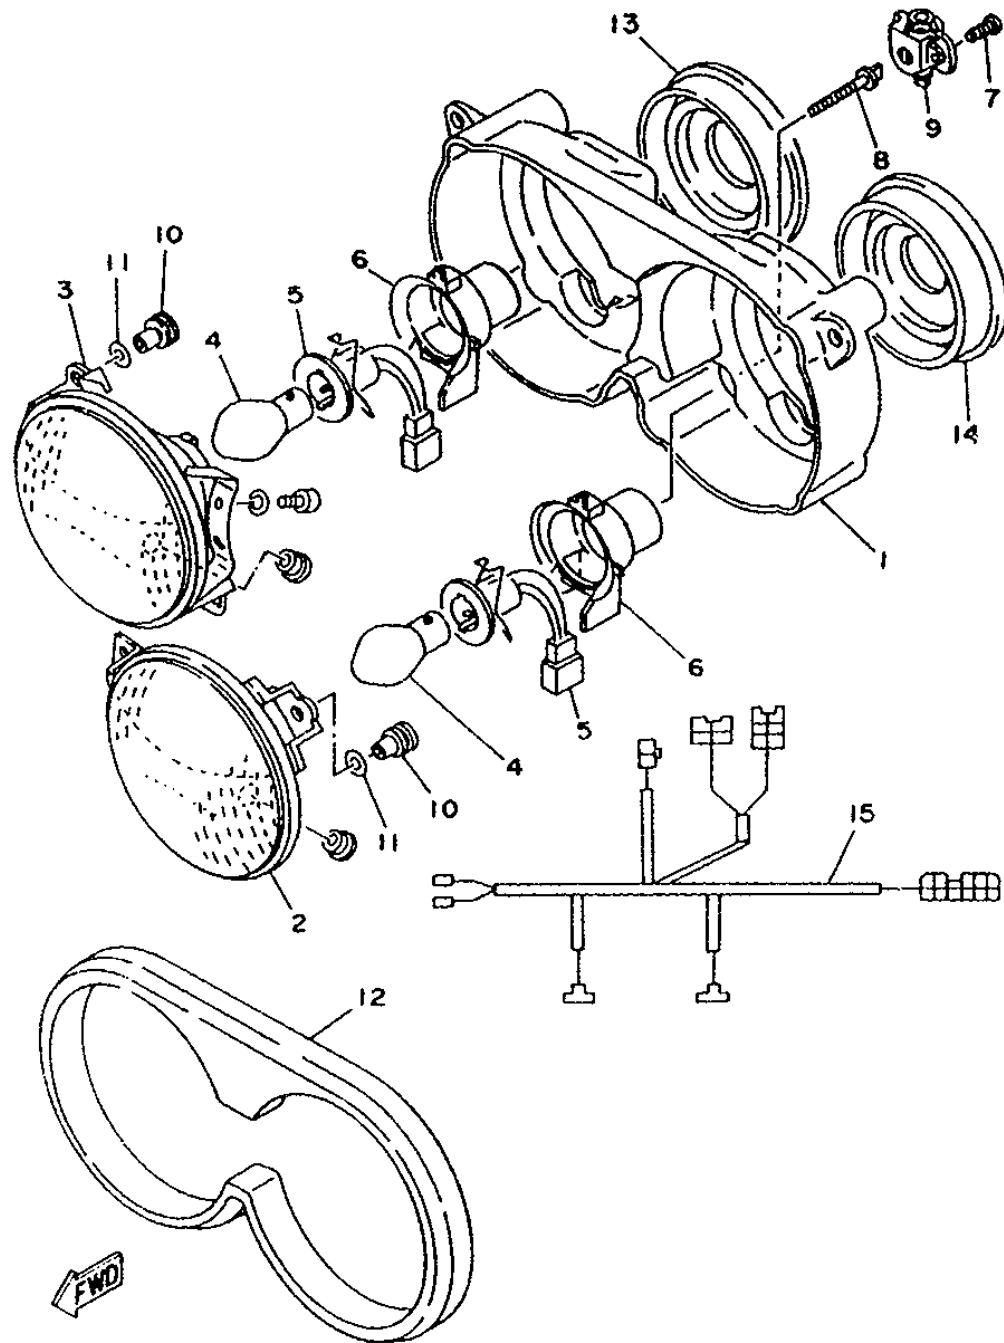


3VD1300-1490


Ref No	Part No	Description
01	3VD-84330-60-00	Body Assy
02	2GH-84320-00-00	Lens Assy
03	2GH-8432A-00-00	Lens Assy
05	14A-84112-40-00	Socket Assy
06	5Y8-84397-00-00	Cover, Socket
07	97706-40616-00	Screw, Tapping
08	2AX-84331-00-00	Screw, Rim Adjusting
09	3MA-8430M-00-00	Gear Unit Assy
10	3AJ-8431U-00-00	Holder
11	3GM-84344-00-00	Washer, Plain
12	3HE-84366-00-00	Damper, Headlight 1
13	2LA-84397-00-00	Cover, Socket
14	2LA-84397-10-00	Cover, Socket
15	3VD-84359-20-00	Cord, Headlight

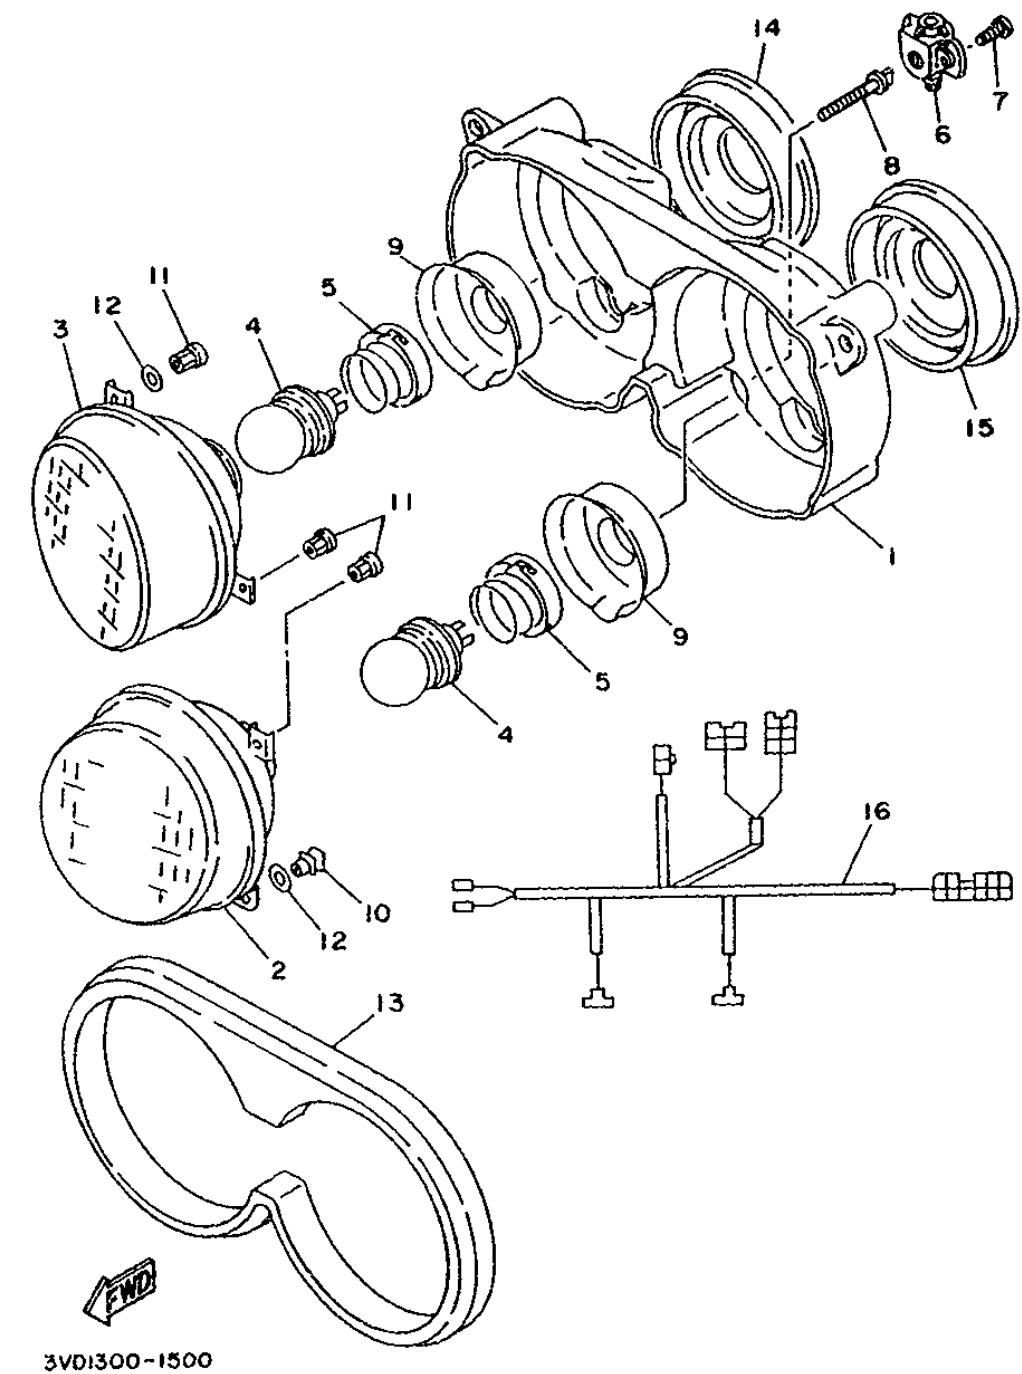


Ref No	Part No	Description
01	3VD-84330-00-00	Body Assy
02	3VD-84320-20-00	Lens Assy
03	3VD-8432A-30-00	Lens Assy
05	341-84393-40-00	Holder, Bulb
06	3MA-8430M-00-00	Gear Unit Assy
07	97706-40616-00	Screw, Tapping
08	2AX-84331-00-00	Screw, Rim Adjusting
09	46X-84396-00-00	Cover
10	3AJ-8431U-00-00	Holder
11	51L-84334-00-00	Nut, Adjusting
12	3GM-84344-00-00	Washer, Plain
13	3HE-84366-00-00	Damper, Headlight 1
14	2LA-84397-00-00	Cover, Socket
15	2LA-84397-10-00	Cover, Socket
16	3VD-84369-00-00	Cord, Headlight

Ref No	Part No	Description
01	3TD-13597-00-00	Joint Carbutor
02	4CN-14900-00-00	Carburetor Assy
03	4CN-14901-00-00	• . Carburetor Assy 1
04	4CN-14902-00-00	• . Carburetor Assy 2
05	4CN-1490J-00-00	•• .. Needle Set
06	4CM-14148-00-00	Pipe
07	3VD-Y2161-60-00	Rear Fender C0mp.
08	90480-10258-00	• . Grommet
09	3VD-21366-00-00	• . Hook, Tool Band
10	90267-40073-00	• . Rivet, Blind
11	92990-04200-00	• . Washer, Plain
12	3LD-21621-01-00	Flap
13	90149-04278-00	Screw
14	95606-04100-00	Nut, U
15	90201-047A2-00	Washer, Plate

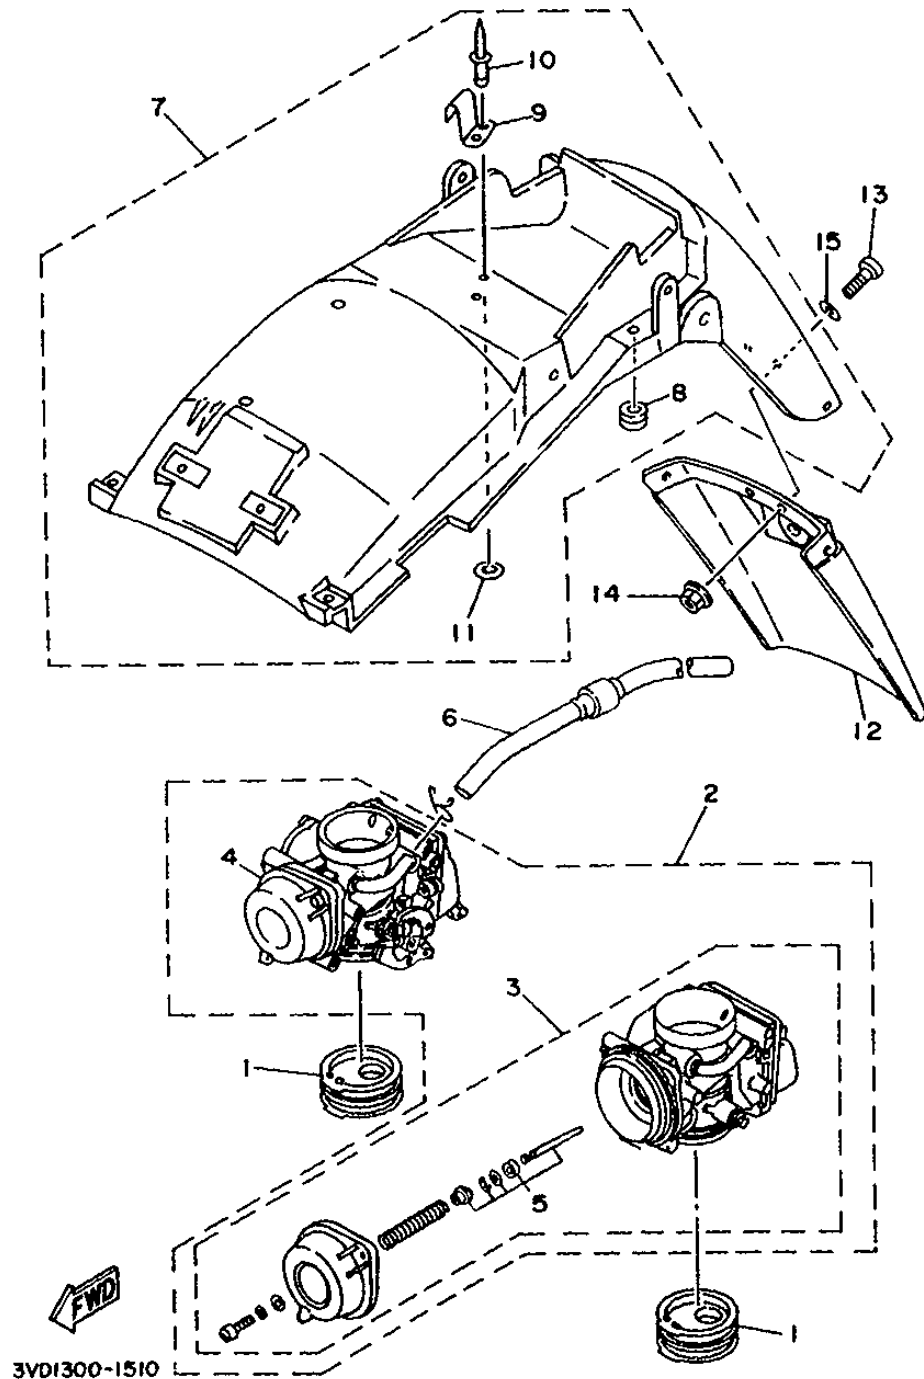

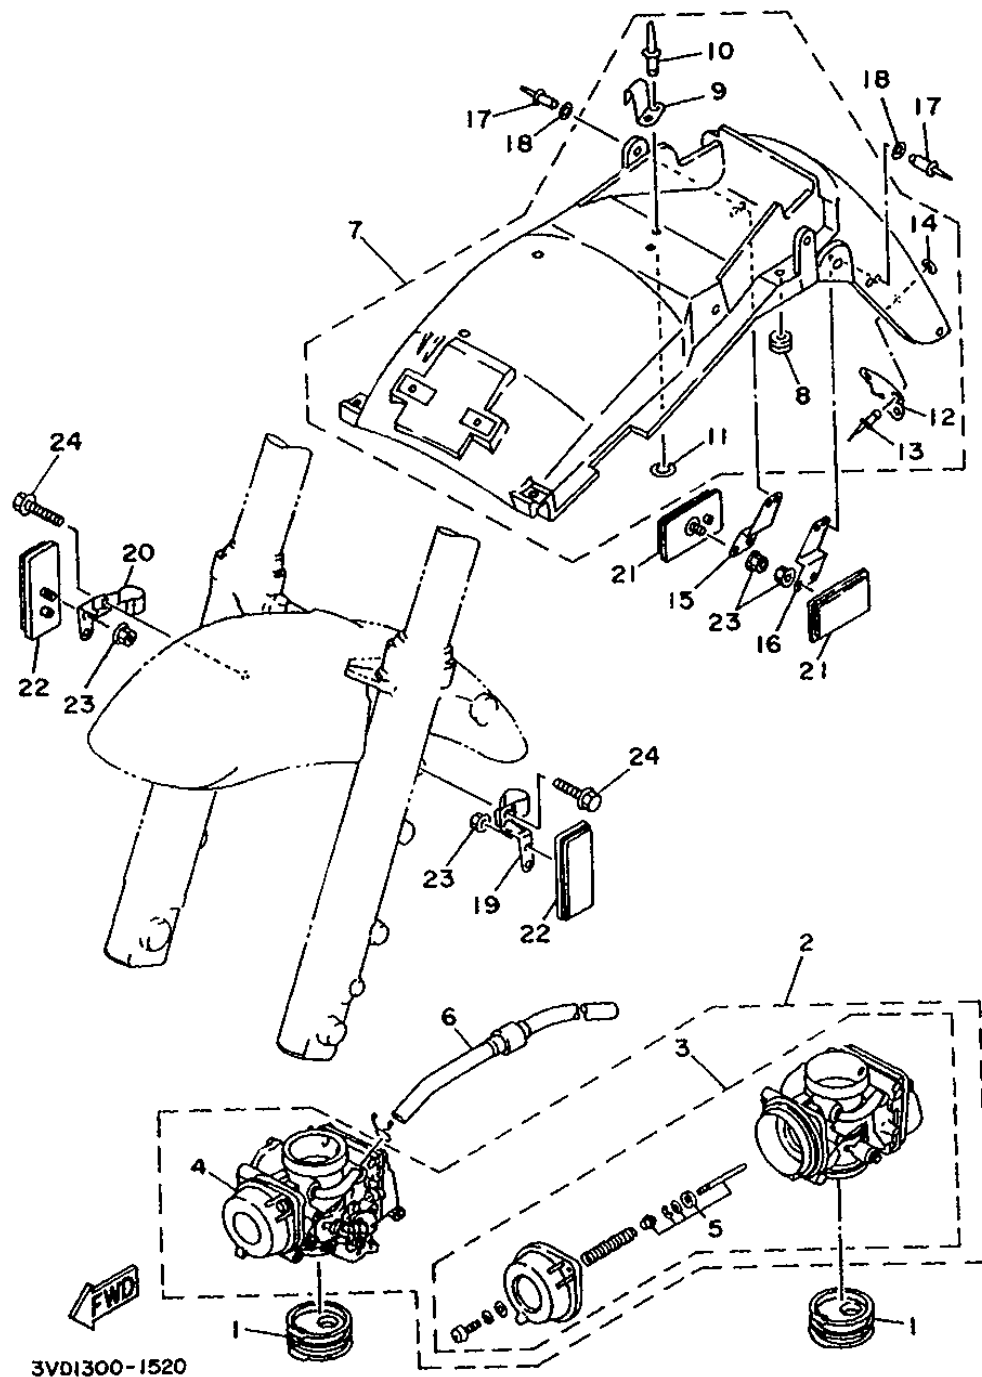

Ref No	Part No	Description
01	3TD-13597-00-00	Joint Carbutor
02	4CN-14900-00-00	Carburetor Assy
03	4CN-14901-00-00	• . Carburetor Assy 1
04	4CN-14902-00-00	• . Carburetor Assy 2
05	4CN-1490J-00-00	•• ... Needle Set
06	4CM-14148-00-00	Pipe
07	3VD-Y2161-50-00	Rear Fender C0mp.
08	90480-10258-00	• . Grommet
09	3VD-21366-00-00	• . Hook, Tool Band
10	90267-40073-00	• . Rivet, Blind
11	92990-04200-00	• . Washer, Plain
12	3HE-85132-00-00	• . Bracket, Reflector 1
13	90267-40076-00	• . Rivet, Blind
14	90201-044A2-00	• . Washer, Plate
15	2LJ-21688-00-00	Bracket, Rear Stay
16	2LJ-21689-00-00	Bracket, Rear Stay 2
17	90267-40076-00	Rivet, Blind
18	90201-044A2-00	Washer, Plate
19	3VD-25876-00-00	Holder, Brake Hose 2
20	3VD-25886-00-00	Holder, Brake Hose
21	23V-85110-00-00	Rear Reflector Assy
22	11H-85110-01-00	Front Reflector Assy
23	95701-05500-00	Nut, Flange
24	95021-06016-00	Bolt, Flange

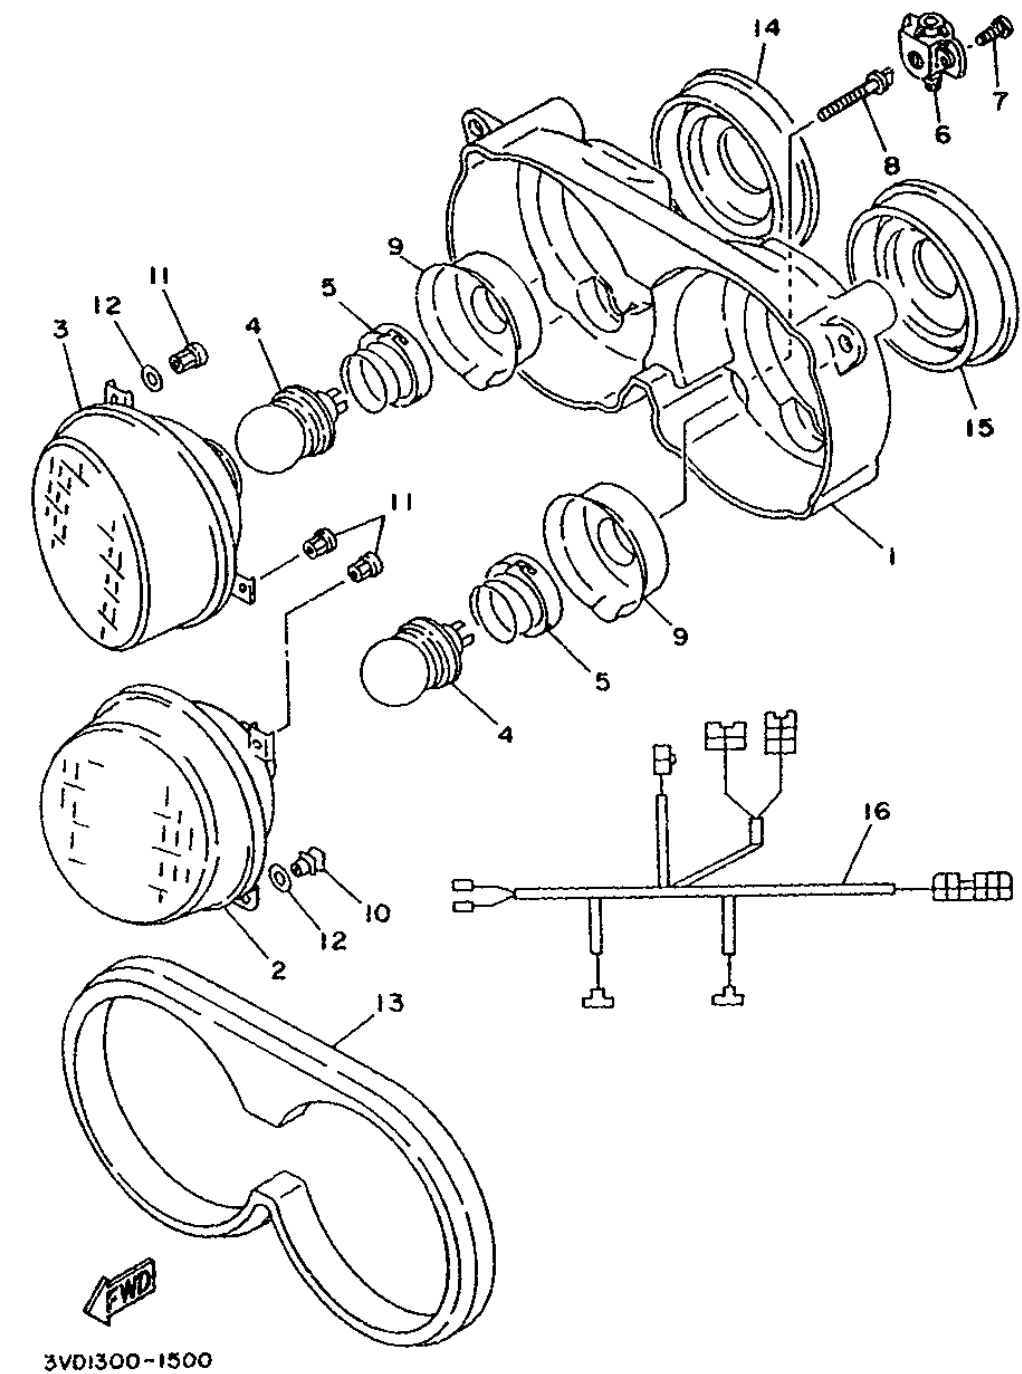

Ref No	Part No	Description
01	3VD-84330-00-00	Body Assy
02	3VD-84320-20-00	Lens Assy
03	3VD-8432A-40-00	Lens Assy
05	341-84393-40-00	Holder, Bulb
06	3MA-8430M-00-00	Gear Unit Assy
07	97706-40616-00	Screw, Tapping
08	2AX-84331-00-00	Screw, Rim Adjusting
09	46X-84396-00-00	Cover
10	3AJ-8431U-00-00	Holder
11	51L-84334-00-00	Nut, Adjusting
12	3GM-84344-00-00	Washer, Plain
13	3HE-84366-00-00	Damper, Headlight 1
14	2LA-84397-00-00	Cover, Socket
15	2LA-84397-10-00	Cover, Socket
16	3VD-84359-00-00	Cord, Headlight